

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
IGNITION WIRE	BLACK/YELLOW	Ignition harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE	BLUE/BLACK	Ignition harness
POWER DOOR LOCK (-)	BLUE/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Passenger Kick Panel
PARKING LIGHTS (-)	GREEN/ORANGE	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	RED/YELLOW OR RED/WHITE	Harness In Passenger Kick Panel
TACHOMETER	BLACK	Connector In Left Front Corner Of The Engine Compartment
BRAKE WIRE (+)	GREEN/WHITE	Harness In Passenger Kick Panel
HORN TRIGGER (-)	GREEN/RED	Harness In Passenger Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED	At Switch In Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	At Switch In Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"			

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1398	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
IGNITION WIRE	BLACK/YELLOW	Ignition harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE	BLUE/BLACK	Ignition harness
POWER DOOR LOCK (-)	BLUE/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Passenger Kick Panel
PARKING LIGHTS (-)	GREEN/ORANGE	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	RED/YELLOW OR RED/WHITE	Harness In Passenger Kick Panel
TACHOMETER	BLACK	Connector In Left Front Corner Of The Engine Compartment
BRAKE WIRE (+)	GREEN/WHITE	Harness In Passenger Kick Panel
HORN TRIGGER (-)	GREEN/RED	Harness In Passenger Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED	At Switch In Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	At Switch In Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"			

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1398	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
IGNITION WIRE	BLACK/YELLOW	Ignition harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE	BLUE/BLACK	Ignition harness
POWER DOOR LOCK (-)	BLUE/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Passenger Kick Panel
PARKING LIGHTS (-)	GREEN/ORANGE	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	RED/YELLOW OR RED/WHITE	Harness In Passenger Kick Panel
TACHOMETER	BLACK	Connector In Left Front Corner Of The Engine Compartment
BRAKE WIRE (+)	GREEN/WHITE	Harness In Passenger Kick Panel
HORN TRIGGER (-)	GREEN/RED	Harness In Passenger Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED	At Switch In Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	At Switch In Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"			

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
IGNITION WIRE	BLACK/YELLOW	Ignition harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE	BLUE/BLACK	Ignition harness
POWER DOOR LOCK (-)	BLUE/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Passenger Kick Panel
PARKING LIGHTS (-)	GREEN/ORANGE	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	RED/YELLOW OR RED/WHITE	Harness In Passenger Kick Panel
TACHOMETER	BLACK	Connector In Left Front Corner Of The Engine Compartment
BRAKE WIRE (+)	GREEN/WHITE	Harness In Passenger Kick Panel
HORN TRIGGER (-)	GREEN/RED	Harness In Passenger Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED	At Switch In Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	At Switch In Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"			

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition harness
STARTER WIRE	BLACK/WHITE	Ignition harness
IGNITION WIRE	BLACK/YELLOW	Ignition harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE	BLUE/BLACK	Ignition harness
POWER DOOR LOCK (-)	BLUE/WHITE	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/RED	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Passenger Kick Panel
PARKING LIGHTS (-)	GREEN/ORANGE	Harness In Passenger Kick Panel
DOOR TRIGGER (-)	RED/YELLOW OR RED/WHITE	Harness In Passenger Kick Panel
TACHOMETER	BLACK	Connector In Left Front Corner Of The Engine Compartment
BRAKE WIRE (+)	GREEN/WHITE	Harness In Passenger Kick Panel
HORN TRIGGER (-)	GREEN/RED	Harness In Passenger Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED	At Switch In Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	At Switch In Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"			

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/RED - WHITE	Ignition Harness
STARTER WIRE	RED	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
POWER DOOR LOCK (-)	BLACK	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	BLACK/YELLOW	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LT.GREEN/RED	Harness At Steering Column
HEADLIGHTS (-)	RED	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	OEM Alarm Behind Passenger "B" Pillar
HOOD TRIGGER	TIED WITH TRUNK PIN	
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	BLACK/WHITE	Connector On Rear Right Of Engine Bay
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3/4" Tweeter	3.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/RED - WHITE	Ignition Harness
STARTER WIRE	RED	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
POWER DOOR LOCK (-)	BLACK	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	BLACK/YELLOW	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LT.GREEN/RED	Harness At Steering Column
HEADLIGHTS (-)	RED	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	OEM Alarm Behind Passenger "B" Pillar
HOOD TRIGGER	TIED WITH TRUNK PIN	
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	BLACK/WHITE	Connector On Rear Right Of Engine Bay
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3/4" Tweeter	3.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from this location
- 2 Remove the shifter console trim plate by carefully releasing the plastic clips
- 3 Remove one screw located below the ignition switch then release the panel clips from this location enough to free the radio trim bezel. Release the panel clips from around the perimeter of the trim bezel. Pull back the bezel, unplug all connectors and rem
- 4 Remove 4 screw securing the radio, unplug, and remove.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: Factory tweeter is a 3/4" tweeter

- 1 Carefully pry of the trim plate backing the side view mirrors. Remove the 2 securing screws, unplug, and remove

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6" speaker.

- 1 Remove the single screw securing the door latch trim piece and remove the trm.
- 2 Remove the dummy cap located at the mid/top inside edge of the panel. Remove the screw from this location
- 3 Pop out the 3 cover panels from the bottom edge of the door pocket then remove the screw from behind each panel.
- 4 Remove the spring clip from the window crank handle and remove the handle.
- 5 Pull out the door pull cup
- 6 Carefully release the door panel fasteners from around the speaker area and along the outside edge of the panel and remove the panel.
- 7 Remove 3 screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 2" tweeter.

- 1 Remove 3 caps and screw from the pocket lid and remove the assembly
- 2 Release the pop fasteners from the door sill plate and remove the plate
- 3 Remove the rear side panel. 4 pop fasteners secure it around the perimeter and 2 in the pocket cavity
- 4 Remove 3 bolts securing the speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/RED - WHITE	Ignition Harness
STARTER WIRE	RED	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
POWER DOOR LOCK (-)	BLACK	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	BLACK/YELLOW	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LT.GREEN/RED	Harness At Steering Column
HEADLIGHTS (-)	RED	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	OEM Alarm Behind Passenger "B" Pillar
HOOD TRIGGER	TIED WITH TRUNK PIN	
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	BLACK/WHITE	Connector On Rear Right Of Engine Bay
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3/4" Tweeter	3.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from this location
- 2 Remove the shifter console trim plate by carefully releasing the plastic clips
- 3 Remove one screw located below the ignition switch then release the panel clips from this location enough to free the radio trim bezel. Release the panel clips from around the perimeter of the trim bezel. Pull back the bezel, unplug all connectors and rem
- 4 Remove 4 screw securing the radio, unplug, and remove.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: Factory tweeter is a 3/4" tweeter

- 1 Carefully pry of the trim plate backing the side view mirrors. Remove the 2 securing screws, unplug, and remove

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6" speaker.

- 1 Remove the single screw securing the door latch trim piece and remove the trm.
- 2 Remove the dummy cap located at the mid/top inside edge of the panel. Remove the screw from this location
- 3 Pop out the 3 cover panels from the bottom edge of the door pocket then remove the screw from behind each panel.
- 4 Remove the spring clip from the window crank handle and remove the handle.
- 5 Pull out the door pull cup
- 6 Carefully release the door panel fasteners from around the speaker area and along the outside edge of the panel and remove the panel.
- 7 Remove 3 screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 2" tweeter.

- 1 Remove 3 caps and screw from the pocket lid and remove the assembly
- 2 Release the pop fasteners from the door sill plate and remove the plate
- 3 Remove the rear side panel. 4 pop fasteners secure it around the perimeter and 2 in the pocket cavity
- 4 Remove 3 bolts securing the speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/RED - WHITE	Ignition Harness
STARTER WIRE	RED	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
POWER DOOR LOCK (-)	BLACK	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	BLACK/YELLOW	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LT.GREEN/RED	Harness At Steering Column
HEADLIGHTS (-)	RED	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	OEM Alarm Behind Passenger "B" Pillar
HOOD TRIGGER	TIED WITH TRUNK PIN	
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	BLACK/WHITE	Connector On Rear Right Of Engine Bay
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3/4" Tweeter	3.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from this location
- 2 Remove the shifter console trim plate by carefully releasing the plastic clips
- 3 Remove one screw located below the ignition switch then release the panel clips from this location enough to free the radio trim bezel. Release the panel clips from around the perimeter of the trim bezel. Pull back the bezel, unplug all connectors and rem
- 4 Remove 4 screw securing the radio, unplug, and remove.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: Factory tweeter is a 3/4" tweeter

- 1 Carefully pry of the trim plate backing the side view mirrors. Remove the 2 securing screws, unplug, and remove

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6" speaker.

- 1 Remove the single screw securing the door latch trim piece and remove the trm.
- 2 Remove the dummy cap located at the mid/top inside edge of the panel. Remove the screw from this location
- 3 Pop out the 3 cover panels from the bottom edge of the door pocket then remove the screw from behind each panel.
- 4 Remove the spring clip from the window crank handle and remove the handle.
- 5 Pull out the door pull cup
- 6 Carefully release the door panel fasteners from around the speaker area and along the outside edge of the panel and remove the panel.
- 7 Remove 3 screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 2" tweeter.

- 1 Remove 3 caps and screw from the pocket lid and remove the assembly
- 2 Release the pop fasteners from the door sill plate and remove the plate
- 3 Remove the rear side panel. 4 pop fasteners secure it around the perimeter and 2 in the pocket cavity
- 4 Remove 3 bolts securing the speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/RED - WHITE	Ignition Harness
STARTER WIRE	RED	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
POWER DOOR LOCK (-)	BLACK	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	BLACK/YELLOW	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LT.GREEN/RED	Harness At Steering Column
HEADLIGHTS (-)	RED	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	OEM Alarm Behind Passenger "B" Pillar
HOOD TRIGGER	TIED WITH TRUNK PIN	
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	BLACK/WHITE	Connector On Rear Right Of Engine Bay
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3/4" Tweeter	3.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from this location
- 2 Remove the shifter console trim plate by carefully releasing the plastic clips
- 3 Remove one screw located below the ignition switch then release the panel clips from this location enough to free the radio trim bezel. Release the panel clips from around the perimeter of the trim bezel. Pull back the bezel, unplug all connectors and remove
- 4 Remove 4 screw securing the radio, unplug, and remove.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: Factory tweeter is a 3/4" tweeter

- 1 Carefully pry of the trim plate backing the side view mirrors. Remove the 2 securing screws, unplug, and remove

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6" speaker.

- 1 Remove the single screw securing the door latch trim piece and remove the trim.
- 2 Remove the dummy cap located at the mid/top inside edge of the panel. Remove the screw from this location
- 3 Pop out the 3 cover panels from the bottom edge of the door pocket then remove the screw from behind each panel.
- 4 Remove the spring clip from the window crank handle and remove the handle.
- 5 Pull out the door pull cup
- 6 Carefully release the door panel fasteners from around the speaker area and along the outside edge of the panel and remove the panel.
- 7 Remove 3 screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 2" tweeter.

- 1 Remove 3 caps and screw from the pocket lid and remove the assembly
- 2 Release the pop fasteners from the door sill plate and remove the plate
- 3 Remove the rear side panel. 4 pop fasteners secure it around the perimeter and 2 in the pocket cavity
- 4 Remove 3 bolts securing the speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK/RED - WHITE	Ignition Harness
STARTER WIRE	RED	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE	BLUE/RED	Ignition Harness
POWER DOOR LOCK (-)	BLACK	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	BLACK/YELLOW	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LT.GREEN/RED	Harness At Steering Column
HEADLIGHTS (-)	RED	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	OEM Alarm Behind Passenger "B" Pillar
HOOD TRIGGER	TIED WITH TRUNK PIN	
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
TACHOMETER WIRE	BLACK/WHITE	Connector On Rear Right Of Engine Bay
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3/4" Tweeter	3.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from this location
- 2 Remove the shifter console trim plate by carefully releasing the plastic clips
- 3 Remove one screw located below the ignition switch then release the panel clips from this location enough to free the radio trim bezel. Release the panel clips from around the perimeter of the trim bezel. Pull back the bezel, unplug all connectors and rem
- 4 Remove 4 screw securing the radio, unplug, and remove.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: Factory tweeter is a 3/4" tweeter

- 1 Carefully pry of the trim plate backing the side view mirrors. Remove the 2 securing screws, unplug, and remove

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 6" speaker.

- 1 Remove the single screw securing the door latch trim piece and remove the trm.
- 2 Remove the dummy cap located at the mid/top inside edge of the panel. Remove the screw from this location
- 3 Pop out the 3 cover panels from the bottom edge of the door pocket then remove the screw from behind each panel.
- 4 Remove the spring clip from the window crank handle and remove the handle.
- 5 Pull out the door pull cup
- 6 Carefully release the door panel fasteners from around the speaker area and along the outside edge of the panel and remove the panel.
- 7 Remove 3 screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 2" tweeter.

- 1 Remove 3 caps and screw from the pocket lid and remove the assembly
- 2 Release the pop fasteners from the door sill plate and remove the plate
- 3 Remove the rear side panel. 4 pop fasteners secure it around the perimeter and 2 in the pocket cavity
- 4 Remove 3 bolts securing the speaker, unplug and remove.