

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
POWER DOOR LOCK (-)	WHITE/BLUE	At Door Lock Switch In The Center Console
POWER DOOR UNLOCK (-)	YELLOW/RED	At Door Lock Switch In The Center Console
PARKING LIGHTS (+)	GREEN	Harness At Fuse Box
PARKING LIGHTS (-)	WHITE	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
REAR HATCH TRIGGER (-)	RED/WHITE	At Light In Trunk
FACTORY ALARM ARM (-)	BLACK/WHITE	At Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM DISARM (-)	GREEN/RED	At Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE OR GREEN/RED	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5x7"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8130	METRA 70-1398	Not required

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK/YELLOW	Ignition Harness
POWER DOOR LOCK (-)	WHITE/BLUE	At Door Lock Switch In The Center Console
POWER DOOR UNLOCK (-)	YELLOW/RED	At Door Lock Switch In The Center Console
PARKING LIGHTS (+)	GREEN	Harness At Fuse Box
PARKING LIGHTS (-)	WHITE	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
REAR HATCH TRIGGER (-)	RED/WHITE	At Light In Trunk
FACTORY ALARM ARM (-)	BLACK/WHITE	At Harness Coming Into Vehicle From Driver's Door
FACTORY ALARM DISARM (-)	GREEN/RED	At Harness Coming Into Vehicle From Driver's Door
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE OR GREEN/RED	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLUE	Harness At Steering Column
LEFT FRONT WINDOW UP	BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/RED	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5x7"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8100	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
12V ACCESSORY WIRE	PINK/BLUE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
REAR HATCH TRIGGER (-)	YELLOW/BLACK	Harness In Driver's Kick Panel
FACTORY ALARM ARM (-)	BROWN/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM DISARM (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Diagnostic Connector In Front Of Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	5.25"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8100	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from behind which secure trim.
- 2 Remove one screw from left rear of console.
- 3 Remove one screw from lower left corner of radio trim.
- 4 Unsnap trim panel and disconnect wiring harnesses.
- 5 Remove 4 screw securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 4" speaker in a factory enclosure.

- 1 Unsnap and remove speaker grill. Remove 2 screws from beneath
- 2 Remove 2 rubber plugs from door pull and remove 2 screws from behind plugs.
- 3 Remove 2 rubber caps reom front of door and remove 2 screw from these locations.
- 4 Remove 4 screw from bottom edge of door.
- 5 Remove one screw from door latch trim and remove trim.
- 6 Carefully unsnap door panel clips and remove door panel.
- 7 Remove 4 8mm bolts that secure speaker enclosure and remove enclosure.
- 8 Remove screws securing speaker, unplug, and remove

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove roll-up security cover.
- 2 Remove one screw from speaker grill
- 3 Unsnap grill and remove.
- 4 Remove 4 screw securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
12V ACCESSORY WIRE	PINK/BLUE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	PINK	Harness In Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
REAR HATCH TRIGGER (-)	YELLOW/BLACK	Harness In Driver's Kick Panel
FACTORY ALARM ARM (-)	BROWN/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM DISARM (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Diagnostic Connector In Front Of Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	5.25"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8100	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from behind which secure trim.
- 2 Remove one screw from left rear of console.
- 3 Remove one screw from lower left corner of radio trim.
- 4 Unsnap trim panel and disconnect wiring harnesses.
- 5 Remove 4 screw securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 4" speaker in a factory enclosure.

- 1 Unsnap and remove speaker grill. Remove 2 screws from beneath
- 2 Remove 2 rubber plugs from door pull and remove 2 screws from behind plugs.
- 3 Remove 2 rubber caps reom front of door and remove 2 screw from these locations.
- 4 Remove 4 screw from bottom edge of door.
- 5 Remove one screw from door latch trim and remove trim.
- 6 Carefully unsnap door panel clips and remove door panel.
- 7 Remove 4 8mm bolts that secure speaker enclosure and remove enclosure.
- 8 Remove screws securing speaker, unplug, and remove

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove roll-up security cover.
- 2 Remove one screw from speaker grill
- 3 Unsnap grill and remove.
- 4 Remove 4 screw securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
12V ACCESSORY WIRE	PINK/BLUE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	PINK	Harness In Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
REAR HATCH TRIGGER (-)	YELLOW/BLACK	Harness In Driver's Kick Panel
FACTORY ALARM ARM (-)	BROWN/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM DISARM (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Diagnostic Connector In Front Of Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	5.25"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8100	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from behind which secure trim.
- 2 Remove one screw from left rear of console.
- 3 Remove one screw from lower left corner of radio trim.
- 4 Unsnap trim panel and disconnect wiring harnesses.
- 5 Remove 4 screw securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 4" speaker in a factory enclosure.

- 1 Unsnap and remove speaker grill. Remove 2 screws from beneath
- 2 Remove 2 rubber plugs from door pull and remove 2 screws from behind plugs.
- 3 Remove 2 rubber caps reom front of door and remove 2 screw from these locations.
- 4 Remove 4 screw from bottom edge of door.
- 5 Remove one screw from door latch trim and remove trim.
- 6 Carefully unsnap door panel clips and remove door panel.
- 7 Remove 4 8mm bolts that secure speaker enclosure and remove enclosure.
- 8 Remove screws securing speaker, unplug, and remove

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove roll-up security cover.
- 2 Remove one screw from speaker grill
- 3 Unsnap grill and remove.
- 4 Remove 4 screw securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
12V ACCESSORY WIRE	PINK/BLUE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	PINK	Harness In Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
REAR HATCH TRIGGER (-)	YELLOW/BLACK	Harness In Driver's Kick Panel
FACTORY ALARM ARM (-)	BROWN/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM DISARM (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Diagnostic Connector In Front Of Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	5.25"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8100	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from behind which secure trim.
- 2 Remove one screw from left rear of console.
- 3 Remove one screw from lower left corner of radio trim.
- 4 Unsnap trim panel and disconnect wiring harnesses.
- 5 Remove 4 screw securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 4" speaker in a factory enclosure.

- 1 Unsnap and remove speaker grill. Remove 2 screws from beneath
- 2 Remove 2 rubber plugs from door pull and remove 2 screws from behind plugs.
- 3 Remove 2 rubber caps reom front of door and remove 2 screw from these locations.
- 4 Remove 4 screw from bottom edge of door.
- 5 Remove one screw from door latch trim and remove trim.
- 6 Carefully unsnap door panel clips and remove door panel.
- 7 Remove 4 8mm bolts that secure speaker enclosure and remove enclosure.
- 8 Remove screws securing speaker, unplug, and remove

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove roll-up security cover.
- 2 Remove one screw from speaker grill
- 3 Unsnap grill and remove.
- 4 Remove 4 screw securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
12V ACCESSORY WIRE	PINK/BLUE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	PINK	Harness In Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
REAR HATCH TRIGGER (-)	YELLOW/BLACK	Harness In Driver's Kick Panel
FACTORY ALARM ARM (-)	BROWN/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM DISARM (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Diagnostic Connector In Front Of Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	5.25"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8100	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from behind which secure trim.
- 2 Remove one screw from left rear of console.
- 3 Remove one screw from lower left corner of radio trim.
- 4 Unsnap trim panel and disconnect wiring harnesses.
- 5 Remove 4 screw securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 4" speaker in a factory enclosure.

- 1 Unsnap and remove speaker grill. Remove 2 screws from beneath
- 2 Remove 2 rubber plugs from door pull and remove 2 screws from behind plugs.
- 3 Remove 2 rubber caps reom front of door and remove 2 screw from these locations.
- 4 Remove 4 screw from bottom edge of door.
- 5 Remove one screw from door latch trim and remove trim.
- 6 Carefully unsnap door panel clips and remove door panel.
- 7 Remove 4 8mm bolts that secure speaker enclosure and remove enclosure.
- 8 Remove screws securing speaker, unplug, and remove

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove roll-up security cover.
- 2 Remove one screw from speaker grill
- 3 Unsnap grill and remove.
- 4 Remove 4 screw securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
12V ACCESSORY WIRE	PINK/BLUE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	PINK	Harness In Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
REAR HATCH TRIGGER (-)	YELLOW/BLACK	Harness In Driver's Kick Panel
FACTORY ALARM ARM (-)	BROWN/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM DISARM (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Diagnostic Connector In Front Of Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	5.25"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8100	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Remove ashtray and remove 2 screws from behind which secure trim.
- 2 Remove one screw from left rear of console.
- 3 Remove one screw from lower left corner of radio trim.
- 4 Unsnap trim panel and disconnect wiring harnesses.
- 5 Remove 4 screw securing radio, unplug, and remove.

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 4" speaker in a factory enclosure.

- 1 Unsnap and remove speaker grill. Remove 2 screws from beneath
- 2 Remove 2 rubber plugs from door pull and remove 2 screws from behind plugs.
- 3 Remove 2 rubber caps reom front of door and remove 2 screw from these locations.
- 4 Remove 4 screw from bottom edge of door.
- 5 Remove one screw from door latch trim and remove trim.
- 6 Carefully unsnap door panel clips and remove door panel.
- 7 Remove 4 8mm bolts that secure speaker enclosure and remove enclosure.
- 8 Remove screws securing speaker, unplug, and remove

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove roll-up security cover.
- 2 Remove one screw from speaker grill
- 3 Unsnap grill and remove.
- 4 Remove 4 screw securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED or WHITE	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/ORANGE	Ignition Harness
12V ACCESSORY WIRE	PINK/BLUE	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	PINK	Harness In Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
REAR HATCH TRIGGER (-)	YELLOW/BLACK	Harness In Driver's Kick Panel
FACTORY ALARM ARM (-)	BROWN/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM DISARM (-)	PURPLE/YELLOW	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Diagnostic Connector In Front Of Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25", 2"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: Factory provision is for a ISO mount double-DIN

- 1 Remove 5 screws from the panel above the instrument trim panel, unplug, and remove.
- 2 With a panel removal tool, remove trim around shifter.
- 3 Remove screw on the top right corner of the instrument/radio bezel securing it to the dash.
- 4 Using a panel removal tool, release the clips around the perimeter of the dash bezel and remove.
- 5 Carefully pry out on top corner of speedometer trim to release radio trim, unplug, and remove.
- 6 Remove 4 screws securing radio to dash, unplug, and remove.

NOTE: If the vehicle is equipped with a factory amplifier, it is located under the passenger seat.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: The factory speaker is a 2" tweeter on the top front corners of the dash. It is not recommended to replace the factory dash speakers because of the extreme disassembly required to access them.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 5" speaker mounted in a factory enclosure. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 4 screws along the bottom of the door panel.
- 2 Remove 2 screw caps from the front edge of the door panel and remove the screws behind.
- 3 Remove one plastic clip from the front edge of the door panel.
- 4 Remove one screw from the trim ring around the door pull handle and remove trim ring.
- 5 Remove one screw from the upper front corner of the cavity.
- 6 Remove screw cap from the armrest and remove the screw behind.
- 7 Remove 3 plastic clips from the rear edge of the door panel.
- 8 Pull upward and out to remove the door panel.
- 9 Remove 3 screws to remove speaker from enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Carefully pry on grill to remove.
- 2 Remove 4 screws securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	GREEN	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	WHITE	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
PARKING LIGHTS (-)	GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/BLACK	Harness In Drivers Kick Panel
REAR HATCH TRIGGER (-)		Tied In With Doors
HOOD TRIGGER (-)	PURPLE/RED	High In Passenger Kick
FACTORY ALARM ARM	Arms With Lock	
FACTORY ALARM DISARM	Disarms With Unlock	
FACTORY DISARM NO UNLOCK (-)	WHITE or GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK (Non-turbo models) BLACK/WHITE (Turbo models)	At Igniter On Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25", 2"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a ISO mount double-DIN

- 1 Remove 5 screws from the panel above the instrument trim panel, unplug, and remove.
- 2 With a panel removal tool, remove trim around shifter.
- 3 Remove screw on the top right corner of the instrument/radio bezel securing it to the dash.
- 4 Using a panel removal tool, release the clips around the perimeter of the dash bezel and remove.
- 5 Carefully pry out on top corner of speedometer trim to release radio trim, unplug, and remove.
- 6 Remove 4 screws securing radio to dash, unplug, and remove.

NOTE: If the vehicle is equipped with a factory amplifier, it is located under the passenger seat.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: The factory speaker is a 2" tweeter on the top front corners of the dash. It is not recommended to replace the factory dash speakers because of the extreme disassembly required to access them.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 5" speaker mounted in a factory enclosure. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 4 screws along the bottom of the door panel.
- 2 Remove 2 screw caps from the front edge of the door panel and remove the screws behind.
- 3 Remove one plastic clip from the front edge of the door panel.
- 4 Remove one screw from the trim ring around the door pull handle and remove trim ring.
- 5 Remove one screw from the upper front corner of the cavity.
- 6 Remove screw cap from the armrest and remove the screw behind.
- 7 Remove 3 plastic clips from the rear edge of the door panel.
- 8 Pull upward and out to remove the door panel.
- 9 Remove 3 screws to remove speaker from enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Carefully pry on grill to remove.
- 2 Remove 4 screws securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	GREEN	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	WHITE	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
PARKING LIGHTS (-)	GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/BLACK	Harness In Drivers Kick Panel
REAR HATCH TRIGGER (-)		Tied In With Doors
HOOD TRIGGER (-)	PURPLE/RED	High In Passenger Kick
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	WHITE or GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK (Non-turbo models) BLACK/WHITE (Turbo models)	At Igniter On Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25", 2"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a ISO mount double-DIN

- 1 Remove 5 screws from the panel above the instrument trim panel, unplug, and remove.
- 2 With a panel removal tool, remove trim around shifter.
- 3 Remove screw on the top right corner of the instrument/radio bezel securing it to the dash.
- 4 Using a panel removal tool, release the clips around the perimeter of the dash bezel and remove.
- 5 Carefully pry out on top corner of speedometer trim to release radio trim, unplug, and remove.
- 6 Remove 4 screws securing radio to dash, unplug, and remove.

NOTE: If the vehicle is equipped with a factory amplifier, it is located under the passenger seat.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: The factory speaker is a 2" tweeter on the top front corners of the dash. It is not recommended to replace the factory dash speakers because of the extreme disassembly required to access them.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 5" speaker mounted in a factory enclosure. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 4 screws along the bottom of the door panel.
- 2 Remove 2 screw caps from the front edge of the door panel and remove the screws behind.
- 3 Remove one plastic clip from the front edge of the door panel.
- 4 Remove one screw from the trim ring around the door pull handle and remove trim ring.
- 5 Remove one screw from the upper front corner of the cavity.
- 6 Remove screw cap from the armrest and remove the screw behind.
- 7 Remove 3 plastic clips from the rear edge of the door panel.
- 8 Pull upward and out to remove the door panel.
- 9 Remove 3 screws to remove speaker from enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Carefully pry on grill to remove.
- 2 Remove 4 screws securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	GREEN	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	WHITE	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
PARKING LIGHTS (-)	GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/BLACK	Harness In Drivers Kick Panel
REAR HATCH TRIGGER (-)		Tied In With Doors
HOOD TRIGGER (-)	PURPLE/RED	High In Passenger Kick
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	WHITE or GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK (Non-turbo models) BLACK/WHITE (Turbo models)	At Igniter On Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25", 2"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a ISO mount double-DIN

- 1 Remove 5 screws from the panel above the instrument trim panel, unplug, and remove.
- 2 With a panel removal tool, remove trim around shifter.
- 3 Remove screw on the top right corner of the instrument/radio bezel securing it to the dash.
- 4 Using a panel removal tool, release the clips around the perimeter of the dash bezel and remove.
- 5 Carefully pry out on top corner of speedometer trim to release radio trim, unplug, and remove.
- 6 Remove 4 screws securing radio to dash, unplug, and remove.

NOTE: If the vehicle is equipped with a factory amplifier, it is located under the passenger seat.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: The factory speaker is a 2" tweeter on the top front corners of the dash. It is not recommended to replace the factory dash speakers because of the extreme disassembly required to access them.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 5" speaker mounted in a factory enclosure. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 4 screws along the bottom of the door panel.
- 2 Remove 2 screw caps from the front edge of the door panel and remove the screws behind.
- 3 Remove one plastic clip from the front edge of the door panel.
- 4 Remove one screw from the trim ring around the door pull handle and remove trim ring.
- 5 Remove one screw from the upper front corner of the cavity.
- 6 Remove screw cap from the armrest and remove the screw behind.
- 7 Remove 3 plastic clips from the rear edge of the door panel.
- 8 Pull upward and out to remove the door panel.
- 9 Remove 3 screws to remove speaker from enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Carefully pry on grill to remove.
- 2 Remove 4 screws securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	GREEN	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	WHITE	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
PARKING LIGHTS (-)	GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/BLACK	Harness In Drivers Kick Panel
REAR HATCH TRIGGER (-)		Tied In With Doors
HOOD TRIGGER (-)	PURPLE/RED	High In Passenger Kick
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	WHITE or GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK (Non-turbo models) BLACK/WHITE (Turbo models)	At Igniter On Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25", 2"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a ISO mount double-DIN

- 1 Remove 5 screws from the panel above the instrument trim panel, unplug, and remove.
- 2 With a panel removal tool, remove trim around shifter.
- 3 Remove screw on the top right corner of the instrument/radio bezel securing it to the dash.
- 4 Using a panel removal tool, release the clips around the perimeter of the dash bezel and remove.
- 5 Carefully pry out on top corner of speedometer trim to release radio trim, unplug, and remove.
- 6 Remove 4 screws securing radio to dash, unplug, and remove.

NOTE: If the vehicle is equipped with a factory amplifier, it is located under the passenger seat.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: The factory speaker is a 2" tweeter on the top front corners of the dash. It is not recommended to replace the factory dash speakers because of the extreme disassembly required to access them.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 5" speaker mounted in a factory enclosure. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 4 screws along the bottom of the door panel.
- 2 Remove 2 screw caps from the front edge of the door panel and remove the screws behind.
- 3 Remove one plastic clip from the front edge of the door panel.
- 4 Remove one screw from the trim ring around the door pull handle and remove trim ring.
- 5 Remove one screw from the upper front corner of the cavity.
- 6 Remove screw cap from the armrest and remove the screw behind.
- 7 Remove 3 plastic clips from the rear edge of the door panel.
- 8 Pull upward and out to remove the door panel.
- 9 Remove 3 screws to remove speaker from enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Carefully pry on grill to remove.
- 2 Remove 4 screws securing speaker, unplug and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
12V IGNITION WIRE	BLACK/YELLOW	Ignition Harness
SECOND IGNITION WIRE	BLACK/WHITE	Ignition Harness
12V ACCESSORY WIRE	GREEN	Ignition Harness
POWER DOOR LOCK (-)	GREEN/YELLOW	Harness In Passenger Kick Panel
POWER DOOR UNLOCK (-)	WHITE	Harness In Passenger Kick Panel
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
PARKING LIGHTS (-)	GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/BLACK	Harness In Drivers Kick Panel
REAR HATCH TRIGGER (-)		Tied In With Doors
HOOD TRIGGER (-)	PURPLE/RED	High In Passenger Kick
FACTORY ALARM ARM		Arms With Lock
FACTORY ALARM DISARM		Disarms With Unlock
FACTORY DISARM NO UNLOCK (-)	WHITE or GREEN	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK (Non-turbo models) BLACK/WHITE (Turbo models)	At Igniter On Driver's Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	BLUE/RED	Harness At Steering Column
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25", 2"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 88-00-9000	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

NOTE: Factory provision is for a ISO mount double-DIN

- 1 Remove 5 screws from the panel above the instrument trim panel, unplug, and remove.
- 2 With a panel removal tool, remove trim around shifter.
- 3 Remove screw on the top right corner of the instrument/radio bezel securing it to the dash.
- 4 Using a panel removal tool, release the clips around the perimeter of the dash bezel and remove.
- 5 Carefully pry out on top corner of speedometer trim to release radio trim, unplug, and remove.
- 6 Remove 4 screws securing radio to dash, unplug, and remove.

NOTE: If the vehicle is equipped with a factory amplifier, it is located under the passenger seat.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE: The factory speaker is a 2" tweeter on the top front corners of the dash. It is not recommended to replace the factory dash speakers because of the extreme disassembly required to access them.

DOOR PANEL REMOVAL

NOTE: The factory speaker is a 5" speaker mounted in a factory enclosure. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 4 screws along the bottom of the door panel.
- 2 Remove 2 screw caps from the front edge of the door panel and remove the screws behind.
- 3 Remove one plastic clip from the front edge of the door panel.
- 4 Remove one screw from the trim ring around the door pull handle and remove trim ring.
- 5 Remove one screw from the upper front corner of the cavity.
- 6 Remove screw cap from the armrest and remove the screw behind.
- 7 Remove 3 plastic clips from the rear edge of the door panel.
- 8 Pull upward and out to remove the door panel.
- 9 Remove 3 screws to remove speaker from enclosure, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Carefully pry on grill to remove.
- 2 Remove 4 screws securing speaker, unplug and remove.