


PARKING LIGHT WIRE (RELAY ISOLATING WITH RESISTANCE)

- On vehicles with a negative trigger parking light wire with resistance to ground that must be relay isolated, use a relay to isolate the parking light wire from the switch. Wire as shown:

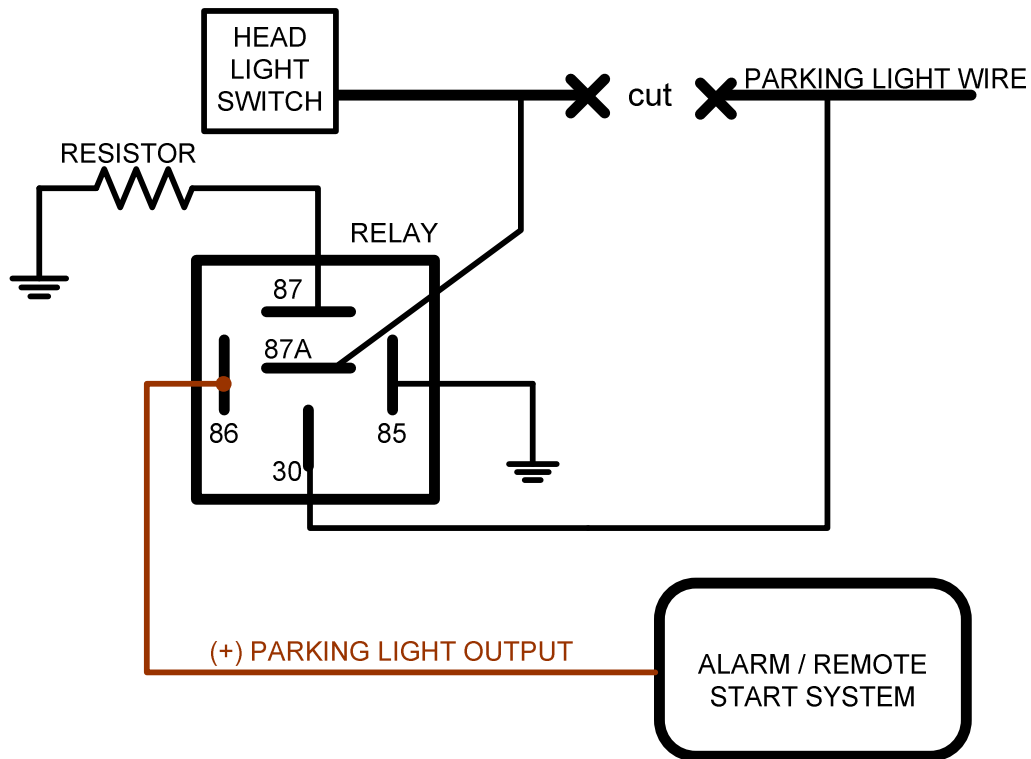

PIN	CONNECTION
85	TO CHASSIS GROUND
86	TO (+) PARKING LIGHT OUTPUT FROM ALARM/REMOTE START SYSTEM
87	TO CHASSIS GROUND WITH RESISTOR INLINE
87A	TO PARKING LIGHT WIRE – SWITCH SIDE
30	TO PARKING LIGHT WIRE – LIGHT SIDE

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarInstallExperts.com assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.