


FACTORY ALARM ARM (+)

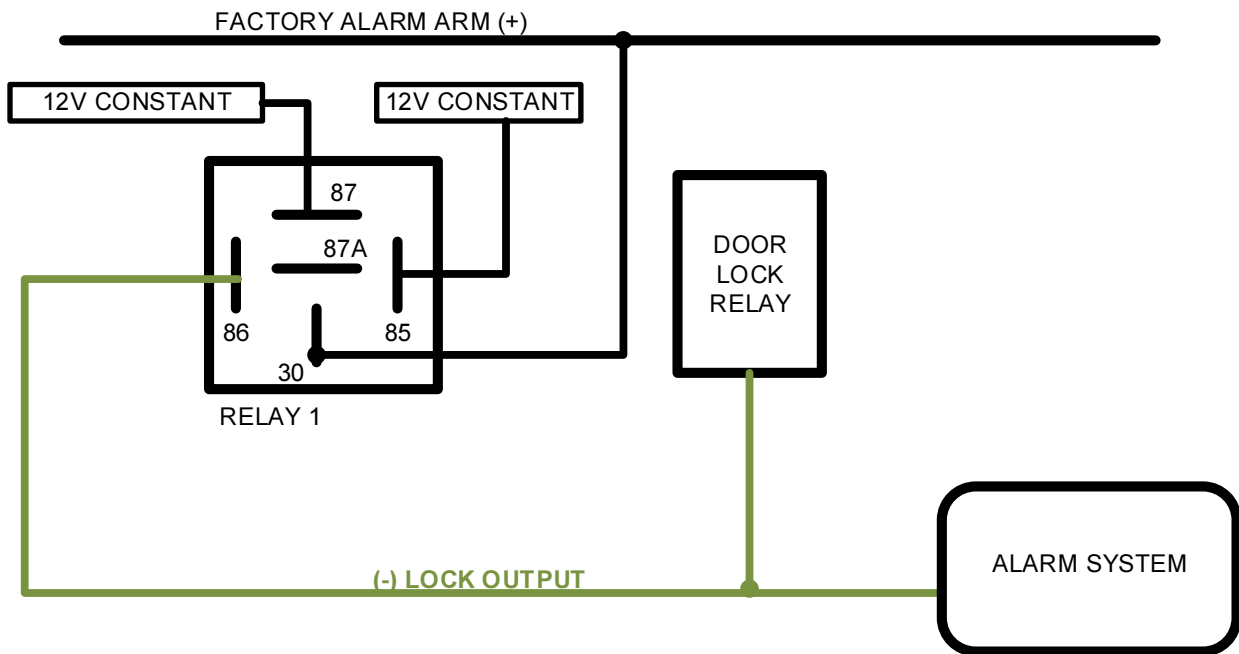

NOTE:

If the system being installed does not have a factory alarm arm output, the system's door lock output must be wired to pulse the factory arm wire and the door lock wire at the same time. This is done by splitting the alarm/remote start system's lock output to go to the door lock relay or door lock wire and to a relay that will pulse the factory alarm arm wire.



| PIN | CONNECTION |
|-----|---|
| 85 | TO 12V CONSTANT |
| 86 | TO (-) DOOR UNLOCK OUTPUT FROM ALARM SYSTEM |
| 87 | TO 12V CONSTANT |
| 87A | NO CONNECTION |
| 30 | TO VEHICLE (-) FACTORY DISARM WIRE |