


## FACTORY ALARM DISARM (+)

- ▶ It will be necessary on most vehicles to disarm the factory security system when the vehicle is remote started. Take the time to test this by sitting in the car and arming the factory alarm. Wait 2 minutes and try to start the car. If the horn honks and the lights flash when the vehicle is started, the factory security system has been triggered and the remote start system will need to disarm the factory security system when remote starting the vehicle.
- ▶ For vehicles with a POSITIVE factory alarm disarm wire, connect the remote start system's (-) factory alarm disarm wire to the vehicle's (+) factory disarm wire using a relay as shown:

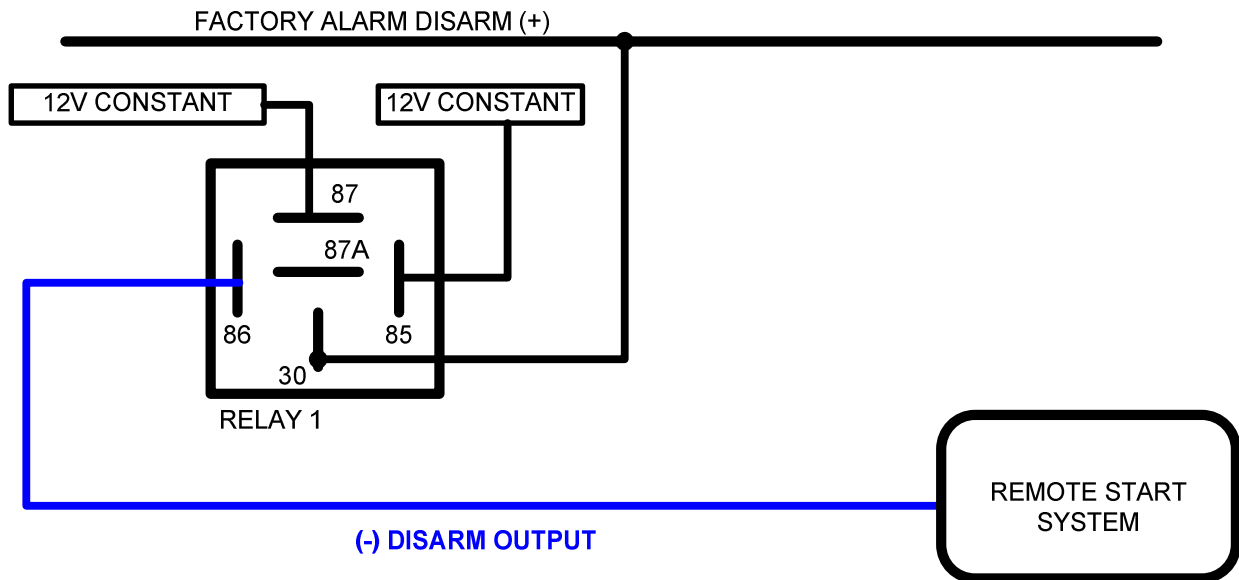

PIN	CONNECTION
85	TO 12V CONSTANT
86	TO (-) DOOR UNLOCK OUTPUT FROM ALARM SYSTEM
87	TO 12V CONSTANT
87A	NO CONNECTION
30	TO VEHICLE (+) FACTORY DISARM WIRE