




ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Behind Fuse Box
STARTER WIRE	YELLOW	Ignition harness
IGNITION WIRE	PINK	Ignition harness
Notes: There are two wires that will look and test as the ignition wire. If the correct wire is energized, the key warning chime will turn on when the vehicle is remote started with the key in the ignition cylinder.		
ACCESSORY WIRE	BROWN	Ignition harness
POWER DOOR LOCK (-)	RED/BLACK	Connector C2 At Body Control Module
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Connector C2 At Body Control Module
PARKING LIGHTS (-)	BROWN/WHITE	Smaller Connector At Body Control Module
LEFT FRONT DOOR TRIGGER (-)	GRAY/BLACK	Connector C2 At Body Control Module
RIGHT FRONT DOOR TRIGGER (-)	BLACK/WHITE	Connector C2 At Body Control Module
LEFT REAR DOOR TRIGGER (-)	LT.BLUE/BLACK	Connector C2 At Body Control Module
RIGHT REAR DOOR TRIGGER (-)	LT.GREEN/BLACK	Connector C2 At Body Control Module
TRUNK RELEASE (+)	LIGHT BLUE	Connector C2 At Body Control Module
TRUNK TRIGGER (-)	RED/BLACK	Connector C2 At Body Control Module
FACTORY ALARM ARM (-)	LIGHT GREEN	Connector C2 At Body Control Module
FACTORY ALARM DISARM (-)	PURPLE	Connector C2 At Body Control Module
TACHOMETER WIRE	WHITE	Ignition Module On Top Of Engine
BRAKE WIRE (+)	WHITE	Connector C2 At Body Control Module
HORN TRIGGER (-)	BROWN	Smaller Connector At Body Control Module
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door

INTERFACE	PART NUMBER	NOTES
Passkey III Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system.

Please verify all part numbers before ordering.

ADDITIONAL NOTES

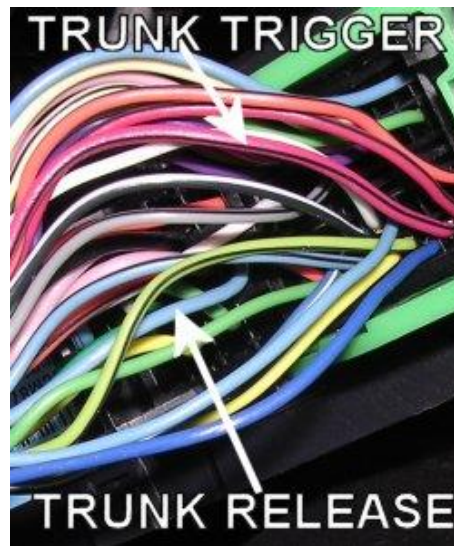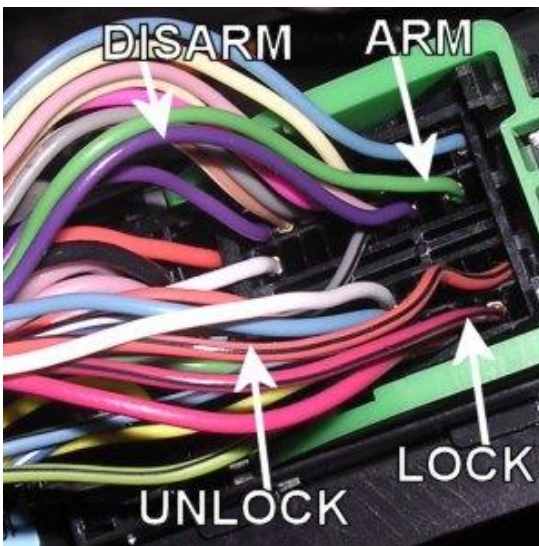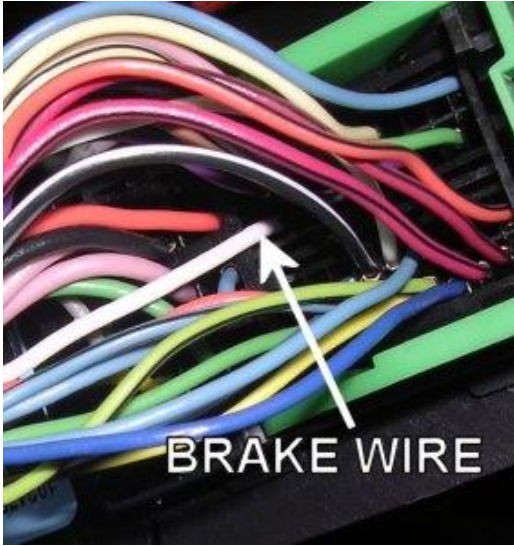

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	ORANGE	At Radio Harness	
12V SWITCHED			The radio harness does not supply a switched power source
RADIO GROUND	BLACK	At Radio Harness	
ILLUMINATION (+)	GRAY	At Radio Harness	
LEFT FRONT SPEAKER (+)	TAN	At Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY	At Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	LT.GREEN	At Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	DK.GREEN	At Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BROWN	At Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	DK.BLUE	At Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	LT.BLUE	At Radio Harness Or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-2021		METRA GMOS-01, SCOSCHE DCGM09	METRA 40-GM10, SCOSCHE MDA-1B
Notes: Use METRA GMRC-01 for wiring harness if not equipped with OnStar			
Please verify all part numbers before ordering.			




ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Behind Fuse Box
STARTER WIRE	YELLOW	Ignition harness
IGNITION WIRE	PINK	Ignition harness
Notes: There are two wires that will look and test as the ignition wire. If the correct wire is energized, the key warning chime will turn on when the vehicle is remote started with the key in the ignition cylinder.		
ACCESSORY WIRE	BROWN	Ignition harness
POWER DOOR LOCK (-)	RED/BLACK	Connector C2 At Body Control Module
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Connector C2 At Body Control Module
PARKING LIGHTS (-)	BROWN/WHITE	Smaller Connector At Body Control Module
LEFT FRONT DOOR TRIGGER (-)	GRAY/BLACK	Connector C2 At Body Control Module
RIGHT FRONT DOOR TRIGGER (-)	BLACK/WHITE	Connector C2 At Body Control Module
LEFT REAR DOOR TRIGGER (-)	LT.BLUE/BLACK	Connector C2 At Body Control Module
RIGHT REAR DOOR TRIGGER (-)	LT.GREEN/BLACK	Connector C2 At Body Control Module
TRUNK RELEASE (+)	LIGHT BLUE	Connector C2 At Body Control Module
TRUNK TRIGGER (-)	RED/BLACK	Connector C2 At Body Control Module
FACTORY ALARM ARM (-)	LIGHT GREEN	Connector C2 At Body Control Module
FACTORY ALARM DISARM (-)	PURPLE	Connector C2 At Body Control Module
TACHOMETER WIRE	WHITE	Ignition Module On Top Of Engine
BRAKE WIRE (+)	WHITE	Connector C2 At Body Control Module
HORN TRIGGER (-)	BROWN	Smaller Connector At Body Control Module
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door

INTERFACE	PART NUMBER	NOTES
Passkey III Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system.

Please verify all part numbers before ordering.

ADDITIONAL NOTES

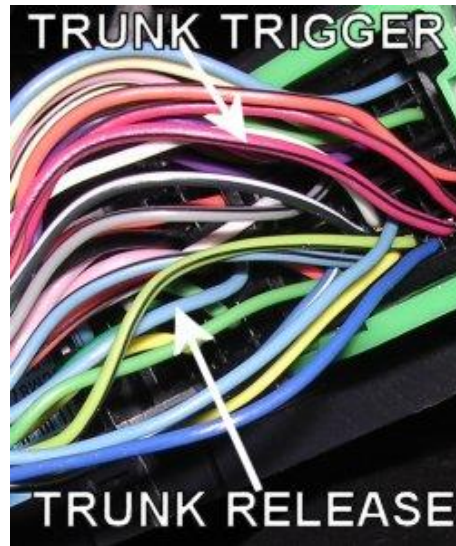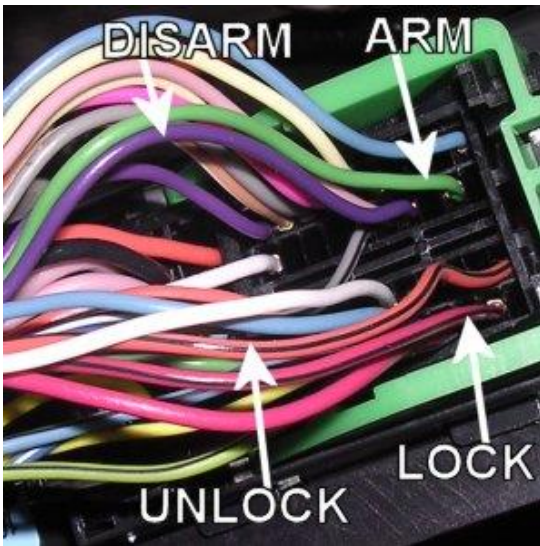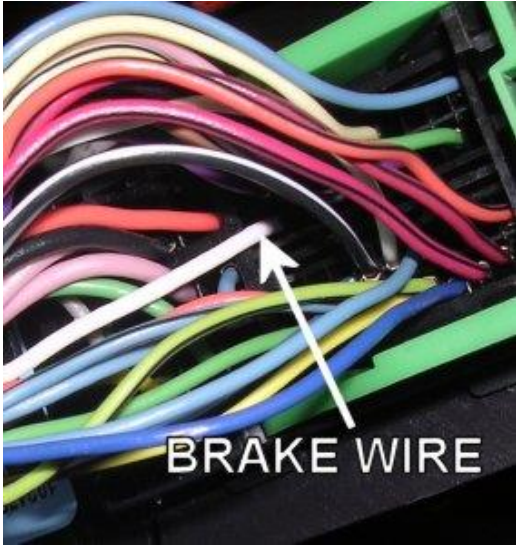

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	ORANGE	At Radio Harness	
12V SWITCHED			The radio harness does not supply a switched power source
RADIO GROUND	BLACK	At Radio Harness	
ILLUMINATION (+)	GRAY	At Radio Harness	
LEFT FRONT SPEAKER (+)	TAN	At Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY	At Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	LT.GREEN	At Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	DK.GREEN	At Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BROWN	At Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	DK.BLUE	At Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	LT.BLUE	At Radio Harness Or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-2021		METRA GMOS-01, SCOSCHE DCGM09	METRA 40-GM10, SCOSCHE MDA-1B
Notes: Use METRA GMRC-01 for wiring harness if not equipped with OnStar			
Please verify all part numbers before ordering.			




ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Behind Fuse Box
STARTER WIRE	YELLOW	Ignition harness
IGNITION WIRE	PINK	Ignition harness
Notes: There are two wires that will look and test as the ignition wire. If the correct wire is energized, the key warning chime will turn on when the vehicle is remote started with the key in the ignition cylinder.		
ACCESSORY WIRE	BROWN	Ignition harness
POWER DOOR LOCK (-)	RED/BLACK	Connector C2 At Body Control Module
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Connector C2 At Body Control Module
PARKING LIGHTS (-)	BROWN/WHITE	Smaller Connector At Body Control Module
LEFT FRONT DOOR TRIGGER (-)	GRAY/BLACK	Connector C2 At Body Control Module
RIGHT FRONT DOOR TRIGGER (-)	BLACK/WHITE	Connector C2 At Body Control Module
LEFT REAR DOOR TRIGGER (-)	LT.BLUE/BLACK	Connector C2 At Body Control Module
RIGHT REAR DOOR TRIGGER (-)	LT.GREEN/BLACK	Connector C2 At Body Control Module
TRUNK RELEASE (+)	LIGHT BLUE	Connector C2 At Body Control Module
TRUNK TRIGGER (-)	RED/BLACK	Connector C2 At Body Control Module
FACTORY ALARM ARM (-)	LIGHT GREEN	Connector C2 At Body Control Module
FACTORY ALARM DISARM (-)	PURPLE	Connector C2 At Body Control Module
TACHOMETER WIRE	WHITE	Ignition Module On Top Of Engine
BRAKE WIRE (+)	WHITE	Connector C2 At Body Control Module
HORN TRIGGER (-)	BROWN	Smaller Connector At Body Control Module
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door

INTERFACE	PART NUMBER	NOTES
Passkey III Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system.

Please verify all part numbers before ordering.

ADDITIONAL NOTES

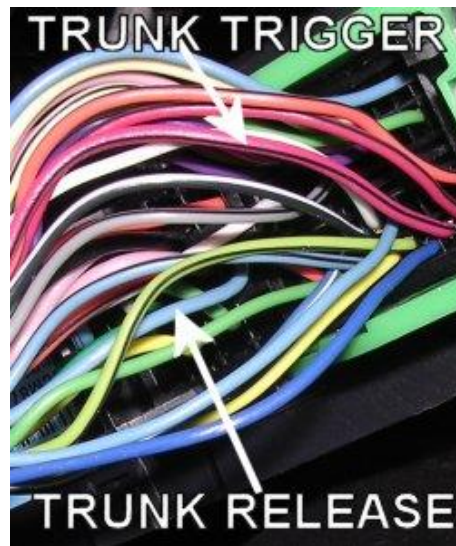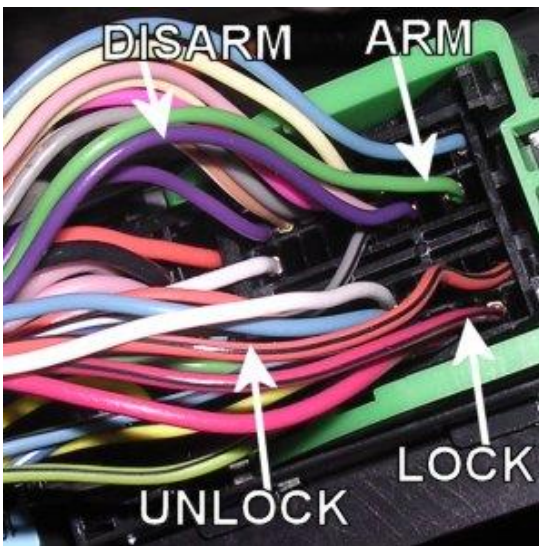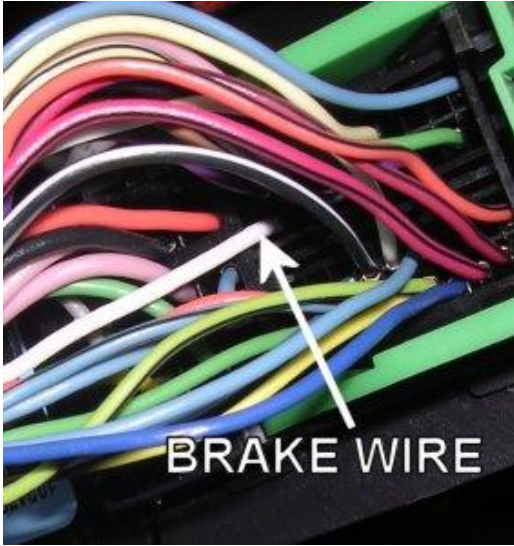

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	ORANGE	At Radio Harness	
12V SWITCHED			The radio harness does not supply a switched power source
RADIO GROUND	BLACK	At Radio Harness	
ILLUMINATION (+)	GRAY	At Radio Harness	
LEFT FRONT SPEAKER (+)	TAN	At Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY	At Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	LT.GREEN	At Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	DK.GREEN	At Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BROWN	At Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	DK.BLUE	At Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	LT.BLUE	At Radio Harness Or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-2021		METRA GMOS-01, SCOSCHE DCGM09	METRA 40-GM10, SCOSCHE MDA-1B
Notes: Use METRA GMRC-01 for wiring harness if not equipped with OnStar			
Please verify all part numbers before ordering.			




ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Behind Fuse Box
STARTER WIRE	YELLOW	Ignition harness
IGNITION WIRE	PINK	Ignition harness
Notes: There are two wires that will look and test as the ignition wire. If the correct wire is energized, the key warning chime will turn on when the vehicle is remote started with the key in the ignition cylinder.		
ACCESSORY WIRE	BROWN	Ignition harness
POWER DOOR LOCK (-)	RED/BLACK	Connector C2 At Body Control Module
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Connector C2 At Body Control Module
PARKING LIGHTS (-)	BROWN/WHITE	Smaller Connector At Body Control Module
LEFT FRONT DOOR TRIGGER (-)	GRAY/BLACK	Connector C2 At Body Control Module
RIGHT FRONT DOOR TRIGGER (-)	BLACK/WHITE	Connector C2 At Body Control Module
LEFT REAR DOOR TRIGGER (-)	LT.BLUE/BLACK	Connector C2 At Body Control Module
RIGHT REAR DOOR TRIGGER (-)	LT.GREEN/BLACK	Connector C2 At Body Control Module
TRUNK RELEASE (+)	LIGHT BLUE	Connector C2 At Body Control Module
TRUNK TRIGGER (-)	RED/BLACK	Connector C2 At Body Control Module
FACTORY ALARM ARM (-)	LIGHT GREEN	Connector C2 At Body Control Module
FACTORY ALARM DISARM (-)	PURPLE	Connector C2 At Body Control Module
TACHOMETER WIRE	WHITE	Ignition Module On Top Of Engine
BRAKE WIRE (+)	WHITE	Connector C2 At Body Control Module
HORN TRIGGER (-)	BROWN	Smaller Connector At Body Control Module
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door

INTERFACE	PART NUMBER	NOTES
Passkey III Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system.

Please verify all part numbers before ordering.

ADDITIONAL NOTES

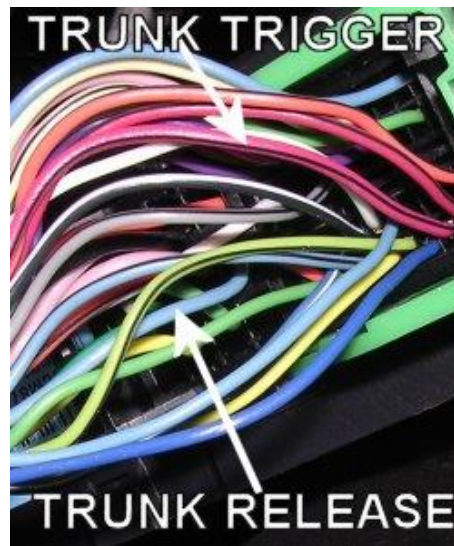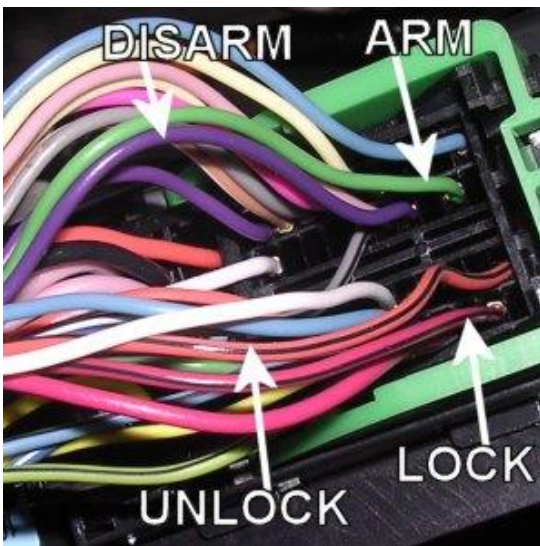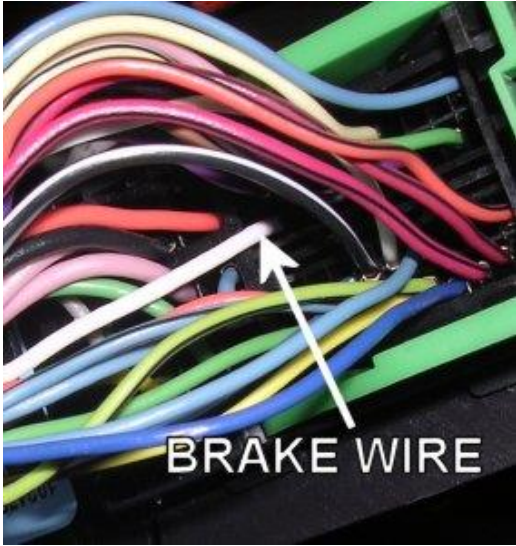

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	ORANGE	At Radio Harness	
12V SWITCHED			The radio harness does not supply a switched power source
RADIO GROUND	BLACK	At Radio Harness	
ILLUMINATION (+)	GRAY	At Radio Harness	
LEFT FRONT SPEAKER (+)	TAN	At Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY	At Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	LT.GREEN	At Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	DK.GREEN	At Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BROWN	At Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	DK.BLUE	At Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	LT.BLUE	At Radio Harness Or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-2021		METRA GMOS-01, SCOSCHE DCGM09	METRA 40-GM10, SCOSCHE MDA-1B
Notes: Use METRA GMRC-01 for wiring harness if not equipped with OnStar			
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	RED	Behind Fuse Box
STARTER WIRE	YELLOW	Ignition harness
IGNITION WIRE	PINK	Ignition harness
Notes: There are two wires that will look and test as the ignition wire. If the correct wire is energized, the key warning chime will turn on when the vehicle is remote started with the key in the ignition cylinder.		
ACCESSORY WIRE	BROWN	Ignition harness
POWER DOOR LOCK (-)	RED/BLACK	Connector C2 At Body Control Module
POWER DOOR UNLOCK (-)	ORANGE/BLACK	Connector C2 At Body Control Module
PARKING LIGHTS (-)	BROWN/WHITE	Smaller Connector At Body Control Module
LEFT FRONT DOOR TRIGGER (-)	GRAY/BLACK	Connector C2 At Body Control Module
RIGHT FRONT DOOR TRIGGER (-)	BLACK/WHITE	Connector C2 At Body Control Module
LEFT REAR DOOR TRIGGER (-)	LT.BLUE/BLACK	Connector C2 At Body Control Module
RIGHT REAR DOOR TRIGGER (-)	LT.GREEN/BLACK	Connector C2 At Body Control Module
TRUNK RELEASE (+)	LIGHT BLUE	Connector C2 At Body Control Module
TRUNK TRIGGER (-)	RED/BLACK	Connector C2 At Body Control Module
FACTORY ALARM ARM (-)	LIGHT GREEN	Connector C2 At Body Control Module
FACTORY ALARM DISARM (-)	PURPLE	Connector C2 At Body Control Module
TACHOMETER WIRE	WHITE	Ignition Module On Top Of Engine
BRAKE WIRE (+)	WHITE	Connector C2 At Body Control Module
HORN TRIGGER (-)	BROWN	Smaller Connector At Body Control Module
LEFT FRONT WINDOW UP	DARK BLUE	At Motor Inside Driver's Door
LEFT FRONT WINDOW DOWN	BROWN	At Motor Inside Driver's Door
RIGHT FRONT WINDOW UP	LIGHT BLUE	Harness In Driver's Kick Panel From Driver Door
RIGHT FRONT WINDOW DOWN	TAN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW UP	DARK GREEN	Harness In Driver's Kick Panel From Driver Door
LEFT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW UP	LIGHT GREEN	Harness In Driver's Kick Panel From Driver Door
RIGHT REAR WINDOW DOWN	PURPLE	Harness In Driver's Kick Panel From Driver Door

INTERFACE	PART NUMBER	NOTES
Passkey III Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system.

Please verify all part numbers before ordering.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	ORANGE	At Radio Harness	
12V SWITCHED			The radio harness does not supply a switched power source
RADIO GROUND	BLACK	At Radio Harness	
ILLUMINATION (+)	GRAY	At Radio Harness	
LEFT FRONT SPEAKER (+)	TAN	At Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY	At Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	LT.GREEN	At Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	DK.GREEN	At Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BROWN	At Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	DK.BLUE	At Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	LT.BLUE	At Radio Harness Or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-2021		METRA GMOS-01, SCOSCHE DCGM09	METRA 40-GM10, SCOSCHE MDA-1B
Notes: Use METRA GMRC-01 for wiring harness if not equipped with OnStar			
Please verify all part numbers before ordering.			