

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/ORANGE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/RED	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition Harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE or RED/BLACK	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN/WHITE	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness At Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/WHITE	Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	GREEN/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	6.5"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1398, SCOSCHE TA01B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/ORANGE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/RED	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition Harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE or RED/BLACK	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/RED or GREEN/WHITE	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness At Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/WHITE	Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	GREEN/BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	6.5"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1398, SCOSCHE TA01B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness On Bottom Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness On Bottom Of Fuse Box
TRUNK TRIGGER (-)	RED/YELLOW	At Light In Trunk
POWER DOOR LOCK (-)	LITE GREEN	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
3.5"	6.5"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness On Bottom Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness On Bottom Of Fuse Box
TRUNK TRIGGER (-)	RED/YELLOW	At Light In Trunk
POWER DOOR LOCK (-)	LITE GREEN	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
3.5"	6.5"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness On Bottom Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness On Bottom Of Fuse Box
TRUNK TRIGGER (-)	RED/YELLOW	At Light In Trunk
POWER DOOR LOCK (-)	LITE GREEN	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
3.5"	6.5"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness On Bottom Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness On Bottom Of Fuse Box
TRUNK TRIGGER (-)	RED/YELLOW	At Light In Trunk
POWER DOOR LOCK (-)	LITE GREEN	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
3.5"	6.5"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	At Brake Pedal Switch
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness On Bottom Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness On Bottom Of Fuse Box
TRUNK TRIGGER (-)	RED/YELLOW	At Light In Trunk
POWER DOOR LOCK (-)	LITE GREEN	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
3.5"	6.5"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition harness
TACHOMETER WIRE	BLACK	Connector On Rear Of Passenger Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness At Bottom Of Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness In Top Right Of Fuse Box
TRUNK TRIGGER (-)	RED/WHITE	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/WHITE	Blue Connector In Passenger Kick Panel
POWER DOOR UNLOCK	LT.GREEN/RED	Blue Connector In Passenger Kick Panel
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition harness
TACHOMETER WIRE	BLACK	Connector On Rear Of Passenger Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness At Bottom Of Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness In Top Right Of Fuse Box
TRUNK TRIGGER (-)	RED/WHITE	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/WHITE	Blue Connector In Passenger Kick Panel
POWER DOOR UNLOCK	LT.GREEN/RED	Blue Connector In Passenger Kick Panel
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition harness
TACHOMETER WIRE	BLACK	Connector On Rear Of Passenger Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness At Bottom Of Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness In Top Right Of Fuse Box
TRUNK TRIGGER (-)	RED/WHITE	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/WHITE	Blue Connector In Passenger Kick Panel
POWER DOOR UNLOCK	LT.GREEN/RED	Blue Connector In Passenger Kick Panel
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition harness
TACHOMETER WIRE	BLACK	Connector On Rear Of Passenger Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness At Bottom Of Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness In Top Right Of Fuse Box
TRUNK TRIGGER (-)	RED/WHITE	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/WHITE	Blue Connector In Passenger Kick Panel
POWER DOOR UNLOCK	LT.GREEN/RED	Blue Connector In Passenger Kick Panel
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition harness
ACCESSORY WIRE 1	PINK/BLUE	Ignition harness
TACHOMETER WIRE	BLACK	Connector On Rear Of Passenger Strut Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness At Bottom Of Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	Harness In Top Right Of Fuse Box
TRUNK TRIGGER (-)	RED/WHITE	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/WHITE	Blue Connector In Passenger Kick Panel
POWER DOOR UNLOCK	LT.GREEN/RED	Blue Connector In Passenger Kick Panel
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/RED	Ignition harness
STARTER WIRE 1	RED	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/RED	Ignition harness
ACCESSORY WIRE 1	BLUE/RED	Ignition harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	BLUE/BLACK	Small Black Connector At Ignition Cylinder

Notes: Key sense wire.





TACHOMETER WIRE	BLACK	Ignition Coil
Notes: 6-cylinder models: GRAY		
BRAKE WIRE (+)	GREEN/WHITE	White Connector At Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	White Connector Lower Right Corner Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	White Connector At Top Right Of Fuse Box
TRUNK TRIGGER (-)	RED/YELLOW	At Light In Trunk
POWER DOOR LOCK (-)	DK.BLUE/WHITE	Orange Connector On Bottom Of Fuse Box

Notes: Test power door lock wires by using the key in the passenger door.

POWER DOOR UNLOCK (-)	DK.BLUE	Orange Connector On Bottom Of Fuse Box
Notes: Test power door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

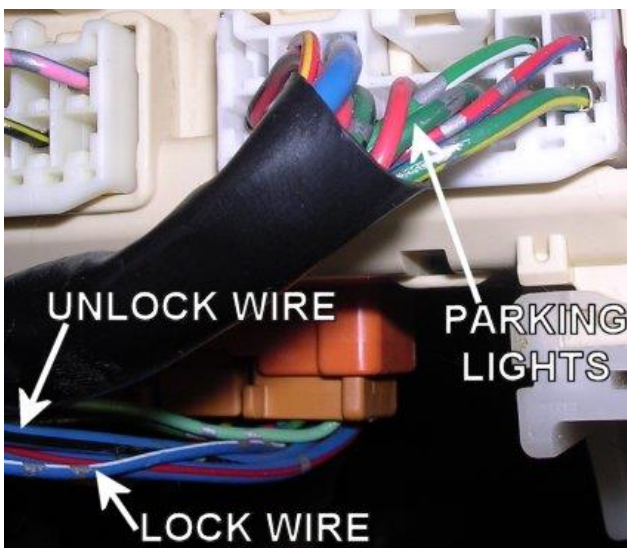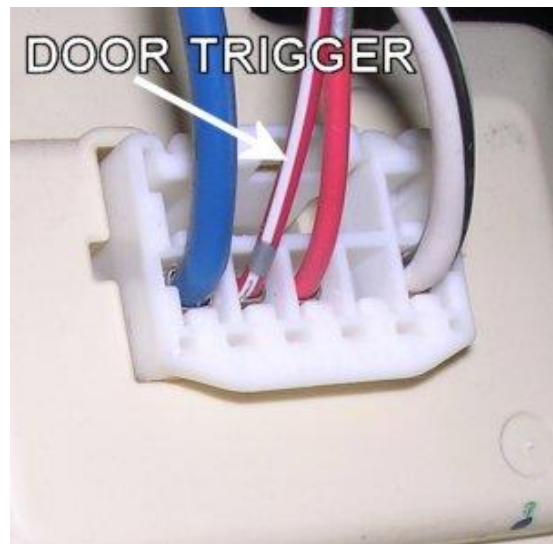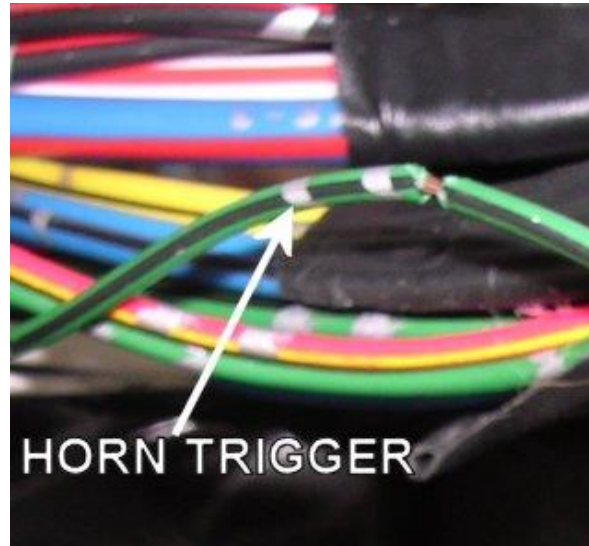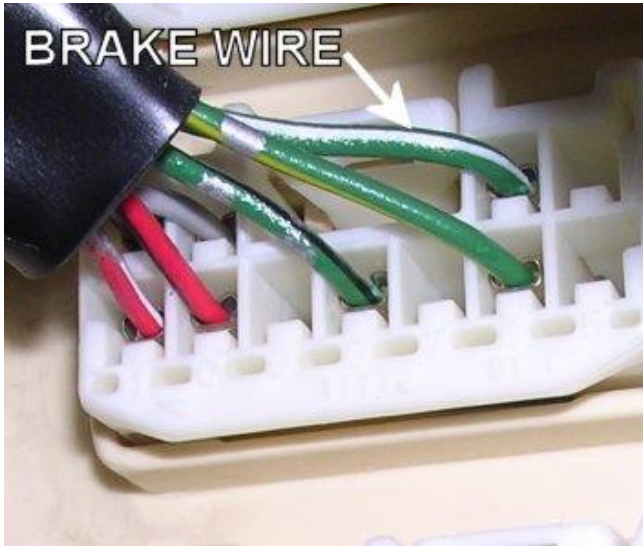

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/RED	Ignition harness
STARTER WIRE 1	RED	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/RED	Ignition harness
ACCESSORY WIRE 1	BLUE/RED	Ignition harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	BLUE/BLACK	Small Black Connector At Ignition Cylinder

Notes: Key sense wire.

TACHOMETER WIRE	BLACK	Ignition Coil
-----------------	-------	---------------

Notes: 6-cylinder models: GRAY

BRAKE WIRE (+)	GREEN/WHITE	White Connector At Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	White Connector Lower Right Corner Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	White Connector At Top Right Of Fuse Box
TRUNK TRIGGER (-)	RED/YELLOW	At Light In Trunk
POWER DOOR LOCK (-)	DK.BLUE/WHITE	Orange Connector On Bottom Of Fuse Box

Notes: Test power door lock wires by using the key in the passenger door.





POWER DOOR UNLOCK (-)	DK.BLUE	Orange Connector On Bottom Of Fuse Box
-----------------------	---------	--

Notes: Test power door lock wires by using the key in the passenger door.

LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 555XW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

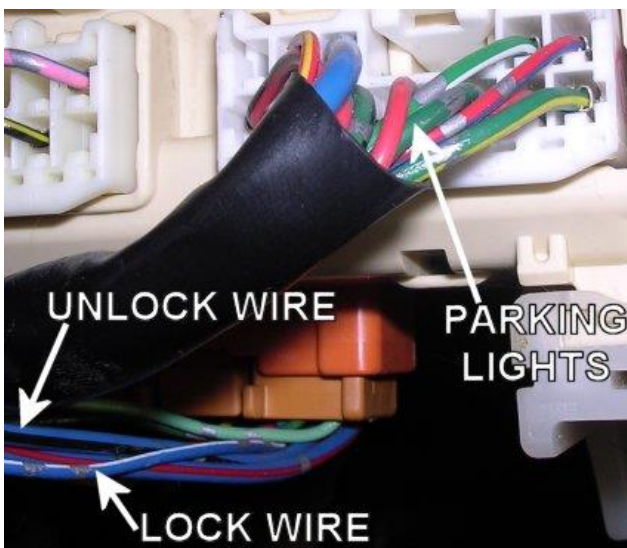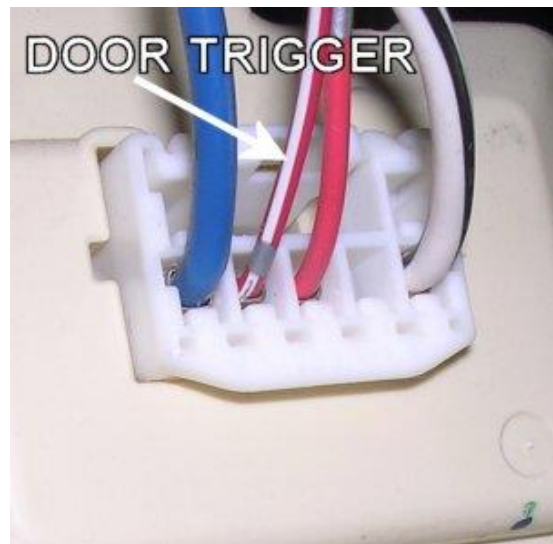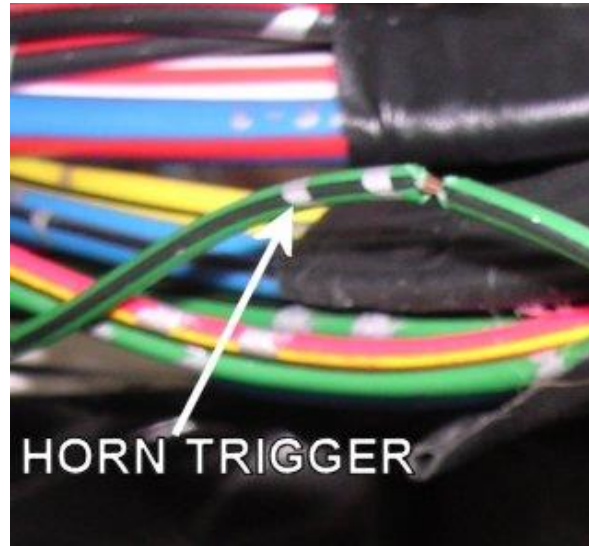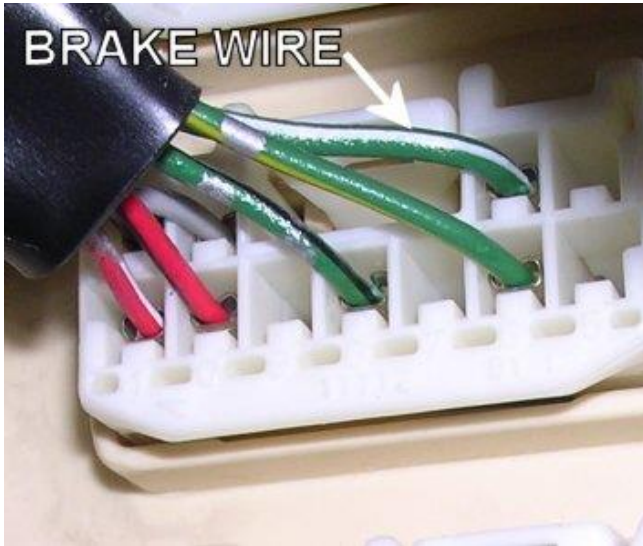





Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/RED	Ignition harness
STARTER WIRE 1	RED	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/RED	Ignition harness
ACCESSORY WIRE 1	BLUE/RED	Ignition harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	BLUE/BLACK	Small Black Connector At Ignition Cylinder
Notes: key sense wire		
TACHOMETER WIRE	BLACK	Ignition Coil
Notes: 6-cylinder models: GRAY		
BRAKE WIRE (+)	GREEN/WHITE	White Connector At Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	White Connector Lower Right Corner Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	White Connector At Top Right Of Fuse Box
TRUNK TRIGGER (-)	RED/YELLOW	At Light In Trunk
POWER DOOR LOCK (-)	DK.BLUE/WHITE	Orange Connector On Bottom Of Fuse Box
Notes: Test power door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	DK.BLUE	Orange Connector On Bottom Of Fuse Box
Notes: Test power door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 555XW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

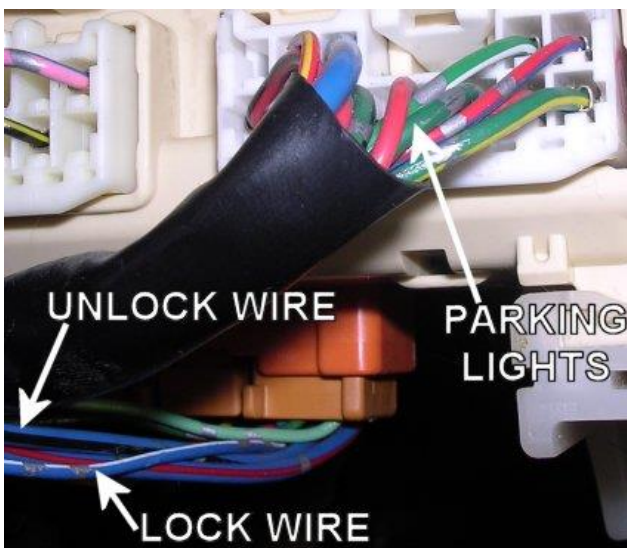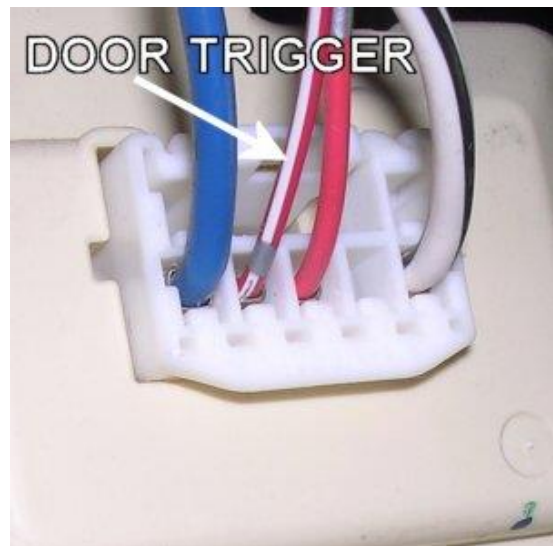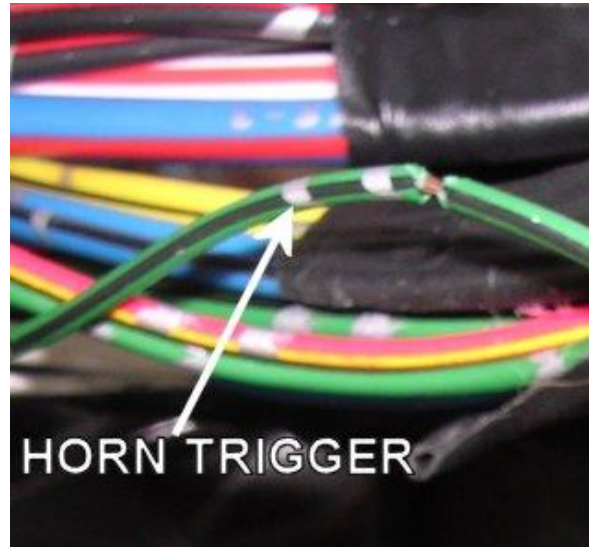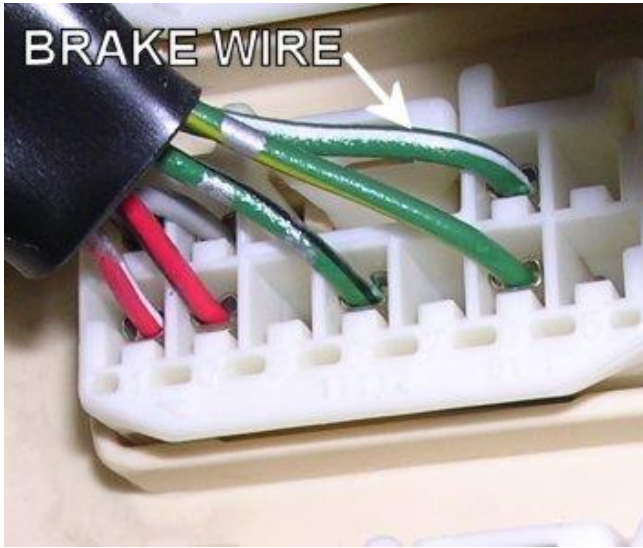




Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/RED	Ignition harness
STARTER WIRE 1	RED	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/RED	Ignition harness
ACCESSORY WIRE 1	BLUE/RED	Ignition harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	BLUE/BLACK	Small Black Connector At Ignition Cylinder
Notes: key sense wire		
TACHOMETER WIRE	BLACK	Ignition Coil
Notes: 6-cylinder models: GRAY		
BRAKE WIRE (+)	GREEN/WHITE	White Connector At Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	White Connector Lower Right Corner Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	White Connector At Top Right Of Fuse Box
TRUNK TRIGGER (-)	RED/YELLOW	At Light In Trunk
POWER DOOR LOCK (-)	DK.BLUE/WHITE	Orange Connector On Bottom Of Fuse Box
Notes: Test power door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	DK.BLUE	Orange Connector On Bottom Of Fuse Box
Notes: Test power door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 555XW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

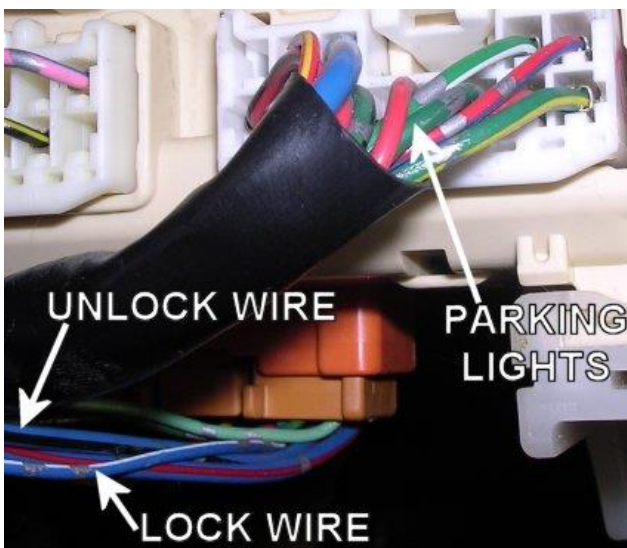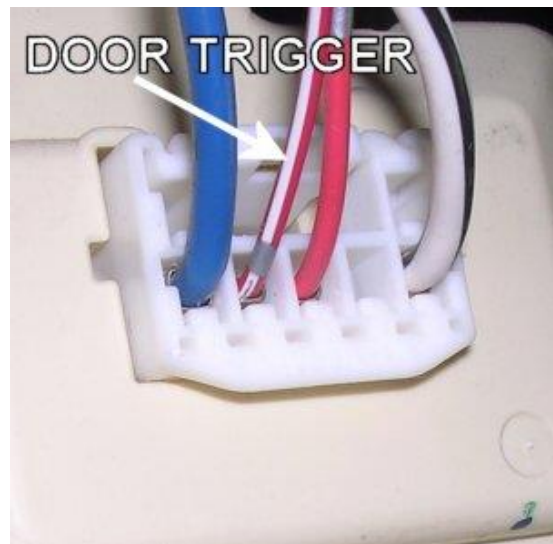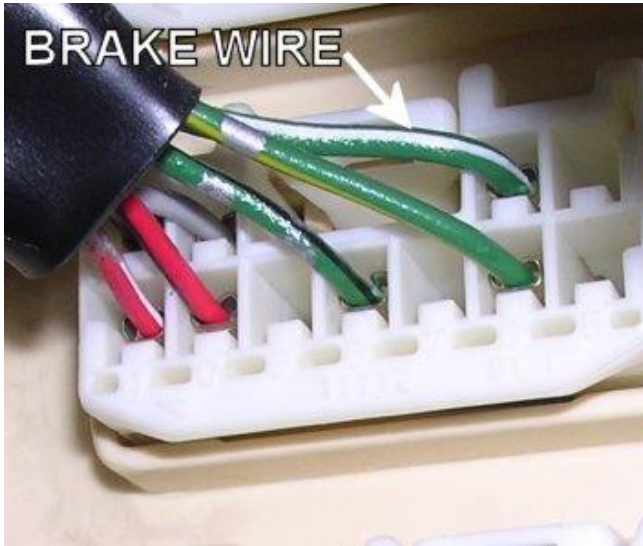





Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or WHITE/RED	Ignition harness
STARTER WIRE 1	RED	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
IGNITION WIRE 2	BLACK/RED	Ignition harness
ACCESSORY WIRE 1	BLUE/RED	Ignition harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	BLUE/BLACK	Small Black Connector At Ignition Cylinder
Notes: key sense wire		
TACHOMETER WIRE	BLACK	Ignition Coil
Notes: 6-cylinder models: GRAY		
BRAKE WIRE (+)	GREEN/WHITE	White Connector At Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	White Connector Lower Right Corner Of Fuse Box
DOOR TRIGGER (-)	RED/WHITE	White Connector At Top Right Of Fuse Box
TRUNK TRIGGER (-)	RED/YELLOW	At Light In Trunk
POWER DOOR LOCK (-)	DK.BLUE/WHITE	Orange Connector On Bottom Of Fuse Box
Notes: Test power door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	DK.BLUE	Orange Connector On Bottom Of Fuse Box
Notes: Test power door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREE/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 555XW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

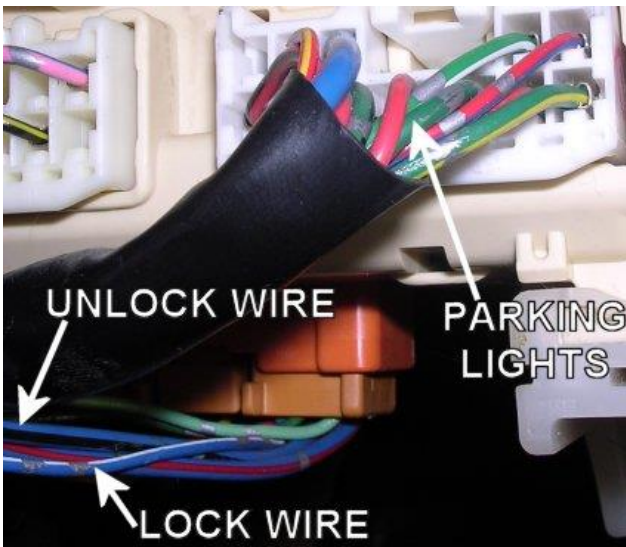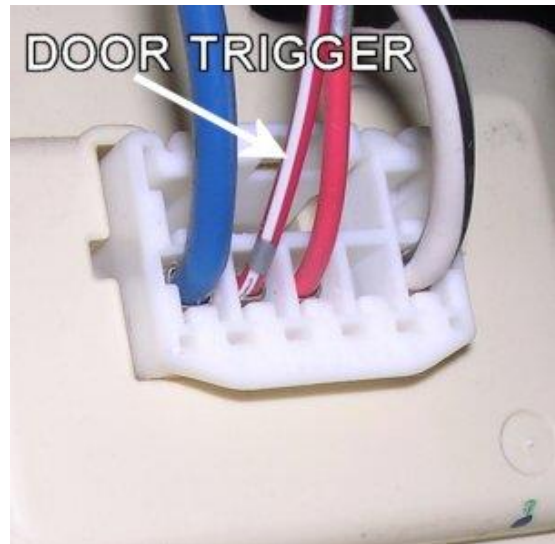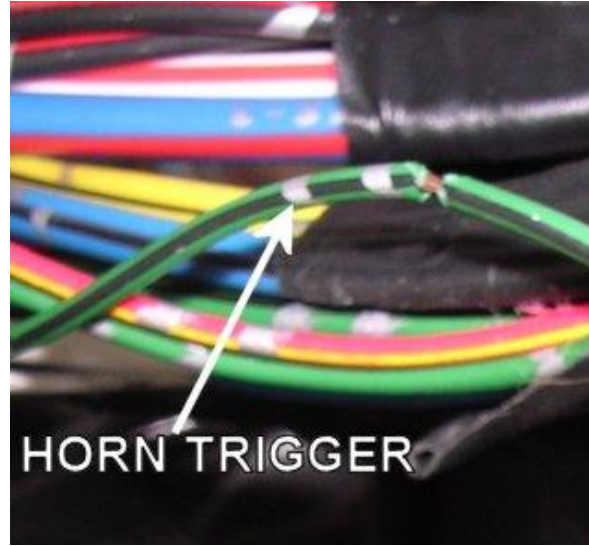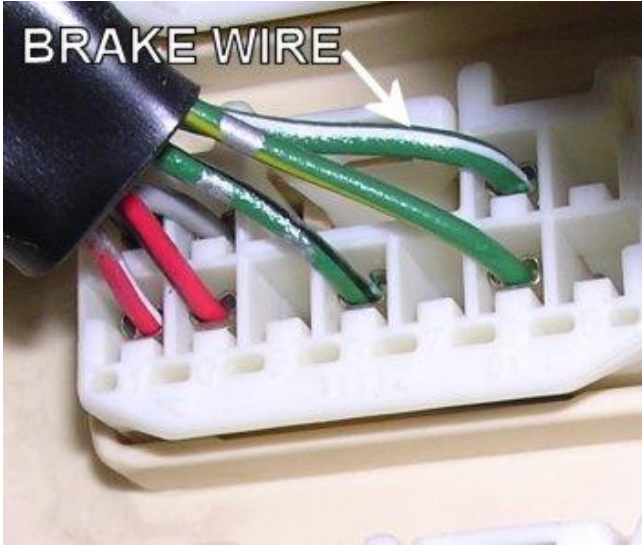

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
ISO Mount - No kit needed		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/RED	Ignition harness
IGNITION WIRE 2	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	BLUE	Ignition harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TRUNK RELEASE (5-wire)	WHITE/BLUE	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	Harness At Bottom Of Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
DRIVER DOOR TRIGGER (-)	RED/GREEN	Plug Lower Left Of Fuse Box
PASSENGER DOOR TRIGGER (-)	RED/GREEN	Plug Upper Left Of Fuse Box
REAR DOORS TRIGGER (-)	RED/WHITE	Plug Bottom Of Fuse Box
TRUNK TRIGGER (-)	GREEN	Harness In Driver's Kick Panel Or At Light In Trunk
POWER DOOR LOCK (-)	BLUE/YELLOW	Harness In Driver's Kick Panel
Notes: Test power door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	BLUE	Harness In Driver's Kick Panel
Notes: Test power door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 555XW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6x9"		
RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS	
METRA 99-8231, SCOSCHE TA1468B	METRA 70-1761, SCOSCHE TA02B	Not required	
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/RED	Ignition harness
IGNITION WIRE 2	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	BLUE	Ignition harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TRUNK RELEASE (5-wire)	WHITE/BLUE	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	Harness At Bottom Of Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
DRIVER DOOR TRIGGER (-)	RED/GREEN	Plug Lower Left Of Fuse Box
PASSENGER DOOR TRIGGER (-)	RED/GREEN	Plug Upper Left Of Fuse Box
REAR DOORS TRIGGER (-)	RED/WHITE	Plug Bottom Of Fuse Box
TRUNK TRIGGER (-)	GREEN	Harness In Driver's Kick Panel Or At Light In Trunk
POWER DOOR LOCK (-)	BLUE/YELLOW	Harness In Driver's Kick Panel
Notes: Test power door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	BLUE	Harness In Driver's Kick Panel
Notes: Test power door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 555XW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8231, SCOSCHE TA1468B		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/RED	Ignition harness
IGNITION WIRE 2	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	BLUE	Ignition harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TRUNK RELEASE (5-wire)	WHITE/BLUE	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	Harness At Bottom Of Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	Harness At Steering Column
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
DRIVER DOOR TRIGGER (-)	RED/GREEN	Plug Lower Left Of Fuse Box
PASSENGER DOOR TRIGGER (-)	RED/GREEN	Plug Upper Left Of Fuse Box
REAR DOORS TRIGGER (-)	RED/WHITE	Plug Bottom Of Fuse Box
TRUNK TRIGGER (-)	GREEN	Harness In Driver's Kick Panel Or At Light In Trunk
POWER DOOR LOCK (-)	BLUE/YELLOW	Harness In Driver's Kick Panel
Notes: Test power door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	BLUE	Harness In Driver's Kick Panel
Notes: Test power door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 555XW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8231, SCOSCHE TA1468B		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED, WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
STARTER WIRE 2	BLACK/YELLOW	Ignition harness
IGNITION WIRE 1	BLACK/RED	Ignition harness
IGNITION WIRE 2	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	BLUE/RED	Ignition harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	NOT BLACK/RED, WHITE/RED, or WHITE/BLACK	Any Ignition Coil Or Fuel Injector
BRAKE WIRE (+)	GREEN/WHITE	20-Pin Plug Bottom Of Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	24-Pin Plug Bottom Of Fuse Box
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
DRIVER DOOR TRIGGER (-)	RED/GREEN	In Bottom Plug At Module Attached To Rear Of Fuse Box
PASSENGER DOOR TRIGGER (-)	RED/GREEN	In Bottom Plug At Module Attached To Rear Of Fuse Box
REAR DOORS TRIGGER (-)	RED/WHITE	20-Pin Plug Bottom Of Fuse Box
TRUNK TRIGGER (-)	GREEN	Harness In Driver's Kick Panel Or At Light In Trunk
POWER DOOR LOCK (-)	BLUE/YELLOW	Harness In Driver's Kick Panel
Notes: Test power door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	BLUE	Harness In Driver's Kick Panel
Notes: Test power door lock wires by using the key in the passenger door.		
TRUNK RELEASE (5-wire)	WHITE/BLUE	In Bottom Plug At Module Attached To Rear Of Fuse Box
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8231, SCOSCHE TA1468B		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE/RED, WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
STARTER WIRE 2	BLACK/YELLOW	Ignition harness
IGNITION WIRE 1	BLACK/RED	Ignition harness
IGNITION WIRE 2	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	BLUE/RED	Ignition harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	NOT BLACK/RED, WHITE/RED, or WHITE/BLACK	Any Ignition Coil Or Fuel Injector
BRAKE WIRE (+)	GREEN/WHITE	20-Pin Plug Bottom Of Fuse Box
HORN TRIGGER (-)	GREEN/BLACK	24-Pin Plug Bottom Of Fuse Box
PARKING LIGHTS (+)	GREEN	Harness At Bottom Of Fuse Box
DRIVER DOOR TRIGGER (-)	RED/GREEN	In Bottom Plug At Module Attached To Rear Of Fuse Box
PASSENGER DOOR TRIGGER (-)	RED/GREEN	In Bottom Plug At Module Attached To Rear Of Fuse Box
REAR DOORS TRIGGER (-)	RED/WHITE	20-Pin Plug Bottom Of Fuse Box
TRUNK TRIGGER (-)	GREEN	Harness In Driver's Kick Panel Or At Light In Trunk
POWER DOOR LOCK (-)	BLUE/YELLOW	Harness In Driver's Kick Panel
Notes: Test power door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	BLUE	Harness In Driver's Kick Panel
Notes: Test power door lock wires by using the key in the passenger door.		
TRUNK RELEASE (5-wire)	WHITE/BLUE	In Bottom Plug At Module Attached To Rear Of Fuse Box
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GREEN/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	At Radio Harness	
12V SWITCHED	GRAY	At Radio Harness	
RADIO GROUND	BROWN	At Radio Harness	
ILLUMINATION (+)	GREEN	At Radio Harness	
LEFT FRONT SPEAKER (+)	PINK	At Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker	
LEFT REAR SPEAKER (+)	BLACK	At Speaker	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker	
RIGHT REAR SPEAKER (+)	RED	At Speaker	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6x9"	6x9"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8231, SCOSCHE TA1468B		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK	Ignition harness
STARTER WIRE 1	BLUE	Ignition harness
STARTER WIRE 2	GRAY	Ignition harness
IGNITION WIRE 1	YELLOW	Ignition harness
IGNITION WIRE 2	PINK	Ignition harness
ACCESSORY WIRE 1	WHITE	Ignition harness
KEY SENSE WIRE (+)	BLUE	Ignition harness
NOTE: A pulse to this wire from the remote start will disarm the factory security without unlocking the doors		
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	BLACK	At Data Link Connector Under Dash
BRAKE WIRE (+)	WHITE or BLUE	In 12-Pin Plug At Fuse Box
HORN TRIGGER (-)	WHITE	In 10-Pin Plug At Fuse Box
PARKING LIGHTS (+)	Do not use	
PARKING LIGHTS (-)	BLACK	In 26-Pin Plug At Module Attached To The Back Of The Fuse Box
LEFT FRONT DOOR TRIGGER (-)	BLUE	In 26-Pin Plug At Module Attached To The Back Of The Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	YELLOW	In 28-Pin Plug At Module Attached To The Back Of The Fuse Box
LEFT REAR DOOR TRIGGER (-)	LT.GREEN	In 13-Pin Plug On Right Side Of Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GRAY	In 28-Pin Plug At Module Attached To The Back Of The Fuse Box
DOMELIGHT (-)	BROWN	In 12-Pin Plug At Fuse Box
TRUNK TRIGGER (-)	WHITE	In 28-Pin Plug At Module Attached To The Back Of The Fuse Box
POWER DOOR LOCK (-)	BROWN	In 25-Pin Connector In Driver's Kick Panel
NOTE: Test power door lock wires by using the key in the driver door. Unlock requires a double pulse		
POWER DOOR UNLOCK (-)	GRAY	In 25-Pin Connector In Driver's Kick Panel
NOTE: Test power door lock wires by using the key in the driver door. Unlock requires a double pulse		
TRUNK RELEASE (5-wire)	BLACK	In 28-Pin Plug At Module Attached To The Back Of The Fuse Box
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	LT.GREEN	Harness In Driver's Kick From Driver Door

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	BLUE/YELLOW	At Radio Harness
12V SWITCHED	GRAY	At Radio Harness
RADIO GROUND	BROWN	At Radio Harness
ILLUMINATION (+)	GREEN	At Radio Harness
LEFT FRONT SPEAKER (+)	PINK	At Speaker
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker
LEFT REAR SPEAKER (+)	BLACK	At Speaker
LEFT REAR SPEAKER (-)	YELLOW	At Speaker
RIGHT REAR SPEAKER (+)	RED	At Speaker
RIGHT REAR SPEAKER (-)	WHITE	At Speaker

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6x9"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
SCOSCHE	TA2058B	TA02B	Not required
METRA	99-8218	70-8114	Not required
Notes: For JBL equipped models			
METRA	99-8218	70-1761	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Unscrew shifter handle and remove.
- 2 Carefully remove the shifter trim panel by releasing clips securing the panel with a pick tool or panel removal tool
- 3 Carefully remove each trim panel on the side of the storage pocket and unscrew one (1) screw behind each trim panel.
- 4 Using a panel removal tool or pick tool, carefully remove the top portion of the center console. Unplug all connectors and remove.
- 5 Using a panel removal tool or pick tool, remove the vents above the radio.
- 6 Remove four (4) 10mm bolts securing the stereo. Unplug connectors and remove.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE The dash tweeter is a 2" tweeter

- 1 Carefully remove the speaker grill using a pick tool or panel removal tool
- 2 Two (2) 10mm bolts secure the tweeter to the dash. Remove the bolts and unplug the speaker to remove

DOOR PANEL REMOVAL

- 1 Carefully remove the mirror cover.
- 2 Carefully remove the front of the arm rest using a pick tool or panel removal tool. Remove one (1) screw from behind the panel
- 3 Use a door panel removal tool to release a panel clip on the top front of the door panel.
- 4 Use a door panel removal tool to release clips along the edges of the door panel and remove.
- 5 There are four (4) 10mm bolts securing the speaker to the door. Remove the bolts and unplug the connector to remove the speaker.

NOTE A speaker adapter is recommended to install aftermarket speakers.

REAR SPEAKER REMOVAL

- 1 Fold down rear seats
- 2 Carefully remove both panels on the "C" pillar using a panel removal tool.
- 3 Using a panel removal tool, carefully loosen the clips securing the rear deck. Lift the deck up and pull toward the front of the vehicle to remove.
- 4 Each speaker is secured with four (4) 10mm bolts. Remove bolts and unplug connector to remove each speaker.

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK	Ignition harness
STARTER WIRE 1	BLUE	Ignition harness
STARTER WIRE 2	GRAY	Ignition harness
IGNITION WIRE 1	YELLOW	Ignition harness
IGNITION WIRE 2	PINK	Ignition harness
ACCESSORY WIRE 1	WHITE	Ignition harness
KEY SENSE WIRE (+)	BLUE	Ignition harness

NOTE: A pulse to this wire from the remote start will disarm the factory security without unlocking the doors

FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
TACHOMETER WIRE	BLACK	At Data Link Connector Under Dash
BRAKE WIRE (+)	WHITE or BLUE	In 12-Pin Plug At Fuse Box
HORN TRIGGER (-)	WHITE	In 10-Pin Plug At Fuse Box
PARKING LIGHTS (+)	Do not use	
PARKING LIGHTS (-)	BLACK	In 26-Pin Plug At Module Attached To The Back Of The Fuse Box
LEFT FRONT DOOR TRIGGER (-)	BLUE	In 26-Pin Plug At Module Attached To The Back Of The Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	YELLOW	In 28-Pin Plug At Module Attached To The Back Of The Fuse Box
LEFT REAR DOOR TRIGGER (-)	LT.GREEN	In 13-Pin Plug On Right Side Of Fuse Box
RIGHT REAR DOOR TRIGGER (-)	GRAY	In 28-Pin Plug At Module Attached To The Back Of The Fuse Box
DOMELIGHT (-)	BROWN	In 12-Pin Plug At Fuse Box
TRUNK TRIGGER (-)	WHITE	In 28-Pin Plug At Module Attached To The Back Of The Fuse Box
POWER DOOR LOCK (-)	BROWN	In 25-Pin Connector In Driver's Kick Panel

NOTE: Test power door lock wires by using the key in the driver door. Unlock requires a double pulse

POWER DOOR UNLOCK (-)	GRAY	In 25-Pin Connector In Driver's Kick Panel
-----------------------	------	--

NOTE: Test power door lock wires by using the key in the driver door. Unlock requires a double pulse

TRUNK RELEASE (5-wire)	BLACK	In 28-Pin Plug At Module Attached To The Back Of The Fuse Box
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	LT.GREEN	Harness In Driver's Kick From Driver Door

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	BLUE/YELLOW	At Radio Harness
12V SWITCHED	GRAY	At Radio Harness
RADIO GROUND	BROWN	At Radio Harness
ILLUMINATION (+)	GREEN	At Radio Harness
LEFT FRONT SPEAKER (+)	PINK	At Speaker
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker
RIGHT FRONT SPEAKER (+)	GREEN	At Speaker
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker
LEFT REAR SPEAKER (+)	BLACK	At Speaker
LEFT REAR SPEAKER (-)	YELLOW	At Speaker
RIGHT REAR SPEAKER (+)	RED	At Speaker
RIGHT REAR SPEAKER (-)	WHITE	At Speaker

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6x9"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
SCOSCHE	TA2058B	TA02B	Not required
METRA	99-8218	70-8114	Not required
Notes: For JBL equipped models			
METRA	99-8218	70-1761	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Unscrew shifter handle and remove.
- 2 Carefully remove the shifter trim panel by releasing clips securing the panel with a pick tool or panel removal tool
- 3 Carefully remove each trim panel on the side of the storage pocket and unscrew one (1) screw behind each trim panel.
- 4 Using a panel removal tool or pick tool, carefully remove the top portion of the center console. Unplug all connectors and remove.
- 5 Using a panel removal tool or pick tool, remove the vents above the radio.
- 6 Remove four (4) 10mm bolts securing the stereo. Unplug connectors and remove.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE The dash tweeter is a 2" tweeter

- 1 Carefully remove the speaker grill using a pick tool or panel removal tool
- 2 Two (2) 10mm bolts secure the tweeter to the dash. Remove the bolts and unplug the speaker to remove

DOOR PANEL REMOVAL

- 1 Carefully remove the mirror cover.
- 2 Carefully remove the front of the arm rest using a pick tool or panel removal tool. Remove one (1) screw from behind the panel
- 3 Use a door panel removal tool to release a panel clip on the top front of the door panel.
- 4 Use a door panel removal tool to release clips along the edges of the door panel and remove.
- 5 There are four (4) 10mm bolts securing the speaker to the door. Remove the bolts and unplug the connector to remove the speaker.

NOTE A speaker adapter is recommended to install aftermarket speakers.

REAR SPEAKER REMOVAL

- 1 Fold down rear seats
- 2 Carefully remove both panels on the "C" pillar using a panel removal tool.
- 3 Using a panel removal tool, carefully loosen the clips securing the rear deck. Lift the deck up and pull toward the front of the vehicle to remove.
- 4 Each speaker is secured with four (4) 10mm bolts. Remove bolts and unplug connector to remove each speaker.

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK	Ignition harness
12V IGNITION WIRE 1	YELLOW	Ignition harness
12V IGNITION WIRE 2	PINK	Ignition harness
ACCESSORY WIRE	WHITE	Ignition harness
STARTER WIRE 1	BLUE	Ignition harness
STARTER WIRE 2	GRAY	Ignition harness
KEY SENSE WIRE (-)	BLUE	Ignition harness
NOTE: A pulse to this wire from the remote start will disarm the factory security without unlocking the doors		
FACTORY ALARM ARM (-)	BROWN	Harness In Driver's Kick Panel
FACTORY ALARM DISARM (-)	GRAY	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Data Link Connector Under Dash
BRAKE WIRE (+)	WHITE or BLUE	In 12-Pin Plug At Fuse Box
HORN TRIGGER (-)	WHITE	In 10-Pin Plug At Fuse Box
PARKING LIGHTS (+)	Do not use	
PARKING LIGHTS (-)	BLACK	At Headlight Switch in 20-Pin Plug
ALL DOOR TRIGGER (-)	BROWN	In 12-Pin Plug At Fuse Box
LEFT FRONT DOOR TRIGGER (-)	BLUE	Harness In Driver's Kick Panel
RIGHT FRONT DOOR TRIGGER (-)	YELLOW	Harness In Passenger Kick Panel
LEFT REAR DOOR TRIGGER (-)	LT.GREEN	Harness In Driver's Kick Panel
RIGHT REAR DOOR TRIGGER (-)	GRAY	Harness In Passenger Kick Panel
DOME LIGHT (-)	BROWN	In 12-Pin Plug At Fuse Box – Same Wire As "All Door Trigger"
TRUNK TRIGGER (-)	WHITE	In Driver's Kick Panel
HOOD TRIGGER (-)	RED	At Factory Hood Pin Switch
POWER DOOR LOCK (-)	GREEN	In 12-Pin Plug At Fuse Box Or White 25-Pin Plug In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GRAY	In 12-Pin Plug At Fuse Box Or White 25-Pin Plug In Driver's Kick Panel
NOTE: Test power door lock wires by using the key in the driver door. Unlock requires a double pulse		
TRUNK RELEASE (5-wire)	BLACK	Harness In Driver's Kick Panel
PARKING BRAKE (-)	YELLOW	At Parking Brake Switch
REVERSE LIGHTS (+)	RED	At Harness In Driver's Kick Panel
SPEED SENSE WIRE (AC)	VIOLET	At Radio Harness
HEATED SEAT DRIVER (+ LATCHED)	PINK	At Switch
HEATED SEAT PASSENGER (+ LATCHED)	BLUE	At Switch
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	LT.GREEN	Harness In Driver's Kick From Driver Door

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

Please verify all part numbers before ordering.

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	BLUE/YELLOW	At Radio Harness
12V SWITCHED	GRAY	At Radio Harness
RADIO GROUND	BROWN	At Radio Harness
ILLUMINATION (+)	GREEN	At Radio Harness
POWER ANTENNA (+)	TAN	At Radio Harness
LEFT FRONT SPEAKER (+)	PINK	At Speaker
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker
LEFT REAR SPEAKER (+)	BLACK	At Speaker
LEFT REAR SPEAKER (-)	YELLOW	At Speaker
RIGHT REAR SPEAKER (+)	RED	At Speaker
RIGHT REAR SPEAKER (-)	WHITE	At Speaker

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6x9"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
SCOSCHE	TA2058B	TA02B	Not required
METRA	99-8218	70-8114	Not required
Notes: For JBL equipped models			
METRA	99-8218	70-1761	Not required

Please verify all part numbers before ordering.

RADIO REMOVAL

- 1 Unscrew shifter handle and remove.
- 2 Carefully remove the shifter trim panel by releasing clips securing the panel with a pick tool or panel removal tool
- 3 Carefully remove each trim panel on the side of the storage pocket and unscrew one (1) screw behind each trim panel.
- 4 Using a panel removal tool or pick tool, carefully remove the top portion of the center console. Unplug all connectors and remove.
- 5 Using a panel removal tool or pick tool, remove the vents above the radio.
- 6 Remove four (4) 10mm bolts securing the stereo. Unplug connectors and remove.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE The dash tweeter is a 2" tweeter

- 1 Carefully remove the speaker grill using a pick tool or panel removal tool
- 2 Two (2) 10mm bolts secure the tweeter to the dash. Remove the bolts and unplug the speaker to remove

DOOR PANEL REMOVAL

- 1 Carefully remove the mirror cover.
- 2 Carefully remove the front of the arm rest using a pick tool or panel removal tool. Remove one (1) screw from behind the panel
- 3 Use a door panel removal tool to release a panel clip on the top front of the door panel.
- 4 Use a door panel removal tool to release clips along the edges of the door panel and remove.
- 5 There are four (4) 10mm bolts securing the speaker to the door. Remove the bolts and unplug the connector to remove the speaker.

NOTE A speaker adapter is recommended to install aftermarket speakers.

REAR SPEAKER REMOVAL

- 1 Fold down rear seats
- 2 Carefully remove both panels on the "C" pillar using a panel removal tool.
- 3 Using a panel removal tool, carefully loosen the clips securing the rear deck. Lift the deck up and pull toward the front of the vehicle to remove.
- 4 Each speaker is secured with four (4) 10mm bolts. Remove bolts and unplug connector to remove each speaker.

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	BLACK	Ignition harness
12V IGNITION WIRE 1	YELLOW	Ignition harness
12V IGNITION WIRE 2	PINK	Ignition harness
ACCESSORY WIRE	WHITE	Ignition harness
STARTER WIRE 1	BLUE	Ignition harness
STARTER WIRE 2	GRAY	Ignition harness
KEY SENSE WIRE (-)	BLUE	Ignition harness

NOTE: A pulse to this wire from the remote start will disarm the factory security without unlocking the doors

FACTORY ALARM ARM (-)	BROWN	Harness In Driver's Kick Panel
FACTORY ALARM DISARM (-)	GRAY	Harness In Driver's Kick Panel
TACHOMETER WIRE	BLACK	At Data Link Connector Under Dash
BRAKE WIRE (+)	WHITE or BLUE	In 12-Pin Plug At Fuse Box
HORN TRIGGER (-)	WHITE	In 10-Pin Plug At Fuse Box
PARKING LIGHTS (+)	Do not use	
PARKING LIGHTS (-)	BLACK	At Headlight Switch in 20-Pin Plug
ALL DOOR TRIGGER (-)	BROWN	In 12-Pin Plug At Fuse Box
LEFT FRONT DOOR TRIGGER (-)	BLUE	Harness In Driver's Kick Panel
RIGHT FRONT DOOR TRIGGER (-)	YELLOW	Harness In Passenger Kick Panel
LEFT REAR DOOR TRIGGER (-)	LT.GREEN	Harness In Driver's Kick Panel
RIGHT REAR DOOR TRIGGER (-)	GRAY	Harness In Passenger Kick Panel
DOME LIGHT (-)	BROWN	In 12-Pin Plug At Fuse Box – Same Wire As "All Door Trigger"
TRUNK TRIGGER (-)	WHITE	In Driver's Kick Panel
HOOD TRIGGER (-)	RED	At Factory Hood Pin Switch
POWER DOOR LOCK (-)	GREEN	In 12-Pin Plug At Fuse Box Or White 25-Pin Plug In Driver's Kick Panel
POWER DOOR UNLOCK (-)	GRAY	In 12-Pin Plug At Fuse Box Or White 25-Pin Plug In Driver's Kick Panel

NOTE: Test power door lock wires by using the key in the driver door. Unlock requires a double pulse

TRUNK RELEASE (5-wire)	BLACK	Harness In Driver's Kick Panel
PARKING BRAKE (-)	YELLOW	At Parking Brake Switch
REVERSE LIGHTS (+)	RED	At Harness In Driver's Kick Panel
SPEED SENSE WIRE (AC)	VIOLET	At Radio Harness
HEATED SEAT DRIVER (+ LATCHED)	PINK	At Switch
HEATED SEAT PASSENGER (+ LATCHED)	BLUE	At Switch
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BROWN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	LT.GREEN	Harness In Driver's Kick From Driver Door

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

Please verify all part numbers before ordering.

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO 12V	BLUE/YELLOW	At Radio Harness
12V SWITCHED	GRAY	At Radio Harness
RADIO GROUND	BROWN	At Radio Harness
ILLUMINATION (+)	GREEN	At Radio Harness
POWER ANTENNA (+)	TAN	At Radio Harness
LEFT FRONT SPEAKER (+)	PINK	At Speaker
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker
LEFT REAR SPEAKER (+)	BLACK	At Speaker
LEFT REAR SPEAKER (-)	YELLOW	At Speaker
RIGHT REAR SPEAKER (+)	RED	At Speaker
RIGHT REAR SPEAKER (-)	WHITE	At Speaker

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6x9"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
SCOSCHE	TA2058B	TA02B	Not required
METRA	99-8218	70-8114	Not required
Notes: For JBL equipped models			
METRA	99-8218	70-1761	Not required

Please verify all part numbers before ordering.

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

RADIO REMOVAL

- 1 Unscrew shifter handle and remove.
- 2 Carefully remove the shifter trim panel by releasing clips securing the panel with a pick tool or panel removal tool
- 3 Carefully remove each trim panel on the side of the storage pocket and unscrew one (1) screw behind each trim panel.
- 4 Using a panel removal tool or pick tool, carefully remove the top portion of the center console. Unplug all connectors and remove.
- 5 Using a panel removal tool or pick tool, remove the vents above the radio.
- 6 Remove four (4) 10mm bolts securing the stereo. Unplug connectors and remove.

FRONT SPEAKER REMOVAL

TWEETER REMOVAL

NOTE The dash tweeter is a 2" tweeter

- 1 Carefully remove the speaker grill using a pick tool or panel removal tool
- 2 Two (2) 10mm bolts secure the tweeter to the dash. Remove the bolts and unplug the speaker to remove

DOOR PANEL REMOVAL

- 1 Carefully remove the mirror cover.
- 2 Carefully remove the front of the arm rest using a pick tool or panel removal tool. Remove one (1) screw from behind the panel
- 3 Use a door panel removal tool to release a panel clip on the top front of the door panel.
- 4 Use a door panel removal tool to release clips along the edges of the door panel and remove.
- 5 There are four (4) 10mm bolts securing the speaker to the door. Remove the bolts and unplug the connector to remove the speaker.

NOTE A speaker adapter is recommended to install aftermarket speakers.

REAR SPEAKER REMOVAL

- 1 Fold down rear seats
- 2 Carefully remove both panels on the "C" pillar using a panel removal tool.
- 3 Using a panel removal tool, carefully loosen the clips securing the rear deck. Lift the deck up and pull toward the front of the vehicle to remove.
- 4 Each speaker is secured with four (4) 10mm bolts. Remove bolts and unplug connector to remove each speaker.