
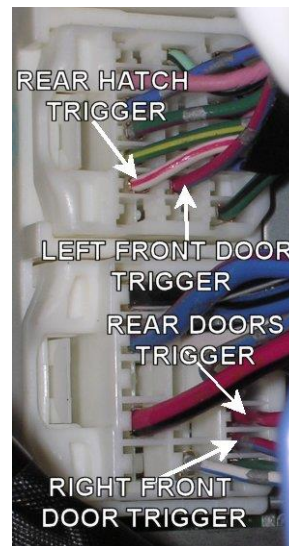


### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE & BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK	Ignition Harness
SECOND IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	PINK	Ignition Harness
POWER LOCK		
POWER UNLOCK		
<b>Notes:</b> To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using tw		
PARKING LIGHTS (+)	GREEN	Connector At Top Right Of Fuse Box
PARKING LIGHTS (-)	GREEN/RED	At Headlight Switch
HEADLIGHTS (-)	RED/BLUE	At Headlight Switch
DRIVER DOOR TRIGGER (-)	RED/BLUE	Module Behind Glove Box On Right Side
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Behind Glove Box On Right Side
REAR DOORS TRIGGER (-)	RED	Module Behind Glove Box On Right Side
DOME LIGHT SUPERVISION		
COMES ON WITH UNLOCK		
REAR HATCH TRIGGER (-)	WHITE/RED	Harness In Driver's Kick Panel
HOOD TRIGGER (-)	GREEN/BLACK	At Factory Hood Pin Switch
FACTORY ALARM ARM		
ARMS WITH LOCK		
FACTORY ALARM DISARM		
DISARMS WITH UNLOCK		
DISARM NO UNLOCK (-)	RED or BLUE	Ignition Key Sense Wire
TACHOMETER WIRE	WHITE/GREEN	Module Behind Glove Box On Left Side
BRAKE WIRE (+)	GREEN/WHITE	Connector Right Of Fuse Box Or Brake Pedal Switch
HORN TRIGGER (-)	WHITE/RED	Steering Column
LEFT FRONT WINDOW UP	RED	At Motor In Left Front Door
LEFT FRONT WINDOW DOWN	GREEN	At Motor In Left Front Door
RIGHT FRONT WINDOW UP	RED	At Motor In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN	At Motor In Right Front Door
LEFT REAR WINDOW UP	RED	At Motor In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Motor In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Motor In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Motor In Right Rear Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 555XW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

### ADDITIONAL NOTES

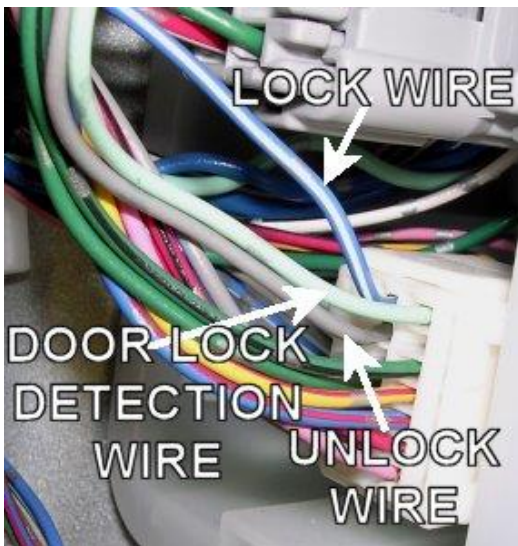

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio Harness	
RADIO SWITCHED	GRAY	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)	BLACK/RED	Radio Harness	
AMP TURN ON (+)	GREEN/YELLOW	Radio Harness	
LEFT FRONT SPEAKER(+)	PINK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (+)	BLACK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (+)	RED	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5.25"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8206, SCOSCHE TA2046B		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.



### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE & BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK	Ignition Harness
SECOND IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	PINK	Ignition Harness
POWER LOCK		
POWER UNLOCK		
<b>Notes:</b> To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using tw		
PARKING LIGHTS (+)	GREEN	Connector At Top Right Of Fuse Box
PARKING LIGHTS (-)	GREEN/RED	At Headlight Switch
HEADLIGHTS (-)	RED/BLUE	At Headlight Switch
DRIVER DOOR TRIGGER (-)	RED/BLUE	Module Behind Glove Box On Right Side
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Behind Glove Box On Right Side
REAR DOORS TRIGGER (-)	RED	Module Behind Glove Box On Right Side
DOME LIGHT SUPERVISION		
COMES ON WITH UNLOCK		
REAR HATCH TRIGGER (-)	WHITE/RED	Harness In Driver's Kick Panel
HOOD TRIGGER (-)	GREEN/BLACK	At Factory Hood Pin Switch
FACTORY ALARM ARM		
ARMS WITH LOCK		
FACTORY ALARM DISARM		
DISARMS WITH UNLOCK		
DISARM NO UNLOCK (-)	RED or BLUE	Ignition Key Sense Wire
TACHOMETER WIRE	WHITE/GREEN	Module Behind Glove Box On Left Side
BRAKE WIRE (+)	GREEN/WHITE	Connector Right Of Fuse Box Or Brake Pedal Switch
HORN TRIGGER (-)	WHITE/RED	Steering Column
LEFT FRONT WINDOW UP	RED	At Motor In Left Front Door
LEFT FRONT WINDOW DOWN	GREEN	At Motor In Left Front Door
RIGHT FRONT WINDOW UP	RED	At Motor In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN	At Motor In Right Front Door
LEFT REAR WINDOW UP	RED	At Motor In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Motor In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Motor In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Motor In Right Rear Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 555XW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ADDITIONAL NOTES

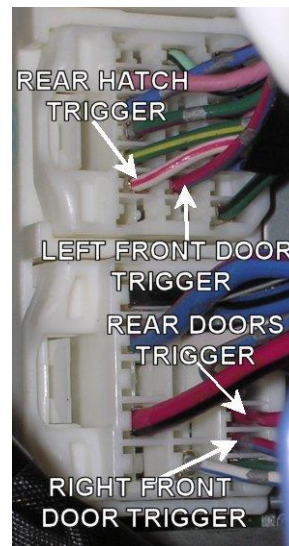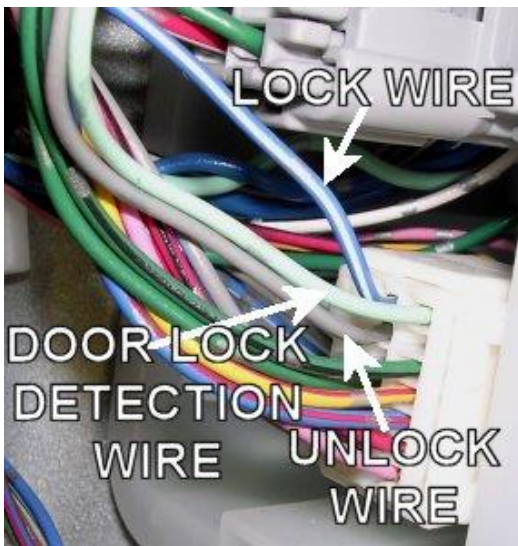

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio Harness	
RADIO SWITCHED	GRAY	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)	BLACK/RED	Radio Harness	
AMP TURN ON (+)	GREEN/YELLOW	Radio Harness	
LEFT FRONT SPEAKER(+)	PINK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (+)	BLACK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (+)	RED	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5.25"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8206, SCOSCHE TA2046B		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			



### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE & BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
IGNITION WIRE	BLACK	Ignition Harness
SECOND IGNITION WIRE	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE	PINK	Ignition Harness
POWER LOCK		
POWER UNLOCK		
<b>Notes:</b> To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using tw		
PARKING LIGHTS (+)	GREEN	Connector At Top Right Of Fuse Box
PARKING LIGHTS (-)	GREEN/RED	At Headlight Switch
HEADLIGHTS (-)	RED/BLUE	At Headlight Switch
DRIVER DOOR TRIGGER (-)	RED/BLUE	Module Behind Glove Box On Right Side
PASSENGER DOOR TRIGGER (-)	RED/BLUE	Module Behind Glove Box On Right Side
REAR DOORS TRIGGER (-)	RED	Module Behind Glove Box On Right Side
DOME LIGHT SUPERVISION		
COMES ON WITH UNLOCK		
REAR HATCH TRIGGER (-)	WHITE/RED	Harness In Driver's Kick Panel
HOOD TRIGGER (-)	GREEN/BLACK	At Factory Hood Pin Switch
FACTORY ALARM ARM		
ARMS WITH LOCK		
FACTORY ALARM DISARM		
DISARMS WITH UNLOCK		
DISARM NO UNLOCK (-)	RED or BLUE	Ignition Key Sense Wire
TACHOMETER WIRE	WHITE/GREEN	Module Behind Glove Box On Left Side
BRAKE WIRE (+)	GREEN/WHITE	Connector Right Of Fuse Box Or Brake Pedal Switch
HORN TRIGGER (-)	WHITE/RED	Steering Column
LEFT FRONT WINDOW UP	RED	At Motor In Left Front Door
LEFT FRONT WINDOW DOWN	GREEN	At Motor In Left Front Door
RIGHT FRONT WINDOW UP	RED	At Motor In Right Front Door
RIGHT FRONT WINDOW DOWN	GREEN	At Motor In Right Front Door
LEFT REAR WINDOW UP	RED	At Motor In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Motor In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Motor In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Motor In Right Rear Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 555XW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ADDITIONAL NOTES

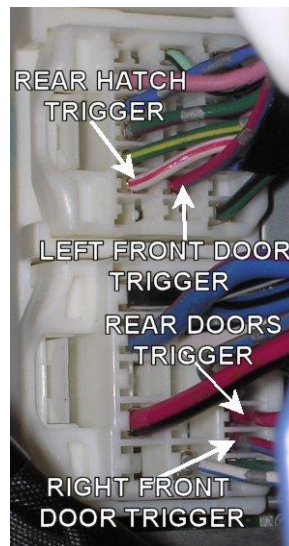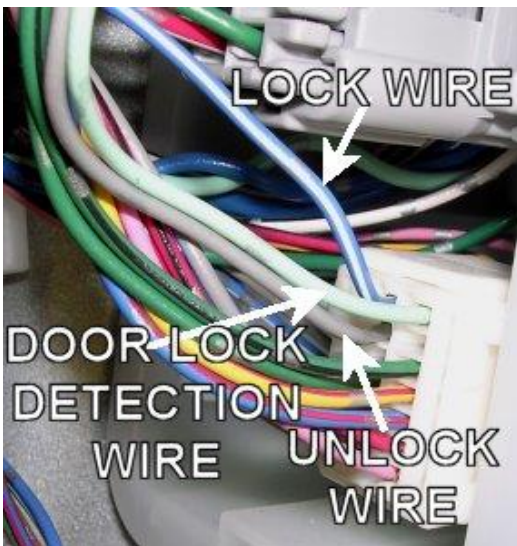

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio Harness	
RADIO SWITCHED	GRAY	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)	BLACK/RED	Radio Harness	
AMP TURN ON (+)	GREEN/YELLOW	Radio Harness	
LEFT FRONT SPEAKER(+)	PINK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (+)	BLACK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (+)	RED	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5.25"		
RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS	
METRA 99-8206, SCOSCHE TA2046B	METRA 70-1761, SCOSCHE TA02B	Not required	
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE & BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	BLACK	Ignition Harness
IGNITION WIRE	GRAY	Ignition Harness
SECOND IGNITION WIRE	GREEN	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER LOCK		
POWER UNLOCK		

**Notes:** To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using tw

PARKING LIGHTS (+)	WHITE or BROWN	In 20-Pin Plug In Driver's Kick Panel
PARKING LIGHTS (-)	PURPLE	Harness At Steering Column
LEFT FRONT DOOR TRIGGER (-)	BLACK	Module Behind Glove Box On Right Side
RIGHT FRONT DOOR TRIGGER (-)	LT.BLUE	Module Behind Glove Box On Right Side
REAR DOORS TRIGGER (-)	LT.GREEN	Module Behind Glove Box On Right Side
DOMELIGHT SUPERVISION (-)	GREEN	Module Behind Glove Box On Right Side
REAR HATCH TRIGGER (-)	GREEN	Module Behind Glove Box On Right Side
HOOD TRIGGER (-)	GREEN/BLACK or WHITE	At Factory Hood Pin Switch
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN	Ignition Harness
TACHOMETER WIRE	BLACK	At Data Link Connector Under Dash
BRAKE WIRE (+)	BLACK	Brake Pedal Switch
HORN TRIGGER (-)	PINK	Steering Column
LEFT FRONT WINDOW UP	PURPLE	At Motor In Left Front Door
LEFT FRONT WINDOW DOWN	GRAY	At Motor In Left Front Door
RIGHT FRONT WINDOW UP	PURPLE	At Motor In Right Front Door
RIGHT FRONT WINDOW DOWN	GRAY	At Motor In Right Front Door
LEFT REAR WINDOW UP	RED	At Motor In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Motor In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Motor In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Motor In Right Rear Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio Harness	
RADIO SWITCHED	GRAY	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)	BLACK/RED	Radio Harness	
AMP TURN ON (+)	GREEN/YELLOW	Radio Harness	
LEFT FRONT SPEAKER(+)	PINK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (+)	BLACK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (+)	RED	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5.25"		
RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS	
METRA 99-8206, SCOSCHE TA2046B	METRA 70-1761, SCOSCHE TA02B	Not required	
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE & BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	BLACK	Ignition Harness
IGNITION WIRE	GRAY	Ignition Harness
SECOND IGNITION WIRE	GREEN	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER LOCK		
POWER UNLOCK		

**Notes:** To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using tw

PARKING LIGHTS (+)	WHITE or BROWN	In 20-Pin Plug In Driver's Kick Panel
PARKING LIGHTS (-)	PURPLE	Harness At Steering Column
LEFT FRONT DOOR TRIGGER (-)	BLACK	Module Behind Glove Box On Right Side
RIGHT FRONT DOOR TRIGGER (-)	LT.BLUE	Module Behind Glove Box On Right Side
REAR DOORS TRIGGER (-)	LT.GREEN	Module Behind Glove Box On Right Side
DOMELIGHT SUPERVISION (-)	GREEN	Module Behind Glove Box On Right Side
REAR HATCH TRIGGER (-)	GREEN	Module Behind Glove Box On Right Side
HOOD TRIGGER (-)	GREEN/BLACK or WHITE	At Factory Hood Pin Switch
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN	Ignition Harness
TACHOMETER WIRE	BLACK	At Data Link Connector Under Dash
BRAKE WIRE (+)	BLACK	Brake Pedal Switch
HORN TRIGGER (-)	PINK	Steering Column
LEFT FRONT WINDOW UP	PURPLE	At Motor In Left Front Door
LEFT FRONT WINDOW DOWN	GRAY	At Motor In Left Front Door
RIGHT FRONT WINDOW UP	PURPLE	At Motor In Right Front Door
RIGHT FRONT WINDOW DOWN	GRAY	At Motor In Right Front Door
LEFT REAR WINDOW UP	RED	At Motor In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Motor In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Motor In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Motor In Right Rear Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio Harness	
RADIO SWITCHED	GRAY	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)	BLACK/RED	Radio Harness	
AMP TURN ON (+)	GREEN/YELLOW	Radio Harness	
LEFT FRONT SPEAKER(+)	PINK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (+)	BLACK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (+)	RED	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5.25"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8206, SCOSCHE TA2046B		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE & BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	BLACK	Ignition Harness
IGNITION WIRE	GRAY	Ignition Harness
SECOND IGNITION WIRE	GREEN	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER LOCK		
POWER UNLOCK		

**Notes:** To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using tw

PARKING LIGHTS (+)	WHITE or BROWN	In 20-Pin Plug In Driver's Kick Panel
PARKING LIGHTS (-)	PURPLE	Harness At Steering Column
LEFT FRONT DOOR TRIGGER (-)	BLACK	Module Behind Glove Box On Right Side
RIGHT FRONT DOOR TRIGGER (-)	LT.BLUE	Module Behind Glove Box On Right Side
REAR DOORS TRIGGER (-)	LT.GREEN	Module Behind Glove Box On Right Side
DOMELIGHT SUPERVISION (-)	GREEN	Module Behind Glove Box On Right Side
REAR HATCH TRIGGER (-)	GREEN	Module Behind Glove Box On Right Side
HOOD TRIGGER (-)	GREEN/BLACK or WHITE	At Factory Hood Pin Switch
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN	Ignition Harness
TACHOMETER WIRE	BLACK	At Data Link Connector Under Dash
BRAKE WIRE (+)	BLACK	Brake Pedal Switch
HORN TRIGGER (-)	PINK	Steering Column
LEFT FRONT WINDOW UP	PURPLE	At Motor In Left Front Door
LEFT FRONT WINDOW DOWN	GRAY	At Motor In Left Front Door
RIGHT FRONT WINDOW UP	PURPLE	At Motor In Right Front Door
RIGHT FRONT WINDOW DOWN	GRAY	At Motor In Right Front Door
LEFT REAR WINDOW UP	RED	At Motor In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Motor In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Motor In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Motor In Right Rear Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio Harness	
RADIO SWITCHED	GRAY	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)	BLACK/RED	Radio Harness	
AMP TURN ON (+)	GREEN/YELLOW	Radio Harness	
LEFT FRONT SPEAKER(+)	PINK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (+)	BLACK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (+)	RED	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5.25"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8206, SCOSCHE TA2046B		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE & BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK	Ignition Harness
IGNITION WIRE	GRAY	Ignition Harness
SECOND IGNITION WIRE	GREEN	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER LOCK		
POWER UNLOCK		
<b>Notes:</b> To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using tw		
PARKING LIGHTS (+)	WHITE or BROWN	In 20-Pin Plug In Driver's Kick Panel
PARKING LIGHTS (-)	PURPLE	Harness At Steering Column
LEFT FRONT DOOR TRIGGER (-)	BLACK	Module Behind Glove Box On Right Side
RIGHT FRONT DOOR TRIGGER (-)	LT.BLUE	Module Behind Glove Box On Right Side
REAR DOORS TRIGGER (-)	LT.GREEN	Module Behind Glove Box On Right Side
DOMELIGHT SUPERVISION (-)	GREEN	Module Behind Glove Box On Right Side
REAR HATCH TRIGGER (-)	GREEN	Module Behind Glove Box On Right Side
HOOD TRIGGER (-)	GREEN/BLACK or WHITE	At Factory Hood Pin Switch
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN	Ignition Harness
TACHOMETER WIRE	BLACK	At Data Link Connector Under Dash
BRAKE WIRE (+)	BLACK	Brake Pedal Switch
HORN TRIGGER (-)	PINK	Steering Column
LEFT FRONT WINDOW UP	PURPLE	At Motor In Left Front Door
LEFT FRONT WINDOW DOWN	GRAY	At Motor In Left Front Door
RIGHT FRONT WINDOW UP	PURPLE	At Motor In Right Front Door
RIGHT FRONT WINDOW DOWN	GRAY	At Motor In Right Front Door
LEFT REAR WINDOW UP	RED	At Motor In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Motor In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Motor In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Motor In Right Rear Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio Harness	
RADIO SWITCHED	GRAY	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)	BLACK/RED	Radio Harness	
AMP TURN ON (+)	GREEN/YELLOW	Radio Harness	
LEFT FRONT SPEAKER(+)	PINK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (+)	BLACK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (+)	RED	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5.25"		
RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS	
METRA 99-8206, SCOSCHE TA2046B	METRA 70-1761, SCOSCHE TA02B	Not required	
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE & BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK/WHITE	Ignition Harness
SECOND STARTER WIRE	BLACK	Ignition Harness
IGNITION WIRE	GRAY	Ignition Harness
SECOND IGNITION WIRE	GREEN	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER LOCK		
POWER UNLOCK		

**Notes:** To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using tw

PARKING LIGHTS (+)	WHITE or BROWN	In 20-Pin Plug In Driver's Kick Panel
PARKING LIGHTS (-)	PURPLE	Harness At Steering Column
LEFT FRONT DOOR TRIGGER (-)	BLACK	Module Behind Glove Box On Right Side
RIGHT FRONT DOOR TRIGGER (-)	LT.BLUE	Module Behind Glove Box On Right Side
REAR DOORS TRIGGER (-)	LT.GREEN	Module Behind Glove Box On Right Side
DOMELIGHT SUPERVISION (-)	GREEN	Module Behind Glove Box On Right Side
REAR HATCH TRIGGER (-)	GREEN	Module Behind Glove Box On Right Side
HOOD TRIGGER (-)	GREEN/BLACK or WHITE	At Factory Hood Pin Switch
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN	Ignition Harness
TACHOMETER WIRE	BLACK	At Data Link Connector Under Dash
BRAKE WIRE (+)	BLACK	Brake Pedal Switch
HORN TRIGGER (-)	PINK	Steering Column
LEFT FRONT WINDOW UP	PURPLE	At Motor In Left Front Door
LEFT FRONT WINDOW DOWN	GRAY	At Motor In Left Front Door
RIGHT FRONT WINDOW UP	PURPLE	At Motor In Right Front Door
RIGHT FRONT WINDOW DOWN	GRAY	At Motor In Right Front Door
LEFT REAR WINDOW UP	RED	At Motor In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Motor In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Motor In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Motor In Right Rear Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio Harness	
RADIO SWITCHED	GRAY	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)	BLACK/RED	Radio Harness	
AMP TURN ON (+)	GREEN/YELLOW	Radio Harness	
LEFT FRONT SPEAKER(+)	PINK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (+)	BLACK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (+)	RED	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5.25"		
RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS	
METRA 99-8206, SCOSCHE TA2046B	METRA 70-1761, SCOSCHE TA02B	Not required	
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE & BLUE/YELLOW	Ignition Harness
STARTER WIRE	BLACK	Ignition Harness
IGNITION WIRE	GRAY	Ignition Harness
SECOND IGNITION WIRE	GREEN	Ignition Harness
ACCESSORY WIRE	BLUE	Ignition Harness
POWER LOCK		
POWER UNLOCK		
<b>Notes:</b> To lock the vehicle you must supply a negative (-) pulse to the LOCK WIRE while interrupting the DOOR LOCK DETECTION WIRE with a relay. To unlock the doors, you must provide a (-) negative pulse to the UNLOCK WIRE and the DOOR LOCK DETECTION WIRE using tw		
PARKING LIGHTS (+)	WHITE or BROWN	In 20-Pin Plug In Driver's Kick Panel
PARKING LIGHTS (-)	PURPLE	Harness At Steering Column
LEFT FRONT DOOR TRIGGER (-)	BLACK	Module Behind Glove Box On Right Side
RIGHT FRONT DOOR TRIGGER (-)	LT.BLUE	Module Behind Glove Box On Right Side
REAR DOORS TRIGGER (-)	LT.GREEN	Module Behind Glove Box On Right Side
DOMELIGHT SUPERVISION (-)	GREEN	Module Behind Glove Box On Right Side
REAR HATCH TRIGGER (-)	GREEN	Module Behind Glove Box On Right Side
HOOD TRIGGER (-)	GREEN/BLACK or WHITE	At Factory Hood Pin Switch
FACTORY ALARM ARM	ARMS WITH LOCK	
FACTORY ALARM DISARM	DISARMS WITH UNLOCK	
DISARM NO UNLOCK (-)	GREEN	Ignition Harness
TACHOMETER WIRE	BLACK	At Data Link Connector Under Dash
BRAKE WIRE (+)	BLACK	Brake Pedal Switch
HORN TRIGGER (-)	PINK	Steering Column
LEFT FRONT WINDOW UP	PURPLE	At Motor In Left Front Door
LEFT FRONT WINDOW DOWN	GRAY	At Motor In Left Front Door
RIGHT FRONT WINDOW UP	PURPLE	At Motor In Right Front Door
RIGHT FRONT WINDOW DOWN	GRAY	At Motor In Right Front Door
LEFT REAR WINDOW UP	RED	At Motor In Left Rear Door
LEFT REAR WINDOW DOWN	GREEN	At Motor In Left Rear Door
RIGHT REAR WINDOW UP	RED	At Motor In Right Rear Door
RIGHT REAR WINDOW DOWN	GREEN	At Motor In Right Rear Door

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio Harness	
RADIO SWITCHED	GRAY	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
ILLUMINATION (+)		Radio Harness	
POWER ANTENNA (+)	BLACK/RED	Radio Harness	
AMP TURN ON (+)	GREEN/YELLOW	Radio Harness	
LEFT FRONT SPEAKER(+)	PINK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT FRONT SPEAKER (-)	VIOLET	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (+)	LIGHT GREEN	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT FRONT SPEAKER (-)	BLUE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (+)	BLACK	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
LEFT REAR SPEAKER (-)	YELLOW	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (+)	RED	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
RIGHT REAR SPEAKER (-)	WHITE	At Speaker or Amplifier Behind Trim In Rear Driver Quarter	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	5.25"		
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8206, SCOSCHE TA2046B		METRA 70-1761, SCOSCHE TA02B	Not required
Please verify all part numbers before ordering.			

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.