



TRIPLE S *Customs*

ACURA RSX 2002-2005 VEHICLE WIRING

WIRING INFORMATION 2002 Acura RSX

| WIRE | WIRE COLOR | WIRE LOCATION |
|----------------------------|----------------------|--|
| 12V CONSTANT WIRE | WHITE | Ignition Harness |
| STARTER WIRE | BLACK/WHITE | Ignition Harness |
| IGNITION WIRE | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION WIRE | BLACK/RED | Ignition Harness |
| ACCESSORY WIRE | WHITE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | WHITE/BLUE | In Blue Connector In Driver's Kick Panel |
| POWER DOOR UNLOCK (-) | WHITE/GREEN | |
| PARKING LIGHTS (+) | RED/BLK | Harness Above Steering Column Leading To Fuse Box |
| PARKING LIGHTS (-) | BLUE | |
| DRIVER DOOR TRIGGER (-) | GREEN | Factory Alarm Module Under Dash Left Of Steering Column. Factory Alarm Is A White Module With Two Connectors |
| PASSENGER DOOR TRIGGER (-) | LT.GREEN/RED | |
| DOME SUPERVISION | COMES ON WITH UNLOCK | |
| TRUNK TRIGGER (-) | RED | Factory Alarm Module Under Dash Left Of Steering Column |
| HOOD TRIGGER (-) | GREEN/BLACK | |
| FACTORY ALARM ARM (-) | WHITE/RED | |
| FACTORY ALARM DISARM (-) | WHITE | |
| TACHOMETER WIRE | BLUE | Small Connector Behind Driver Headlight |
| BRAKE WIRE (+) | WHITE/BLACK | At Brake Pedal Switch |
| HORN TRIGGER (-) | ORANGE | Harness At Steering Column |
| HORN TRIGGER (-) | GREEN | Factory Alarm Module Under Dash Left Of Steering Column |
| LEFT FRONT WINDOW UP | RED/BLACK | At Window Switch Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | RED/YELLOW | At Window Switch Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/RED | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | BLUE/WHITE | Harness In Driver's Kick From Driver Door |


This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.

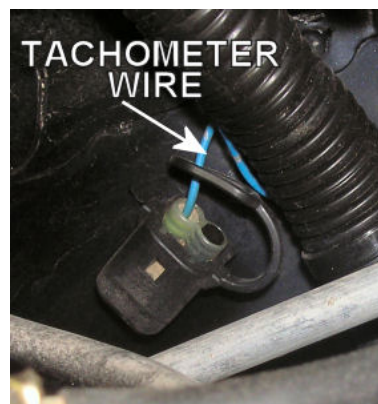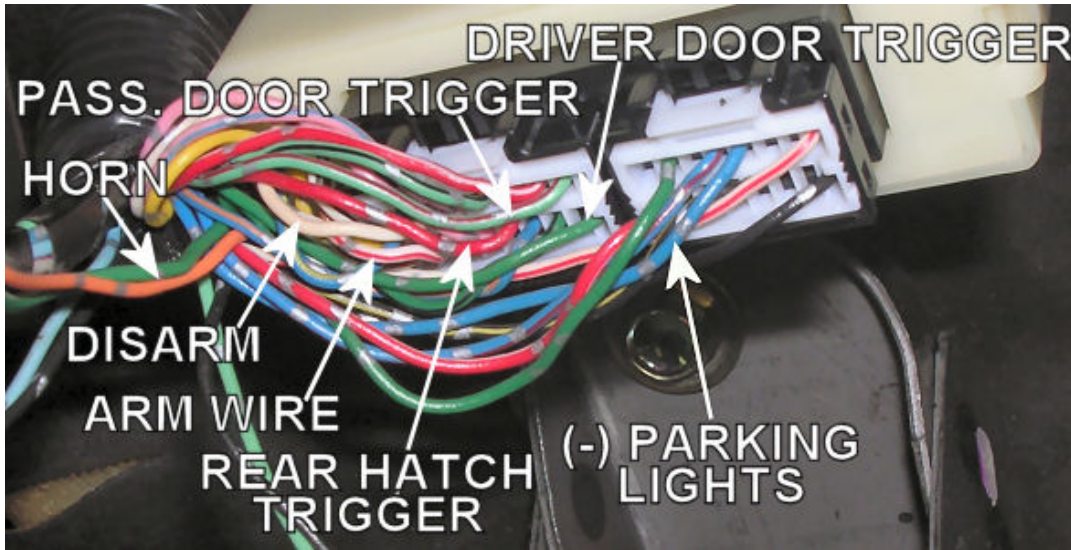

WIRING INFORMATION 2003 Acura RSX

| WIRE | WIRE COLOR | WIRE LOCATION |
|----------------------------|--------------|--|
| 12V CONSTANT WIRE | WHITE | Ignition Harness |
| STARTER WIRE | BLACK/WHITE | Ignition Harness |
| IGNITION WIRE | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION WIRE | BLACK/RED | Ignition Harness |
| ACCESSORY WIRE | WHITE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | WHITE/BLUE | In Blue Connector In Driver's Kick Panel |
| POWER DOOR UNLOCK (-) | WHITE/GREEN | |
| PARKING LIGHTS (+) | RED/BLK | Harness Above Steering Column Leading To Fuse Box |
| PARKING LIGHTS (-) | BLUE | |
| DRIVER DOOR TRIGGER (-) | GREEN | Factory Alarm Module Under Dash Left Of Steering Column. Factory Alarm Is A White Module With Two Connectors |
| PASSENGER DOOR TRIGGER (-) | LT.GREEN/RED | |
| TRUNK TRIGGER (-) | RED | |
| HOOD TRIGGER (-) | GREEN/BLACK | Factory Alarm Module Under Dash Left Of Steering Column |
| FACTORY ALARM ARM (-) | WHITE/RED | |
| FACTORY ALARM DISARM (-) | WHITE | |
| TACHOMETER WIRE | BLUE | Small Connector Behind Driver Headlight |
| BRAKE WIRE (+) | WHITE/BLACK | At Brake Pedal Switch |
| HORN TRIGGER (-) | ORANGE | Harness At Steering Column |
| HORN TRIGGER (-) | GREEN | Factory Alarm Module Under Dash Left Of Steering Column |
| LEFT FRONT WINDOW UP | RED/BLACK | At Window Switch Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | RED/YELLOW | At Window Switch Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/RED | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | BLUE/WHITE | Harness In Driver's Kick From Driver Door |


This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.

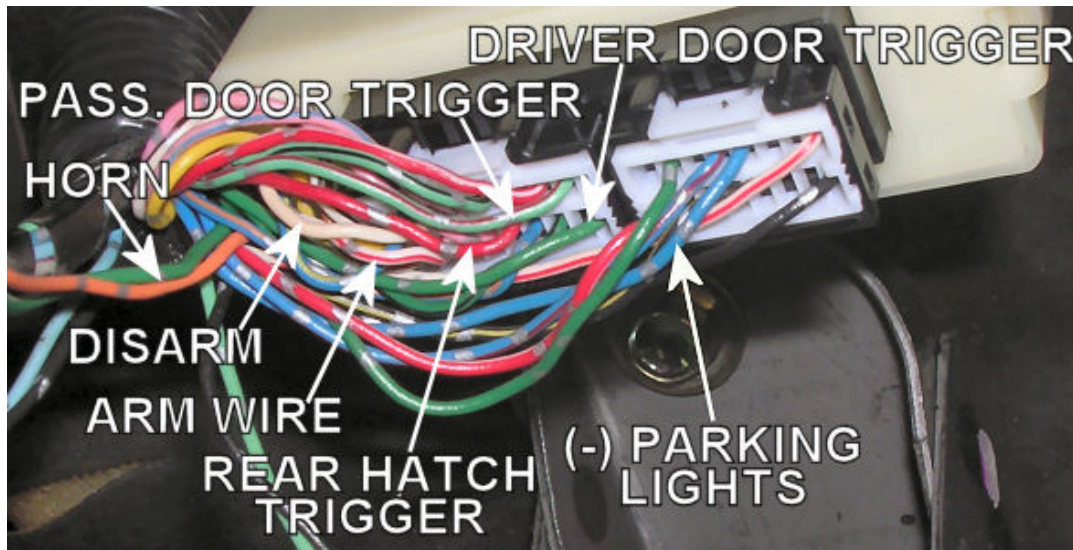

WIRING INFORMATION 2004 Acura RSX

| WIRE | WIRE COLOR | WIRE LOCATION |
|----------------------------|----------------------|--|
| 12V CONSTANT WIRE | WHITE | Ignition Harness |
| STARTER WIRE | BLACK/WHITE | Ignition Harness |
| IGNITION WIRE | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION WIRE | BLACK/RED | Ignition Harness |
| ACCESSORY WIRE | WHITE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | WHITE/BLUE | In Blue Connector In Driver's Kick Panel |
| POWER DOOR UNLOCK (-) | WHITE/GREEN | |
| PARKING LIGHTS (+) | RED/BLK | Harness Above Steering Column Leading To Fuse Box |
| PARKING LIGHTS (-) | BLUE | Factory Alarm Module Under Dash Left Of Steering Column. Factory Alarm Is A White Module With Two Connectors |
| DRIVER DOOR TRIGGER (-) | GREEN | |
| PASSENGER DOOR TRIGGER (-) | LT.GREEN/RED | Factory Alarm Module Under Dash Left Of Steering Column |
| DOME SUPERVISION | COMES ON WITH UNLOCK | |
| TRUNK TRIGGER (-) | RED | |
| HOOD TRIGGER (-) | GREEN/BLACK | |
| FACTORY ALARM ARM (-) | WHITE/RED | |
| FACTORY ALARM DISARM (-) | WHITE | Small Connector Behind Driver Headlight |
| TACHOMETER WIRE | BLUE | |
| BRAKE WIRE (+) | WHITE/BLACK | At Brake Pedal Switch |
| HORN TRIGGER (-) | ORANGE | Harness At Steering Column |
| HORN TRIGGER (-) | GREEN | Factory Alarm Module Under Dash Left Of Steering Column |
| LEFT FRONT WINDOW UP | RED/BLACK | At Window Switch Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | RED/YELLOW | At Window Switch Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/RED | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | BLUE/WHITE | Harness In Driver's Kick From Driver Door |

This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.

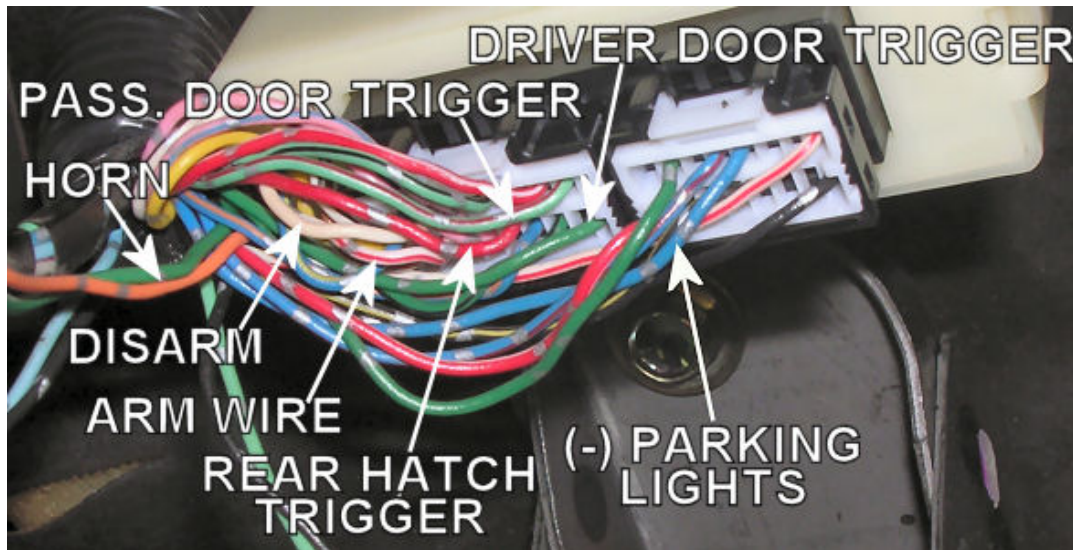

WIRING

INFORMATION 2005 Acura RSX

| WIRE | WIRE COLOR | WIRE LOCATION |
|----------------------------|----------------------|--|
| 12V CONSTANT WIRE | WHITE | Ignition Harness |
| STARTER WIRE | BLACK/WHITE | Ignition Harness |
| IGNITION WIRE | BLACK/YELLOW | Ignition Harness |
| SECOND IGNITION WIRE | BLACK/RED | Ignition Harness |
| ACCESSORY WIRE | WHITE/RED | Ignition Harness |
| POWER DOOR LOCK (-) | WHITE/BLUE | In Blue Connector In Driver's Kick Panel |
| POWER DOOR UNLOCK (-) | WHITE/GREEN | |
| PARKING LIGHTS (+) | RED/BLK | Harness Above Steering Column Leading To Fuse Box |
| PARKING LIGHTS (-) | BLUE | |
| DRIVER DOOR TRIGGER (-) | GREEN | Factory Alarm Module Under Dash Left Of Steering Column. Factory Alarm Is A White Module With Two Connectors |
| PASSENGER DOOR TRIGGER (-) | LT.GREEN/RED | |
| DOME SUPERVISION | COMES ON WITH UNLOCK | |
| TRUNK TRIGGER (-) | RED | Factory Alarm Module Under Dash Left Of Steering Column |
| HOOD TRIGGER (-) | GREEN/BLACK | |
| FACTORY ALARM ARM (-) | WHITE/RED | |
| FACTORY ALARM DISARM (-) | WHITE | |
| TACHOMETER WIRE | BLUE | Small Connector Behind Driver Headlight |
| BRAKE WIRE (+) | WHITE/BLACK | At Brake Pedal Switch |
| HORN TRIGGER (-) | ORANGE | Harness At Steering Column |
| HORN TRIGGER (-) | GREEN | Factory Alarm Module Under Dash Left Of Steering Column |
| LEFT FRONT WINDOW UP | RED/BLACK | At Window Switch Inside Driver's Door |
| LEFT FRONT WINDOW DOWN | RED/YELLOW | At Window Switch Inside Driver's Door |
| RIGHT FRONT WINDOW UP | BLUE/RED | Harness In Driver's Kick From Driver Door |
| RIGHT FRONT WINDOW DOWN | BLUE/WHITE | Harness In Driver's Kick From Driver Door |

This vehicle has a factory Immobilizer system. This needs to be bypassed when installing a remote start system.

