

TRIPLE S *Customs*

DODGE STEALTH 1991-1996 VEHICLE WIRING

WIRING INFORMATION 1991 Dodge Stealth

WIRE	WIRE COLOR	Location
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Plug Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/BLUE or BROWN/WHITE	Driver's Kick Panel Or Door Harness
POWER DOOR UNLOCK (-)	BROWN or BROWN/BLUE	Driver's Kick Panel Or Door Harness
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module Or Hood Pin Switch
TACHOMETER WIRE	WHITE	Behind Instrument Cluster
Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	
FACTORY ALARM DISARM (-)	LT.GREEN	Anti-Theft Module
The factory alarm disarm wire must be relay isolated from the door key cylinder		
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		

WIRING INFORMATION 1992 Dodge Stealth




WIRE	WIRE COLOR	Location
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Plug Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/BLUE or BROWN/WHITE	Driver's Kick Panel Or Door Harness
POWER DOOR UNLOCK (-)	BROWN or BROWN/BLUE	Driver's Kick Panel Or Door Harness
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module Or Hood Pin Switch
TACHOMETER WIRE	WHITE	Behind Instrument Cluster
Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	
FACTORY ALARM DISARM (-)	LT.GREEN	Anti-Theft Module
The factory alarm disarm wire must be relay isolated from the door key cylinder		
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		

WIRING INFORMATION 1993 Dodge Stealth

WIRE	WIRE COLOR	Location
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Plug Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/BLUE or BROWN/WHITE	Driver's Kick Panel Or Door Harness
POWER DOOR UNLOCK (-)	BROWN or BROWN/BLUE	Driver's Kick Panel Or Door Harness
DOOR TRIGGER (-)	RED/GREEN	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
If vehicle is equipped with anti-theft unit, trunk trigger can also be found as a BLUE/WHITE wire at OEM anti-theft module.		
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module Or Hood Pin Switch
TACHOMETER WIRE	WHITE	Behind Instrument Cluster
Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	
FACTORY ALARM DISARM (-)	LT.GREEN	Anti-Theft Module
The factory alarm disarm wire must be relay isolated from the door key cylinder		
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		




WIRING INFORMATION 1994 Dodge Stealth

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/WHITE	At Module Under Dash To The Left Of The Steering Column
POWER DOOR UNLOCK (-)	BROWN/BLUE	
DOOR TRIGGER (-)	RED/GREEN	In Harness To The Left Of Steering Column
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
If vehicle is equipped with anti-theft unit, trunk trigger can also be found as a BLUE/WHITE wire at OEM anti-theft module.		
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	
FACTORY ALARM DISARM (-)	GREEN/BLUE	Anti-Theft Module
Factory alarm disarm wire must be relay isolated from the door key cylinder		
TACHOMETER	WHITE	Instrument Cluster
Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver's Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		

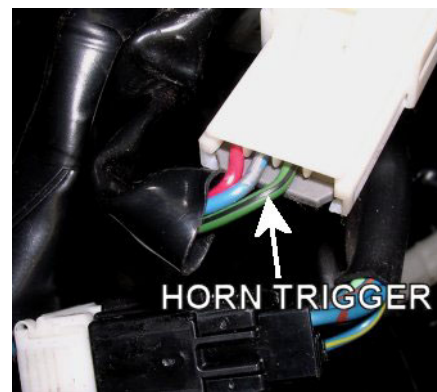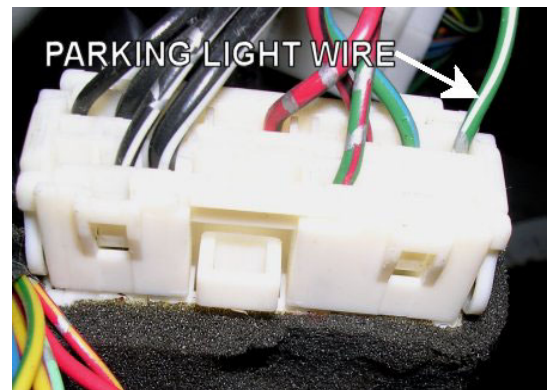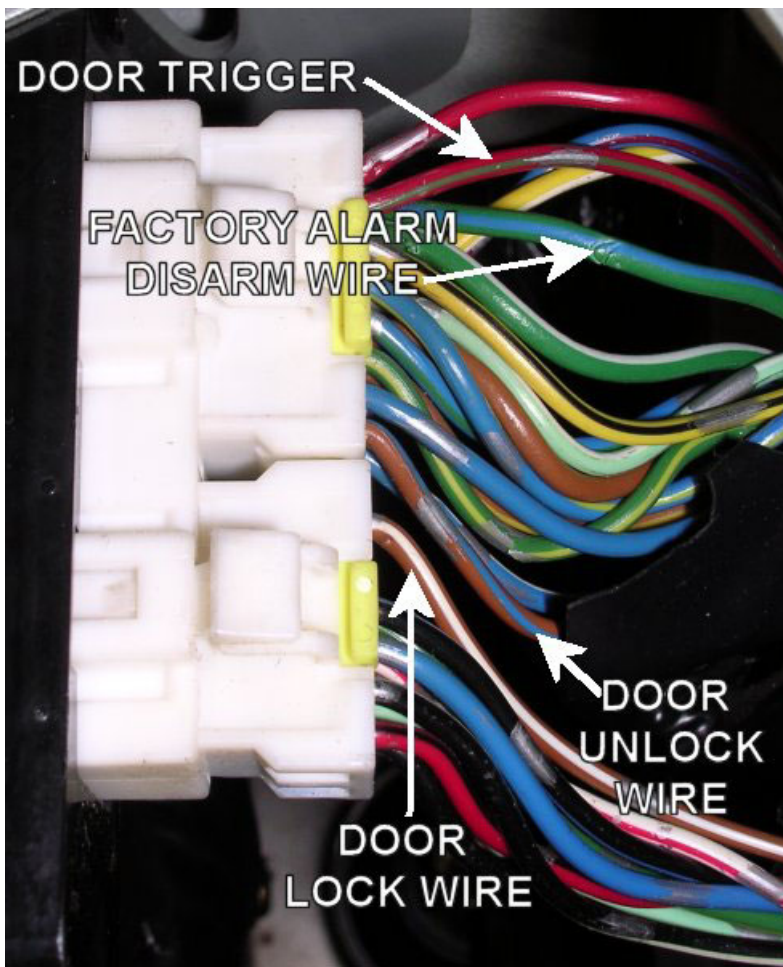

WIRING INFORMATION 1995 Dodge Stealth

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/WHITE	At Module Under Dash To The Left Of The Steering Column
POWER DOOR UNLOCK (-)	BROWN/BLUE	
DOOR TRIGGER (-)	RED/GREEN	In Harness To The Left Of Steering Column
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
If vehicle is equipped with anti-theft unit, trunk trigger can also be found as a BLUE/WHITE wire at OEM anti-theft module.		
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	
FACTORY ALARM DISARM (-)	GREEN/BLUE	Anti-Theft Module
Factory alarm disarm wire must be relay isolated from the door key cylinder		
TACHOMETER	WHITE	Instrument Cluster
Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver's Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		

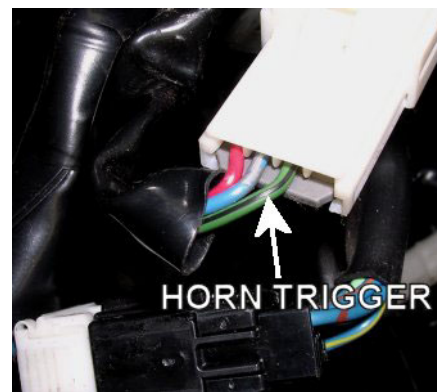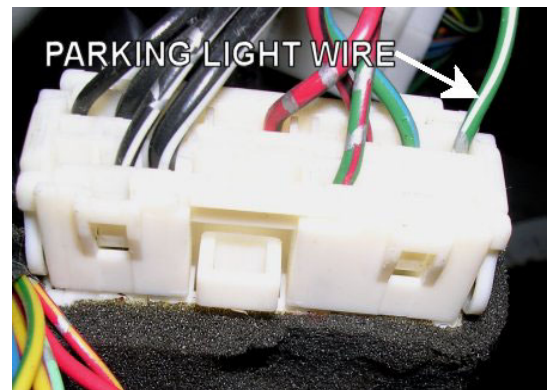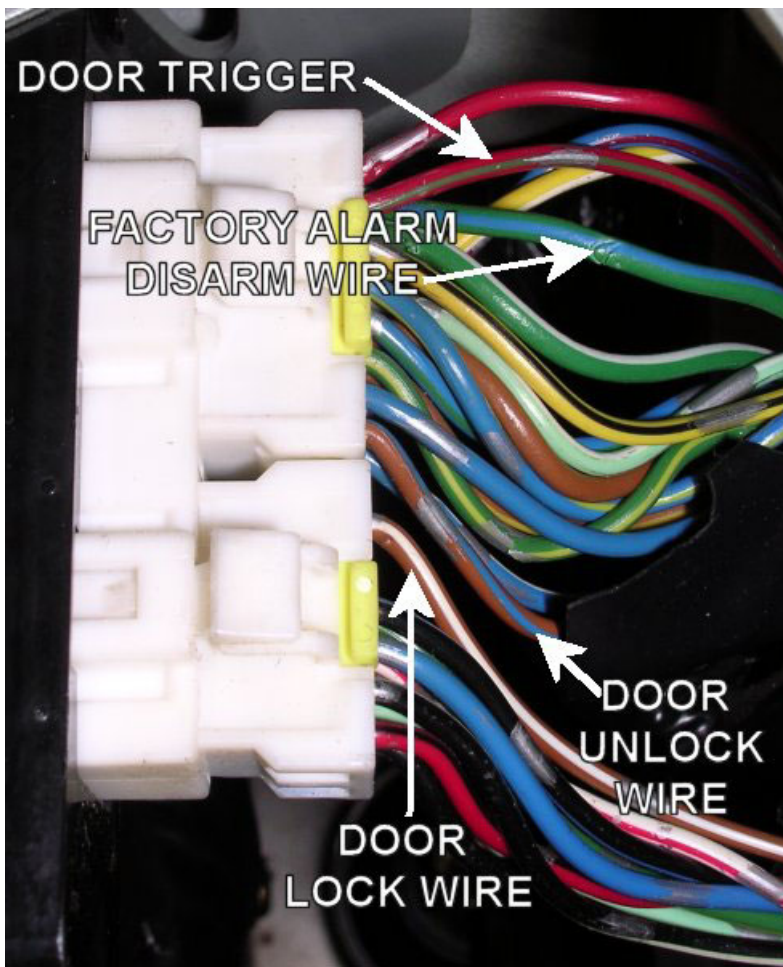

WIRING INFORMATION 1996 Dodge Stealth

WIRE	WIRE COLOR	LOCATION
12V CONSTANT	WHITE or BLACK	Ignition Harness
12V IGNITION	BLACK/WHITE	Ignition Harness
SECOND 12V IGNITION	BLUE/BLACK	Ignition Harness
12V ACCESSORY	BLUE or BLUE/WHITE	Ignition Harness
STARTER	BLACK/YELLOW	Ignition Harness
PARKING LIGHTS (+)	GREEN/WHITE	White Harness In Driver's Kick Panel
POWER DOOR LOCK (-)	BROWN/WHITE	At Module Under Dash To The Left Of The Steering Column
POWER DOOR UNLOCK (-)	BROWN/BLUE	
DOOR TRIGGER (-)	RED/GREEN	In Harness To The Left Of Steering Column
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
If vehicle is equipped with anti-theft unit, trunk trigger can also be found as a BLUE/WHITE wire at OEM anti-theft module.		
HOOD TRIGGER (-)	BLUE/BLACK	Anti-Theft Module
FACTORY ALARM ARM	Arms When Locking Doors With Driver's Door Open	
FACTORY ALARM DISARM (-)	GREEN/BLUE	Anti-Theft Module
Factory alarm disarm wire must be relay isolated from the door key cylinder		
TACHOMETER	WHITE	Instrument Cluster
Tachometer wire also found at ECM behind center console. On models equipped with a SOHC engine, you can also use WHITE/BLACK at the ignition coil under the hood for the tachometer wire.		
BRAKE WIRE (+)	GREEN	Brake Switch Or Driver's Kick Panel
HORN TRIGGER (-)	GREEN/BLACK	Steering Column
LEFT FRONT WINDOW UP	BLUE/ORANGE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	BLUE/BLACK	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
Anti-theft module is located under the dash to the left of the steering column close to the drivers kick.		

