
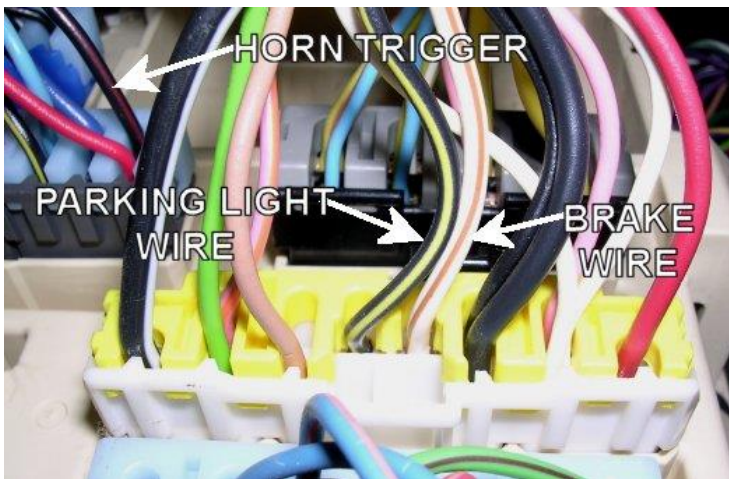


### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	PINK/BLACK	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	DARK BLUE	Ignition Harness
SECOND IGNITION	GREEN/RED	Ignition Harness
ACCESSORY	BLACK/ORANGE	Ignition Harness
SECOND ACCESSORY	BLACK/WHITE	Ignition Harness
POWER DOOR LOCK	WHITE/GREEN	Black Plug Behind Fuse Box Facing Down
<b>Notes:</b> One wire is used to lock and unlock the doors. Lock requires a positive (+) trigger thru a 620-ohm resistor. Unlock requires a positive (+) trigger thru a 2.7K-ohm resistor. Relays must be used.		
POWER DOOR UNLOCK	Same wire as lock	
PARKING LIGHTS (+)	BLACK/YELLOW	Plug Behind Fuse Box
DOOR TRIGGER (-)	YELLOW	Plug In Front Of Fuse Box
TRUNK TRIGGER (-)	TAN/BLACK	Driver's Kick Panel
TRUNK RELEASE (+)	BLACK/WHITE	Driver's Kick Panel
FACTORY ALARM ARM	GREEN/ORANGE	Black Plug Behind Fuse Box Facing Down
FACTORY ALARM DISARM	Same wire as arm	Black Plug Behind Fuse Box Facing Down
<b>Notes:</b> One wire is used to arm and disarm the factory security system. Test using the key in the driver's door. Arm requires a positive (+) trigger through a 940-ohm resistor. This will also lock all the doors. Disarm requires a positive (+) trigger through a 4		
TACHOMETER WIRE	BLACK/GRAY	Ignition Coil
<b>Notes:</b> When installing a remote start system, it is possible to use an injector wire as the tachometer wire. Use an injector wire that IS NOT DK.GREEN/ORANGE.		
BRAKE WIRE (+)	WHITE/TAN	Plug Behind Fuse Box
HORN TRIGGER (-)	BLACK/RED	Plug Behind Fuse Box
LEFT FRONT WINDOW UP	LT.BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GRAY/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### ADDITIONAL NOTES

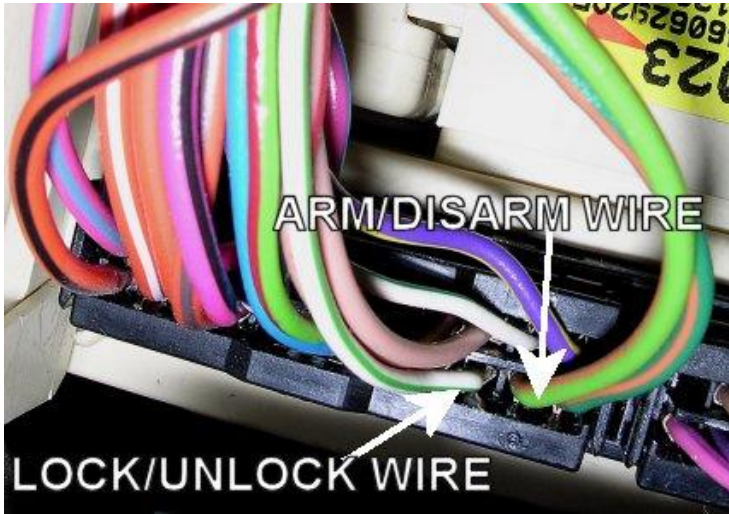

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	PINK/YELLOW	Radio Harness	
RADIO SWITCHED	RED/WHITE	Radio Harness	
RADIO GROUND	Not in wiring harness	Ground to chassis strap	
ILLUMINATION (+)	ORANGE/BROWN	Radio Harness	
POWER ANTENNA (+)	ORANGE/RED	Radio Harness	
LEFT FRONT SPEAKER(+)	LIGHT GREEN/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	LIGHT GREEN/VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	LIGHT BLUE/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	LIGHT BLUE/VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BROWN/YELLOW	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BLUE/LIGHT BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	DARK BLUE/WHITE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	DARK BLUE/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3.5"	6x9"	In trunk under rear deck	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-6502, SCOSCHE CJ1282B	METRA 70-1817, SCOSCHE CR01	Not required

Please verify all part numbers before ordering.



### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	PINK/BLACK	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	DARK BLUE	Ignition Harness
SECOND IGNITION	GREEN/RED	Ignition Harness
ACCESSORY	BLACK/ORANGE	Ignition Harness
SECOND ACCESSORY	BLACK/WHITE	Ignition Harness
POWER DOOR LOCK	WHITE/GREEN	Black Plug Behind Fuse Box Facing Down
<b>Notes:</b> One wire is used to lock and unlock the doors. Lock requires a positive (+) trigger thru a 620-ohm resistor. Unlock requires a positive (+) trigger thru a 2.7K-ohm resistor. Relays must be used.		
POWER DOOR UNLOCK	Same wire as lock	
PARKING LIGHTS (+)	BLACK/YELLOW	Plug Behind Fuse Box
DOOR TRIGGER (-)	YELLOW	Plug In Front Of Fuse Box
TRUNK TRIGGER (-)	TAN/BLACK	Driver's Kick Panel
TRUNK RELEASE (+)	BLACK/WHITE	Driver's Kick Panel
FACTORY ALARM ARM	GREEN/ORANGE	Black Plug Behind Fuse Box Facing Down
FACTORY ALARM DISARM	Same wire as arm	Black Plug Behind Fuse Box Facing Down
<b>Notes:</b> One wire is used to arm and disarm the factory security system. Test using the key in the driver's door. Arm requires a positive (+) trigger through a 940-ohm resistor. This will also lock all the doors. Disarm requires a positive (+) trigger through a 4		
TACHOMETER WIRE	BLACK/GRAY	Ignition Coil
<b>Notes:</b> When installing a remote start system, it is possible to use an injector wire as the tachometer wire. Use an injector wire that IS NOT DK.GREEN/ORANGE.		
BRAKE WIRE (+)	WHITE/TAN	Plug Behind Fuse Box
HORN TRIGGER (-)	BLACK/RED	Plug Behind Fuse Box
LEFT FRONT WINDOW UP	LT.BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GRAY/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A

Please verify all part numbers before ordering.

### ADDITIONAL NOTES

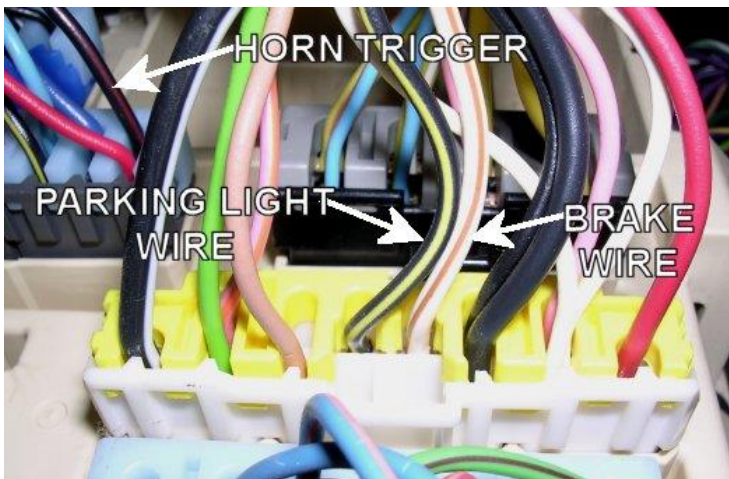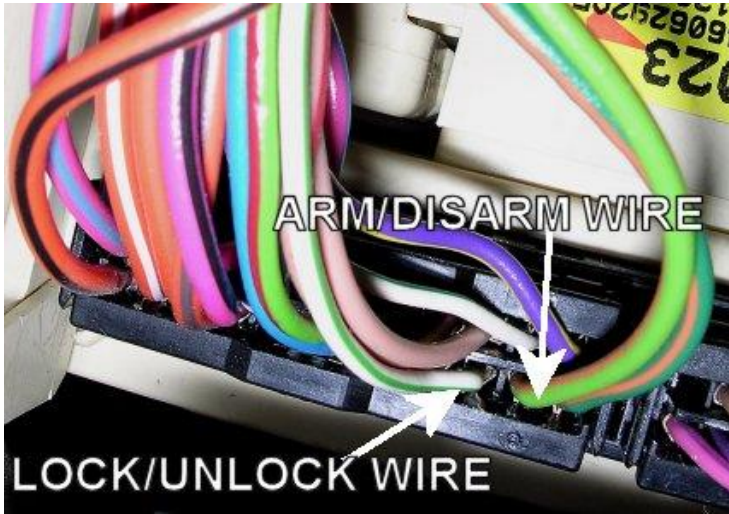

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	PINK/YELLOW	Radio Harness	
RADIO SWITCHED	RED/WHITE	Radio Harness	
RADIO GROUND	Not in wiring harness	Ground to chassis strap	
ILLUMINATION (+)	ORANGE/BROWN	Radio Harness	
POWER ANTENNA (+)	ORANGE/RED	Radio Harness	
LEFT FRONT SPEAKER(+)	LIGHT GREEN/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	LIGHT GREEN/VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	LIGHT BLUE/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	LIGHT BLUE/VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BROWN/YELLOW	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BLUE/LIGHT BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	DARK BLUE/WHITE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	DARK BLUE/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3.5"	6x9"	In trunk under rear deck	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-6502, SCOSCHE CJ1282B	METRA 70-1817, SCOSCHE CR01	Not required



Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	PINK/BLACK	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	DARK BLUE	Ignition Harness
SECOND IGNITION	GREEN/RED	Ignition Harness
ACCESSORY	BLACK/ORANGE	Ignition Harness
SECOND ACCESSORY	BLACK/WHITE	Ignition Harness
POWER DOOR LOCK	WHITE/GREEN	Black Plug Behind Fuse Box Facing Down
<b>Notes:</b> One wire is used to lock and unlock the doors. Lock requires a positive (+) trigger thru a 620-ohm resistor. Unlock requires a positive (+) trigger thru a 2.7K-ohm resistor. Relays must be used.		
POWER DOOR UNLOCK	Same wire as lock	
PARKING LIGHTS (+)	BLACK/YELLOW	Plug Behind Fuse Box
DOOR TRIGGER (-)	YELLOW	Plug In Front Of Fuse Box
TRUNK TRIGGER (-)	TAN/BLACK	Driver's Kick Panel
TRUNK RELEASE (+)	BLACK/WHITE	Driver's Kick Panel
FACTORY ALARM ARM	GREEN/ORANGE	Black Plug Behind Fuse Box Facing Down
FACTORY ALARM DISARM	Same wire as arm	Black Plug Behind Fuse Box Facing Down
<b>Notes:</b> One wire is used to arm and disarm the factory security system. Test using the key in the driver's door. Arm requires a positive (+) trigger through a 940-ohm resistor. This will also lock all the doors. Disarm requires a positive (+) trigger through a 4		
TACHOMETER WIRE	BLACK/GRAY	Ignition Coil
<b>Notes:</b> When installing a remote start system, it is possible to use an injector wire as the tachometer wire. Use an injector wire that IS NOT DK.GREEN/ORANGE.		
BRAKE WIRE (+)	WHITE/TAN	Plug Behind Fuse Box
HORN TRIGGER (-)	BLACK/RED	Plug Behind Fuse Box
LEFT FRONT WINDOW UP	LT.BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GRAY/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### ADDITIONAL NOTES

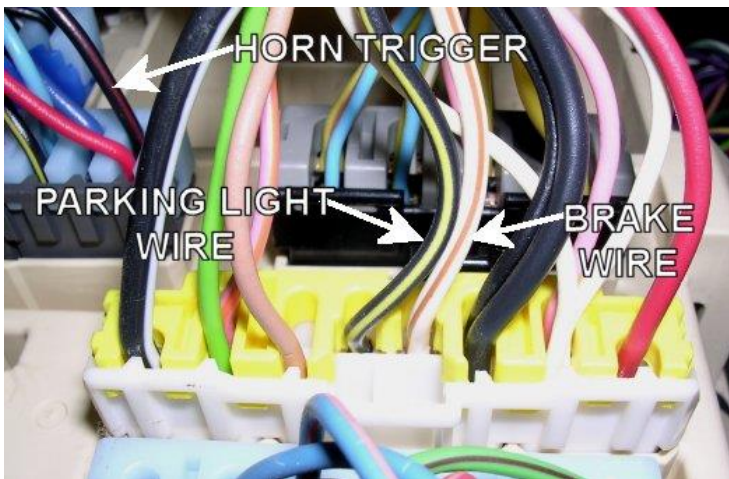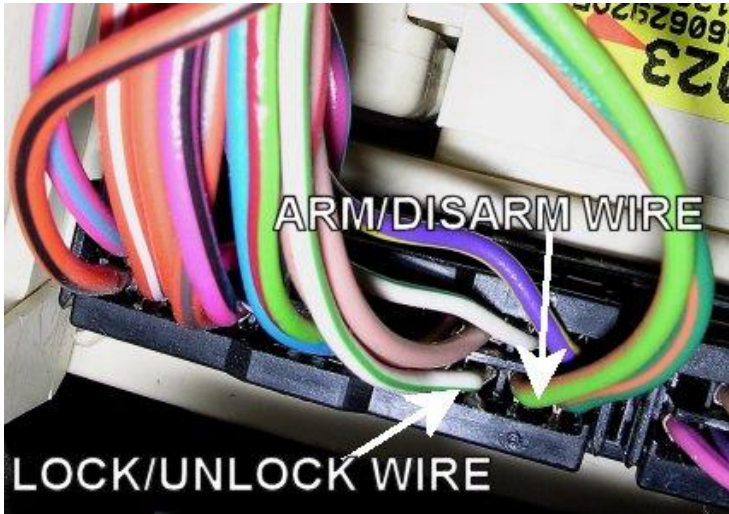

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	PINK/YELLOW	Radio Harness	
RADIO SWITCHED	RED/WHITE	Radio Harness	
RADIO GROUND	Not in wiring harness	Ground to chassis strap	
ILLUMINATION (+)	ORANGE/BROWN	Radio Harness	
POWER ANTENNA (+)	ORANGE/RED	Radio Harness	
LEFT FRONT SPEAKER(+)	LIGHT GREEN/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	LIGHT GREEN/VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	LIGHT BLUE/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	LIGHT BLUE/VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BROWN/YELLOW	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BLUE/LIGHT BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	DARK BLUE/WHITE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	DARK BLUE/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3.5"	6x9"	In trunk under rear deck	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-6502, SCOSCHE CJ1282B	METRA 70-1817, SCOSCHE CR01	Not required



Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	PINK/BLACK	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	DARK BLUE	Ignition Harness
SECOND IGNITION	GREEN/RED	Ignition Harness
ACCESSORY	BLACK/ORANGE	Ignition Harness
SECOND ACCESSORY	BLACK/WHITE	Ignition Harness
POWER DOOR LOCK	WHITE/GREEN	Black Plug Behind Fuse Box Facing Down
<b>Notes:</b> One wire is used to lock and unlock the doors. Lock requires a positive (+) trigger thru a 620-ohm resistor. Unlock requires a positive (+) trigger thru a 2.7K-ohm resistor. Relays must be used.		
POWER DOOR UNLOCK	Same wire as lock	
PARKING LIGHTS (+)	BLACK/YELLOW	Plug Behind Fuse Box
DOOR TRIGGER (-)	YELLOW	Plug In Front Of Fuse Box
TRUNK TRIGGER (-)	TAN/BLACK	Driver's Kick Panel
TRUNK RELEASE (+)	BLACK/WHITE	Driver's Kick Panel
FACTORY ALARM ARM	GREEN/ORANGE	Black Plug Behind Fuse Box Facing Down
FACTORY ALARM DISARM	Same wire as arm	Black Plug Behind Fuse Box Facing Down
<b>Notes:</b> One wire is used to arm and disarm the factory security system. Test using the key in the driver's door. Arm requires a positive (+) trigger through a 940-ohm resistor. This will also lock all the doors. Disarm requires a positive (+) trigger through a 4		
TACHOMETER WIRE	BLACK/GRAY	Ignition Coil
<b>Notes:</b> When installing a remote start system, it is possible to use an injector wire as the tachometer wire. Use an injector wire that IS NOT DK.GREEN/ORANGE.		
BRAKE WIRE (+)	WHITE/TAN	Plug Behind Fuse Box
HORN TRIGGER (-)	BLACK/RED	Plug Behind Fuse Box
LEFT FRONT WINDOW UP	LT.BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GRAY/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### ADDITIONAL NOTES

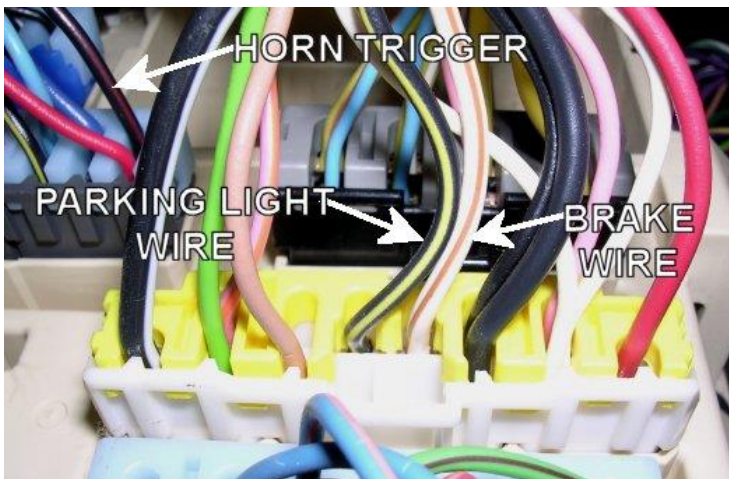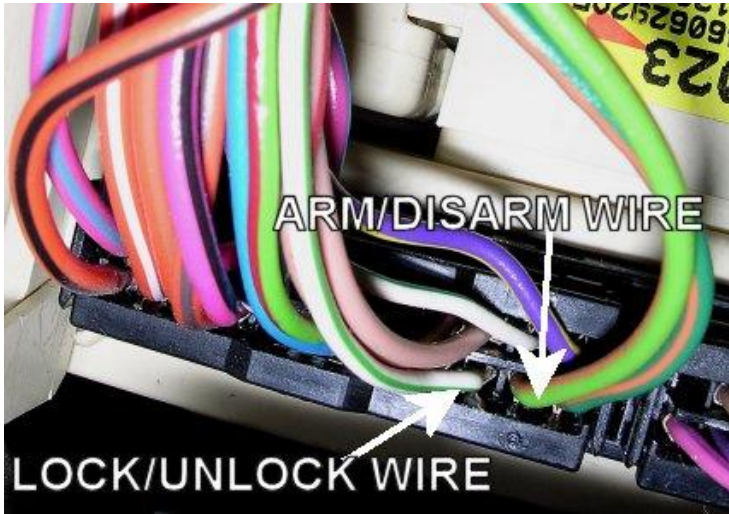

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	PINK/YELLOW	Radio Harness	
RADIO SWITCHED	RED/WHITE	Radio Harness	
RADIO GROUND	Not in wiring harness	Ground to chassis strap	
ILLUMINATION (+)	ORANGE/BROWN	Radio Harness	
POWER ANTENNA (+)	ORANGE/RED	Radio Harness	
LEFT FRONT SPEAKER(+)	LIGHT GREEN/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	LIGHT GREEN/VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	LIGHT BLUE/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	LIGHT BLUE/VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BROWN/YELLOW	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BLUE/LIGHT BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	DARK BLUE/WHITE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	DARK BLUE/ORANGE	Radio Harness or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3.5"	6x9"	In trunk under rear deck	
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-6502, SCOSCHE CJ1282B		METRA 70-1817, SCOSCHE CR01	Not required
Please verify all part numbers before ordering.			



### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	PINK/BLACK	Ignition Harness
STARTER	YELLOW	Ignition Harness
IGNITION	DARK BLUE	Ignition Harness
SECOND IGNITION	GREEN/RED	Ignition Harness
ACCESSORY	BLACK/ORANGE	Ignition Harness
SECOND ACCESSORY	BLACK/WHITE	Ignition Harness
POWER DOOR LOCK	WHITE/GREEN	Black Plug Behind Fuse Box Facing Down
<b>Notes:</b> One wire is used to lock and unlock the doors. Lock requires a positive (+) trigger thru a 620-ohm resistor. Unlock requires a positive (+) trigger thru a 2.7K-ohm resistor. Relays must be used.		
POWER DOOR UNLOCK	Same wire as lock	
PARKING LIGHTS (+)	BLACK/YELLOW	Plug Behind Fuse Box
DOOR TRIGGER (-)	YELLOW	Plug In Front Of Fuse Box
TRUNK TRIGGER (-)	TAN/BLACK	Driver's Kick Panel
TRUNK RELEASE (+)	BLACK/WHITE	Driver's Kick Panel
FACTORY ALARM ARM	GREEN/ORANGE	Black Plug Behind Fuse Box Facing Down
FACTORY ALARM DISARM	Same wire as arm	Black Plug Behind Fuse Box Facing Down
<b>Notes:</b> One wire is used to arm and disarm the factory security system. Test using the key in the driver's door. Arm requires a positive (+) trigger through a 940-ohm resistor. This will also lock all the doors. Disarm requires a positive (+) trigger through a 4		
TACHOMETER WIRE	BLACK/GRAY	Ignition Coil
<b>Notes:</b> When installing a remote start system, it is possible to use an injector wire as the tachometer wire. Use an injector wire that IS NOT DK.GREEN/ORANGE.		
BRAKE WIRE (+)	WHITE/TAN	Plug Behind Fuse Box
HORN TRIGGER (-)	BLACK/RED	Plug Behind Fuse Box
LEFT FRONT WINDOW UP	LT.BLUE	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	WHITE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BROWN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	PURPLE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	BLUE/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	GRAY/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
Sentry Key Immobilizer Bypass Module	DEI 556CW or DEI 556UW	Required when installing a remote start system.
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### ADDITIONAL NOTES

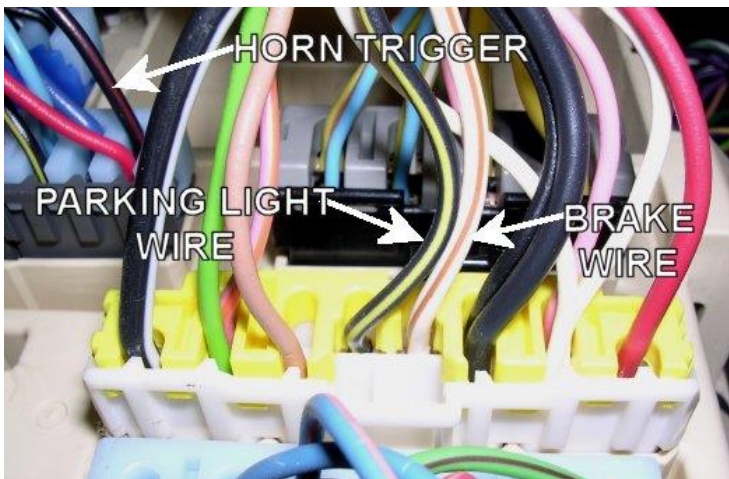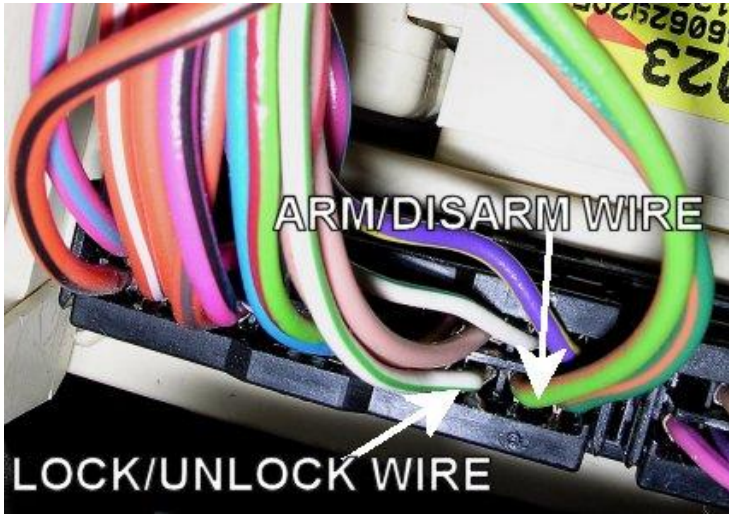

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO 12V	PINK/YELLOW	Radio Harness	
RADIO SWITCHED	RED/WHITE	Radio Harness	
RADIO GROUND	Not in wiring harness	Ground to chassis strap	
ILLUMINATION (+)	ORANGE/BROWN	Radio Harness	
POWER ANTENNA (+)	ORANGE/RED	Radio Harness	
LEFT FRONT SPEAKER(+)	LIGHT GREEN/GREEN	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	LIGHT GREEN/VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	LIGHT BLUE/GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	LIGHT BLUE/VIOLET	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BROWN/YELLOW	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	BLUE/LIGHT BLUE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	DARK BLUE/WHITE	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	DARK BLUE/ORANGE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5", 3.5"	6x9"	In trunk under rear deck	

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-6502, SCOSCHE CJ1282B	METRA 70-1817, SCOSCHE CR01	Not required

Please verify all part numbers before ordering.