

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE OR BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE 1	BLUE/RED	Ignition Harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	Harness In Drivers Kick Panel
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DK. GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LT. GREEN/BLACK	Harness At Steering Column
HEADLIGHTS (-)	RED/YELLOW	Harness At Steering Column
ALL DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER	TIED IN WITH DOORS	
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel And Also Found In Harness In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE AND GREEN	Harness In Driver's Kick Panel And Also Found In Harness In Passenger's Kick Panel
<b>Notes: **Both wires must be connected for unlock**</b>		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	5.25"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE OR BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE 1	BLUE/RED	Ignition Harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	Harness In Drivers Kick Panel
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DK. GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LT. GREEN/BLACK	Harness At Steering Column
HEADLIGHTS (-)	RED/YELLOW	Harness At Steering Column
ALL DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER	TIED IN WITH DOORS	
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel And Also Found In Harness In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE AND GREEN	Harness In Driver's Kick Panel And Also Found In Harness In Passenger's Kick Panel
<b>Notes: **Both wires must be connected for unlock**</b>		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	5.25"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE OR BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE 1	BLUE/RED	Ignition Harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	Harness In Drivers Kick Panel
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DK. GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LT. GREEN/BLACK	Harness At Steering Column
HEADLIGHTS (-)	RED/YELLOW	Harness At Steering Column
ALL DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER	TIED IN WITH DOORS	
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel And Also Found In Harness In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE AND GREEN	Harness In Driver's Kick Panel And Also Found In Harness In Passenger's Kick Panel
<b>Notes: **Both wires must be connected for unlock**</b>		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	5.25"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE OR BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE 1	BLUE/RED	Ignition Harness
TACHOMETER WIRE	BLACK	At Ignition Coil
BRAKE WIRE (+)	GREEN/WHITE	Harness In Drivers Kick Panel
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DK. GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LT. GREEN/BLACK	Harness At Steering Column
HEADLIGHTS (-)	RED/YELLOW	Harness At Steering Column
ALL DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER	TIED IN WITH DOORS	
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel And Also Found In Harness In Passenger's Kick Panel
POWER DOOR UNLOCK (-)	BLUE AND GREEN	Harness In Driver's Kick Panel And Also Found In Harness In Passenger's Kick Panel
<b>Notes: **Both wires must be connected for unlock**</b>		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	5.25"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLUE/RED	Ignition Harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
TACHOMETER WIRE	BLACK or WHITE/BLUE	Connector Behind Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER (-)	RED/GREEN	Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE and GREEN	Harness In Driver's Kick Panel
<b>Notes:</b> **Both must be connected for unlock**		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLUE/RED	Ignition Harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
TACHOMETER WIRE	BLACK or WHITE/BLUE	Connector Behind Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER (-)	RED/GREEN	Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE and GREEN	Harness In Driver's Kick Panel
<b>Notes: **Both must be connected for unlock**</b>		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
4"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLUE/RED	Ignition Harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
TACHOMETER WIRE	BLACK or WHITE/BLUE	Connector Behind Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER (-)	RED/GREEN	Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE and GREEN	Harness In Driver's Kick Panel
<b>Notes:</b> **Both must be connected for unlock**		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLUE/RED	Ignition Harness
IGNITION WIRE 2	BLACK/ORANGE	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
TACHOMETER WIRE	BLACK or WHITE/BLUE	Connector Behind Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel Or Brake Pedal Switch
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER (-)	RED/GREEN	Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE and GREEN	Harness In Driver's Kick Panel
<b>Notes:</b> **Both must be connected for unlock**		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BROWN/RED or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE or BLACK	Ignition Harness
IGNITION WIRE 2	BLUE/RED	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
TACHOMETER WIRE	BLACK or WHITE/BLUE	Connector Behind Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE and GREEN	Harness In Driver's Kick Panel
<b>Notes:</b> **Both must be connected for unlock**		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BROWN/RED or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE or BLACK	Ignition Harness
IGNITION WIRE 2	BLUE/RED	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
TACHOMETER WIRE	BLACK or WHITE/BLUE	Connector Behind Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE and GREEN	Harness In Driver's Kick Panel
<b>Notes:</b> **Both must be connected for unlock**		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BROWN/RED or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE or BLACK	Ignition Harness
IGNITION WIRE 2	BLUE/RED	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
TACHOMETER WIRE	BLACK or WHITE/BLUE	Connector Behind Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE and GREEN	Harness In Driver's Kick Panel
<b>Notes:</b> **Both must be connected for unlock**		
LEFT FRONT WINDOW UP	GREEN	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	GREEN/WHITE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BROWN/RED or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE or BLACK	Ignition Harness
IGNITION WIRE 2	BLUE/RED	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
TACHOMETER WIRE	BLACK or WHITE/BLUE	Connector Behind Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE and GREEN	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/WHITE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	GREEN	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED	At Right Rear Window Switch
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BROWN/RED or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE or BLACK	Ignition Harness
IGNITION WIRE 2	BLUE/RED	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
TACHOMETER WIRE	BLACK or WHITE/BLUE	Connector Behind Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE and GREEN	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/WHITE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	GREEN	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED	At Right Rear Window Switch
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BROWN/RED or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE or BLACK	Ignition Harness
IGNITION WIRE 2	BLUE/RED	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
TACHOMETER WIRE	BLACK or WHITE/BLUE	Connector Behind Driver's Shock Tower
BRAKE WIRE (+)	GREEN/WHITE	Harness In Driver's Kick Panel
HORN TRIGGER (-)	GREEN	Harness At Steering Column
PARKING LIGHTS (+)	DARK GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (-)	LIGHT GREEN	Harness At Steering Column
DOOR TRIGGER (-)	RED/WHITE	Harness At Fuse Box
TRUNK TRIGGER (-)	RED/GREEN	At Light In Trunk
POWER DOOR LOCK (-)	BLUE/BLACK	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (-)	BLUE and GREEN	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/WHITE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	GREEN	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED	At Right Rear Window Switch
INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8101, SCOSCHE TA2154B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required





Please verify all part numbers before ordering.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE	Ignition Harness
<b>Notes:</b> When doing remote start system, the BLACK/ORANGE 12V Ignition wire must be isolated from the ignition switch using a relay.		
IGNITION WIRE 2	BLUE/RED (Thicker)	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	YELLOW (key-sense wire)	Ignition Harness
TACHOMETER WIRE	BROWN/WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/BLACK	In Lower White Connector At Red Module In Dash Below Heater Controls
PARKING LIGHTS	LT.GREEN	In Harness From Steering Wheel And In Lower White Connector At Red Module In Dash Below Heater Controls
DRIVER DOOR TRIGGER (-)	RED/YELLOW	In Lower White Connector At Red Module In Dash Below Heater Controls
PASSENGER DOOR TRIGGER (-)	RED	In Lower White Connector At Red Module In Dash Below Heater Controls
TRUNK TRIGGER (-)	LT.GREEN	In Lower White Connector At Red Module In Dash Below Heater Controls
POWER DOOR LOCK (-)	BROWN	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	YELLOW/BLACK	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### ADDITIONAL NOTES

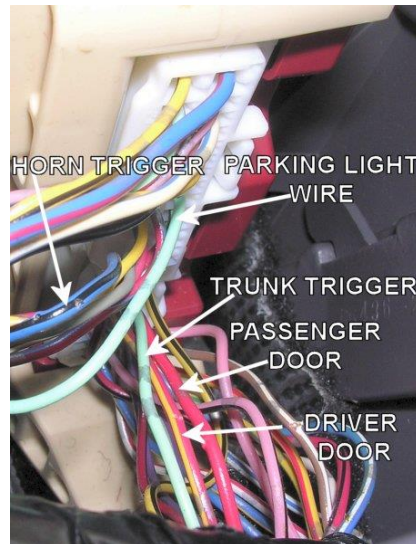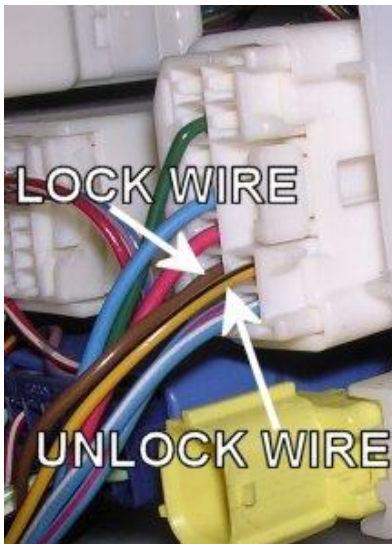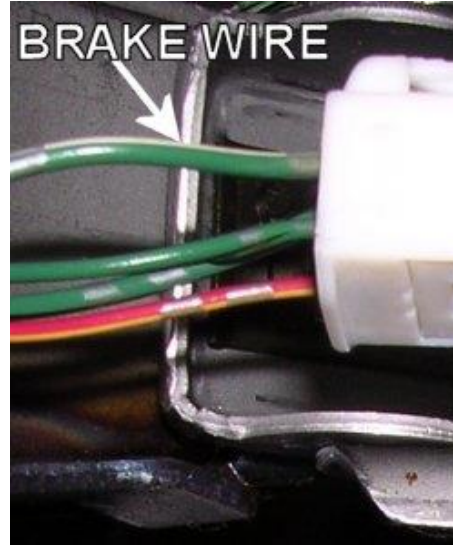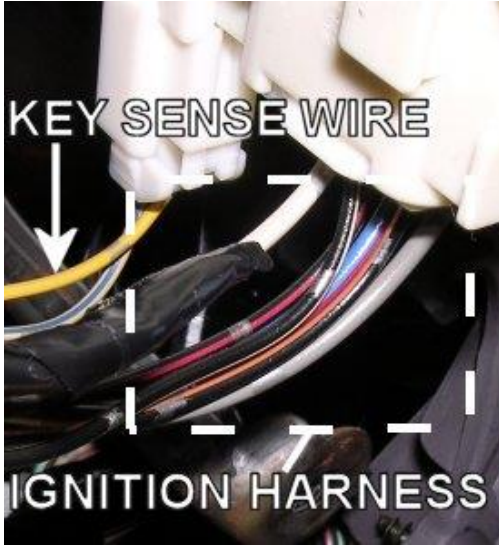

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8202, SCOSCHE TA2045B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### RADIO REMOVAL

**NOTE:** Factory provision is for an ISO mount double din. When installing an aftermarket stereo a kit will need to be used. If the vehicle is equipped with a factory amplifier, it should be found high in the passenger kick panel, to the right of the glove box.

- 1 Carefully unscrew and remove shift knob. Remove ashtray.
- 2 Carefully unsnap and remove ashtray and shifter bezel.
- 3 Remove 2 Phillips head screws from bottom of heater A/C panel.
- 4 Carefully pull off temperature control knobs and remove screw behind each knob. Remove air circulation slider knob.
- 5 Unsnap radio bezel and carefully remove.
- 6 Remove 4 10mm bolts to remove radio. Unplug and remove.

### FRONT SPEAKER REMOVAL

**NOTE:** Factory provision is for a 6.5" speaker with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 plastic screw covers and remove screws.
- 2 Remove 2 screws from bottom of door panel.
- 3 Carefully remove plastic screw cover from inside of door handle opener and remove screw.
- 4 Carefully remove cables from door handle and lock.
- 5 Unsnap panel fasteners around perimeter of door panel, lift away, unplug harnesses and remove.

### REAR SPEAKER REMOVAL

**NOTE:** Factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.





- 1 Unsnap fasteners from bottom of trunk tray and remove.
- 2 Fold down rear seat and remove 4 10mm bolts on the sides of the seat. Fold seat up and remove 2 12mm bolts from the center back portion of the seat. Lift away portion of rear seat and remove.
- 3 Unsnap front edge of bottom section of rear seat and remove.
- 4 Remove 2 screws from rear seat panel.
- 5 Unsnap doorsill panel and remove.
- 6 Carefully unsnap bezel, pull forward, lift away, and remove.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE	Ignition Harness
<b>Notes:</b> When doing remote start system, the BLACK/ORANGE 12V Ignition wire must be isolated from the ignition switch using a relay.		
IGNITION WIRE 2	BLUE/RED (Thicker)	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	YELLOW (key-sense wire)	Ignition Harness
TACHOMETER WIRE	BROWN/WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/BLACK	In Lower White Connector At Red Module In Dash Below Heater Controls
PARKING LIGHTS	LT.GREEN	In Harness From Steering Wheel And In Lower White Connector At Red Module In Dash Below Heater Controls
DRIVER DOOR TRIGGER (-)	RED/YELLOW	In Lower White Connector At Red Module In Dash Below Heater Controls
PASSENGER DOOR TRIGGER (-)	RED	In Lower White Connector At Red Module In Dash Below Heater Controls
TRUNK TRIGGER (-)	LT.GREEN	In Lower White Connector At Red Module In Dash Below Heater Controls
POWER DOOR LOCK (-)	BROWN	In White Connector In Passenger Kick Panel
POWER DOOR UNLOCK (-)	YELLOW/BLACK	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### ADDITIONAL NOTES

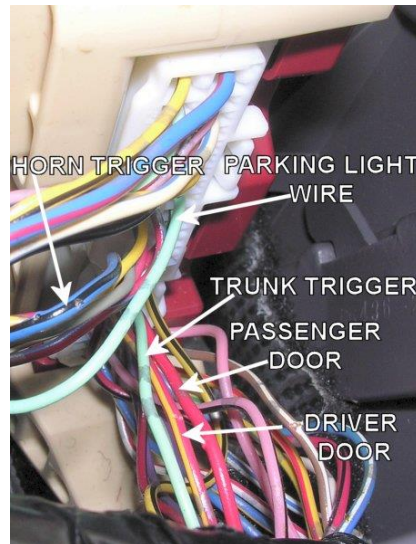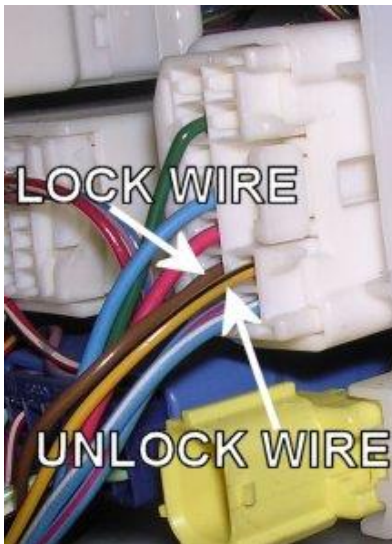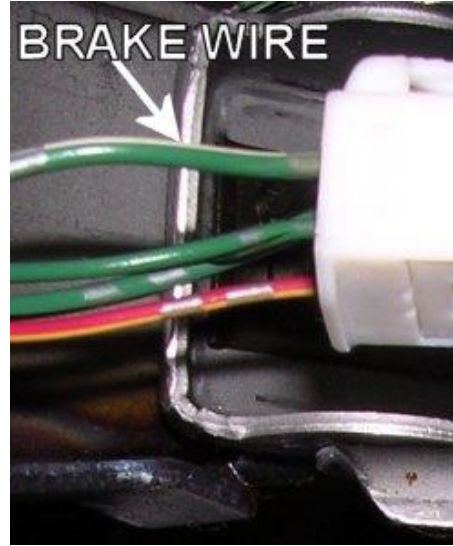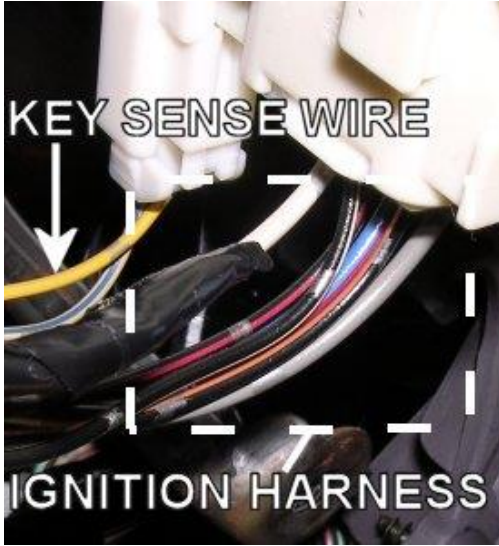

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8202, SCOSCHE TA2045B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### RADIO REMOVAL

**NOTE:** Factory provision is for an ISO mount double din. When installing an aftermarket stereo a kit will need to be used. If the vehicle is equipped with a factory amplifier, it should be found high in the passenger kick panel, to the right of the glove box.

- 1 Carefully unscrew and remove shift knob. Remove ashtray.
- 2 Carefully unsnap and remove ashtray and shifter bezel.
- 3 Remove 2 Phillips head screws from bottom of heater A/C panel.
- 4 Carefully pull off temperature control knobs and remove screw behind each knob. Remove air circulation slider knob.
- 5 Unsnap radio bezel and carefully remove.
- 6 Remove 4 10mm bolts to remove radio. Unplug and remove.

### FRONT SPEAKER REMOVAL

**NOTE:** Factory provision is for a 6.5" speaker with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 plastic screw covers and remove screws.
- 2 Remove 2 screws from bottom of door panel.
- 3 Carefully remove plastic screw cover from inside of door handle opener and remove screw.
- 4 Carefully remove cables from door handle and lock.
- 5 Unsnap panel fasteners around perimeter of door panel, lift away, unplug harnesses and remove.

### REAR SPEAKER REMOVAL

**NOTE:** Factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.




- 1 Unsnap fasteners from bottom of trunk tray and remove.
- 2 Fold down rear seat and remove 4 10mm bolts on the sides of the seat. Fold seat up and remove 2 12mm bolts from the center back portion of the seat. Lift away portion of rear seat and remove.
- 3 Unsnap front edge of bottom section of rear seat and remove.
- 4 Remove 2 screws from rear seat panel.
- 5 Unsnap doorsill panel and remove.
- 6 Carefully unsnap bezel, pull forward, lift away, and remove.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE	Ignition Harness
<b>Notes:</b> When doing remote start system, the BLACK/ORANGE 12V Ignition wire must be isolated from the ignition switch using a relay.		
IGNITION WIRE 2	BLUE/RED (Thicker)	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	YELLOW (key-sense wire)	Ignition Harness
TACHOMETER WIRE	BROWN/WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/BLACK	In Lower White Connector At Red Module In Dash Below Heater Controls
PARKING LIGHTS	LT.GREEN	In Harness From Steering Wheel And In Lower White Connector At Red Module In Dash Below Heater Controls
DRIVER DOOR TRIGGER (-)	RED/YELLOW	In Lower White Connector At Red Module In Dash Below Heater Controls
PASSENGER DOOR TRIGGER (-)	RED	In Lower White Connector At Red Module In Dash Below Heater Controls
TRUNK TRIGGER (-)	LT.GREEN	In Lower White Connector At Red Module In Dash Below Heater Controls
POWER DOOR LOCK (-)	BROWN	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	YELLOW/BLACK	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### ADDITIONAL NOTES

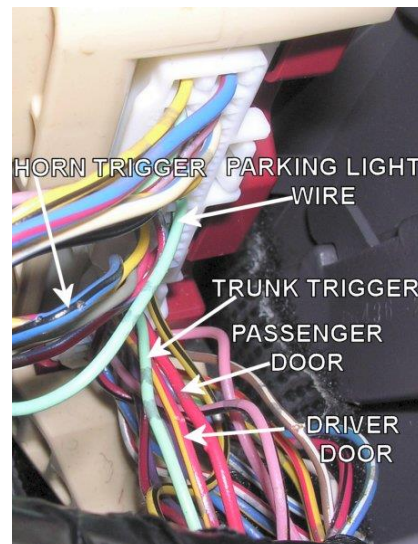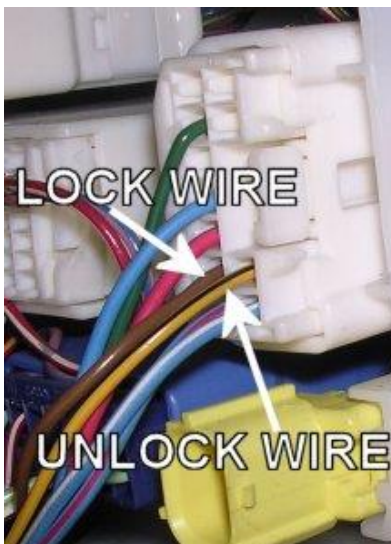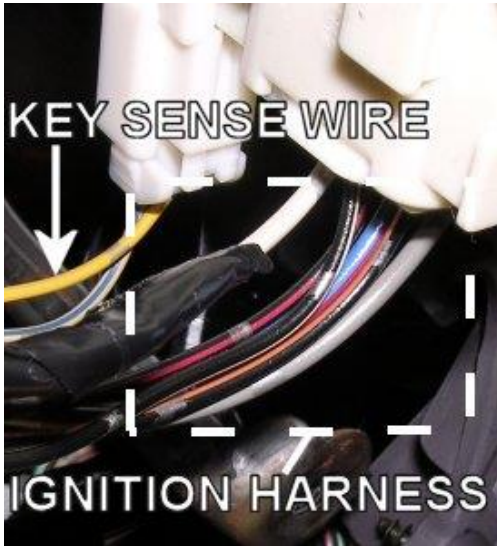

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8202, SCOSCHE TA2045B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### RADIO REMOVAL

**NOTE:** Factory provision is for an ISO mount double din. When installing an aftermarket stereo a kit will need to be used. If the vehicle is equipped with a factory amplifier, it should be found high in the passenger kick panel, to the right of the glove box.

- 1 Carefully unscrew and remove shift knob. Remove ashtray.
- 2 Carefully unsnap and remove ashtray and shifter bezel.
- 3 Remove 2 Phillips head screws from bottom of heater A/C panel.
- 4 Carefully pull off temperature control knobs and remove screw behind each knob. Remove air circulation slider knob.
- 5 Unsnap radio bezel and carefully remove.
- 6 Remove 4 10mm bolts to remove radio. Unplug and remove.

### FRONT SPEAKER REMOVAL

**NOTE:** Factory provision is for a 6.5" speaker with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 plastic screw covers and remove screws.
- 2 Remove 2 screws from bottom of door panel.
- 3 Carefully remove plastic screw cover from inside of door handle opener and remove screw.
- 4 Carefully remove cables from door handle and lock.
- 5 Unsnap panel fasteners around perimeter of door panel, lift away, unplug harnesses and remove.

### REAR SPEAKER REMOVAL

**NOTE:** Factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.





- 1 Unsnap fasteners from bottom of trunk tray and remove.
- 2 Fold down rear seat and remove 4 10mm bolts on the sides of the seat. Fold seat up and remove 2 12mm bolts from the center back portion of the seat. Lift away portion of rear seat and remove.
- 3 Unsnap front edge of bottom section of rear seat and remove.
- 4 Remove 2 screws from rear seat panel.
- 5 Unsnap doorsill panel and remove.
- 6 Carefully unsnap bezel, pull forward, lift away, and remove.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE	Ignition Harness
<b>Notes:</b> When doing remote start system, the BLACK/ORANGE 12V Ignition wire must be isolated from the ignition switch using a relay.		
IGNITION WIRE 2	BLUE/RED (Thicker)	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	YELLOW (key-sense wire)	Ignition Harness
TACHOMETER WIRE	BROWN/WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/BLACK	In Lower White Connector At Red Module In Dash Below Heater Controls
PARKING LIGHTS	LT.GREEN	In Harness From Steering Wheel And In Lower White Connector At Red Module In Dash Below Heater Controls
DRIVER DOOR TRIGGER (-)	RED/YELLOW	In Lower White Connector At Red Module In Dash Below Heater Controls
PASSENGER DOOR TRIGGER (-)	RED	In Lower White Connector At Red Module In Dash Below Heater Controls
TRUNK TRIGGER (-)	LT.GREEN	In Lower White Connector At Red Module In Dash Below Heater Controls
POWER DOOR LOCK (-)	BROWN	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	YELLOW/BLACK	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### ADDITIONAL NOTES

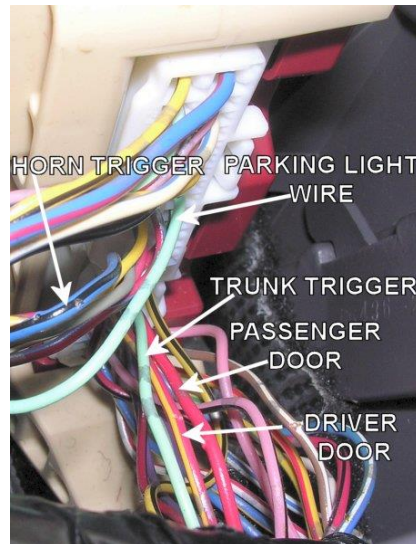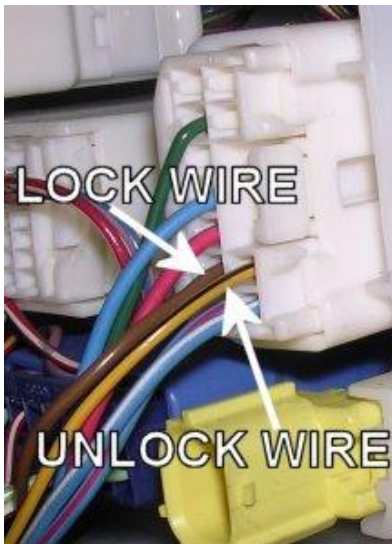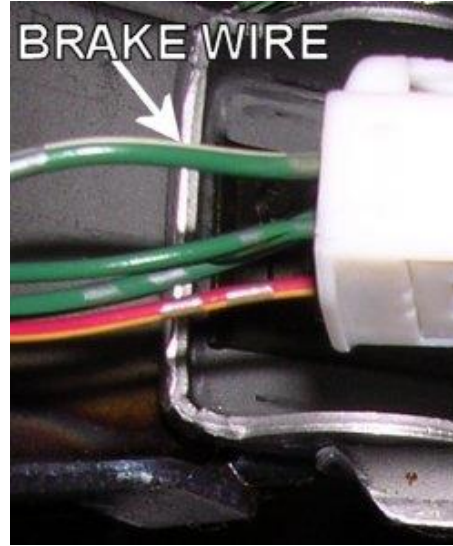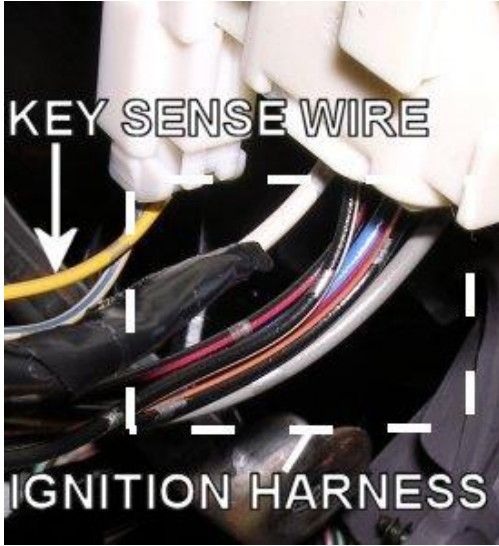

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8202, SCOSCHE TA2045B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### RADIO REMOVAL

**NOTE:** Factory provision is for an ISO mount double din. When installing an aftermarket stereo a kit will need to be used. If the vehicle is equipped with a factory amplifier, it should be found high in the passenger kick panel, to the right of the glove box.

- 1 Carefully unscrew and remove shift knob. Remove ashtray.
- 2 Carefully unsnap and remove ashtray and shifter bezel.
- 3 Remove 2 Phillips head screws from bottom of heater A/C panel.
- 4 Carefully pull off temperature control knobs and remove screw behind each knob. Remove air circulation slider knob.
- 5 Unsnap radio bezel and carefully remove.
- 6 Remove 4 10mm bolts to remove radio. Unplug and remove.

### FRONT SPEAKER REMOVAL

**NOTE:** Factory provision is for a 6.5" speaker with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 plastic screw covers and remove screws.
- 2 Remove 2 screws from bottom of door panel.
- 3 Carefully remove plastic screw cover from inside of door handle opener and remove screw.
- 4 Carefully remove cables from door handle and lock.
- 5 Unsnap panel fasteners around perimeter of door panel, lift away, unplug harnesses and remove.

### REAR SPEAKER REMOVAL

**NOTE:** Factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.





- 1 Unsnap fasteners from bottom of trunk tray and remove.
- 2 Fold down rear seat and remove 4 10mm bolts on the sides of the seat. Fold seat up and remove 2 12mm bolts from the center back portion of the seat. Lift away portion of rear seat and remove.
- 3 Unsnap front edge of bottom section of rear seat and remove.
- 4 Remove 2 screws from rear seat panel.
- 5 Unsnap doorsill panel and remove.
- 6 Carefully unsnap bezel, pull forward, lift away, and remove.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE	Ignition Harness
<b>Notes:</b> When doing remote start system, the BLACK/ORANGE 12V Ignition wire must be isolated from the ignition switch using a relay.		
IGNITION WIRE 2	BLUE/RED (Thicker)	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	YELLOW (key-sense wire)	Ignition Harness
TACHOMETER WIRE	BROWN/WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/BLACK	In Lower White Connector At Red Module In Dash Below Heater Controls
PARKING LIGHTS	LT.GREEN	In Harness From Steering Wheel And In Lower White Connector At Red Module In Dash Below Heater Controls
DRIVER DOOR TRIGGER (-)	RED/YELLOW	In Lower White Connector At Red Module In Dash Below Heater Controls
PASSENGER DOOR TRIGGER (-)	RED	In Lower White Connector At Red Module In Dash Below Heater Controls
TRUNK TRIGGER (-)	LT.GREEN	In Lower White Connector At Red Module In Dash Below Heater Controls
POWER DOOR LOCK (-)	BROWN	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	YELLOW/BLACK	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### ADDITIONAL NOTES

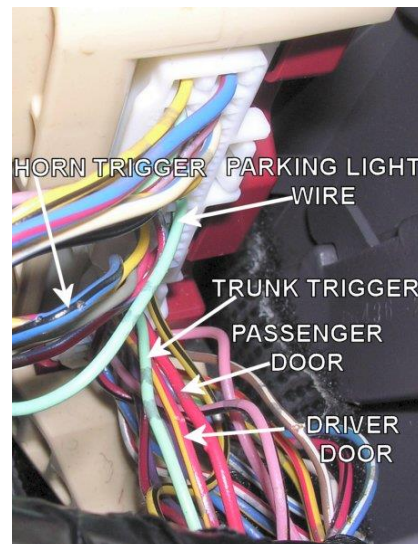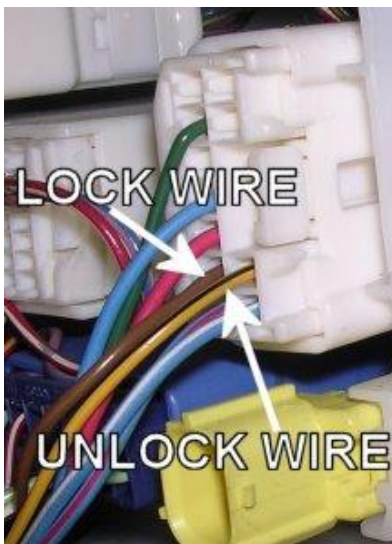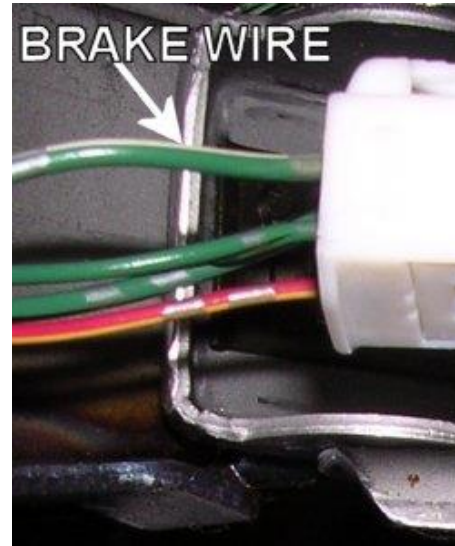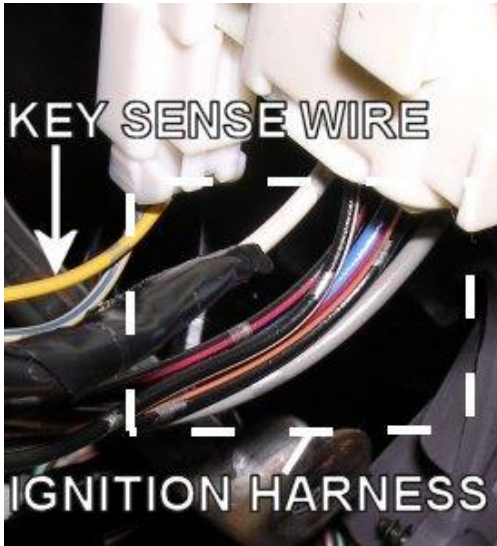

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8202, SCOSCHE TA2045B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### RADIO REMOVAL

**NOTE:** Factory provision is for an ISO mount double din. When installing an aftermarket stereo a kit will need to be used. If the vehicle is equipped with a factory amplifier, it should be found high in the passenger kick panel, to the right of the glove box.

- 1 Carefully unscrew and remove shift knob. Remove ashtray.
- 2 Carefully unsnap and remove ashtray and shifter bezel.
- 3 Remove 2 Phillips head screws from bottom of heater A/C panel.
- 4 Carefully pull off temperature control knobs and remove screw behind each knob. Remove air circulation slider knob.
- 5 Unsnap radio bezel and carefully remove.
- 6 Remove 4 10mm bolts to remove radio. Unplug and remove.

### FRONT SPEAKER REMOVAL

**NOTE:** Factory provision is for a 6.5" speaker with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 plastic screw covers and remove screws.
- 2 Remove 2 screws from bottom of door panel.
- 3 Carefully remove plastic screw cover from inside of door handle opener and remove screw.
- 4 Carefully remove cables from door handle and lock.
- 5 Unsnap panel fasteners around perimeter of door panel, lift away, unplug harnesses and remove.

### REAR SPEAKER REMOVAL

**NOTE:** Factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.




- 1 Unsnap fasteners from bottom of trunk tray and remove.
- 2 Fold down rear seat and remove 4 10mm bolts on the sides of the seat. Fold seat up and remove 2 12mm bolts from the center back portion of the seat. Lift away portion of rear seat and remove.
- 3 Unsnap front edge of bottom section of rear seat and remove.
- 4 Remove 2 screws from rear seat panel.
- 5 Unsnap doorsill panel and remove.
- 6 Carefully unsnap bezel, pull forward, lift away, and remove.

### ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT WIRE	WHITE or BLACK/RED	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/ORANGE	Ignition Harness
<b>Notes:</b> When doing remote start system, the BLACK/ORANGE 12V Ignition wire must be isolated from the ignition switch using a relay.		
IGNITION WIRE 2	BLUE/RED (Thicker)	Ignition Harness
ACCESSORY WIRE 1	GRAY	Ignition Harness
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM	Disarms with unlock	
FACTORY DISARM NO UNLOCK (-)	YELLOW (key-sense wire)	Ignition Harness
TACHOMETER WIRE	BROWN/WHITE	Behind Instrument Cluster
BRAKE WIRE (+)	GREEN/WHITE	Harness At Brake Pedal Switch
HORN TRIGGER (-)	BLUE/BLACK	In Lower White Connector At Red Module In Dash Below Heater Controls
PARKING LIGHTS	LT.GREEN	In Harness From Steering Wheel And In Lower White Connector At Red Module In Dash Below Heater Controls
DRIVER DOOR TRIGGER (-)	RED/YELLOW	In Lower White Connector At Red Module In Dash Below Heater Controls
PASSENGER DOOR TRIGGER (-)	RED	In Lower White Connector At Red Module In Dash Below Heater Controls
TRUNK TRIGGER (-)	LT.GREEN	In Lower White Connector At Red Module In Dash Below Heater Controls
POWER DOOR LOCK (-)	BROWN	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
POWER DOOR UNLOCK (-)	YELLOW/BLACK	In White Connector In Passenger Kick Panel
<b>Notes:</b> Test door lock wires by using the key in the passenger door.		
LEFT FRONT WINDOW UP	RED	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	GREEN	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	GREEN/WHITE	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	N/A	N/A
Please verify all part numbers before ordering.		

### ADDITIONAL NOTES

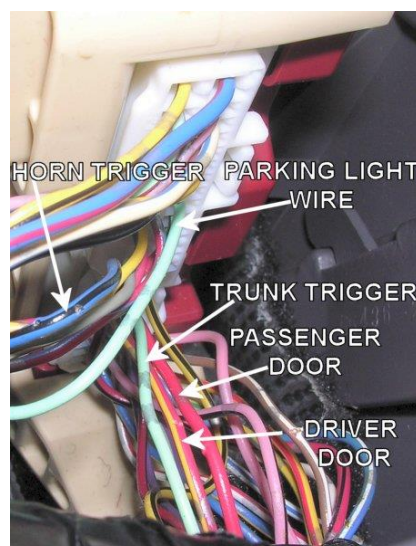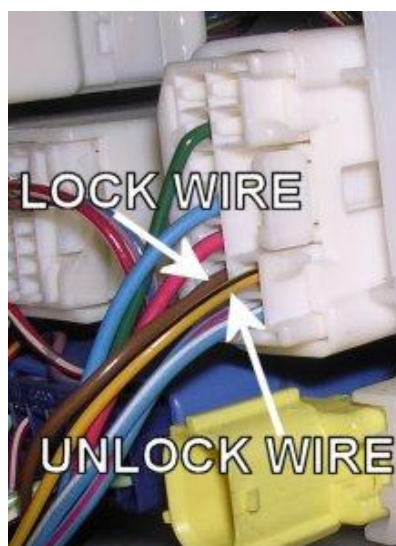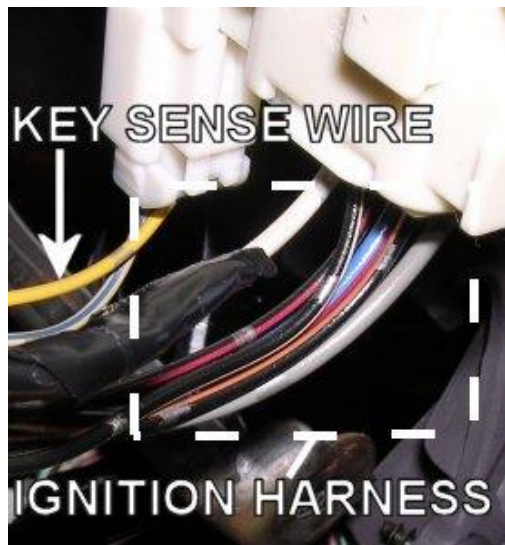

### AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO 12V	BLUE/YELLOW	Radio	
12V SWITCHED	GRAY	Radio	
RADIO GROUND	BROWN	Radio	
ILLUMINATION (+)	GREEN	Radio	
LEFT FRONT SPEAKER (+)	PINK	Radio Harness or Speaker	
LEFT FRONT SPEAKER (-)	VIOLET	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (+)	GREEN	Radio Harness or Speaker	
RIGHT FRONT SPEAKER (-)	BLUE	Radio Harness or Speaker	
LEFT REAR SPEAKER (+)	BLACK	Radio Harness or Speaker	
LEFT REAR SPEAKER (-)	YELLOW	Radio Harness or Speaker	
RIGHT REAR SPEAKER (+)	RED	Radio Harness or Speaker	
RIGHT REAR SPEAKER (-)	WHITE	Radio Harness or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-8202, SCOSCHE TA2045B	METRA 70-1761, SCOSCHE TA02B/BCB	Not required

Please verify all part numbers before ordering.

### RADIO REMOVAL

**NOTE:** Factory provision is for an ISO mount double din. When installing an aftermarket stereo a kit will need to be used. If the vehicle is equipped with a factory amplifier, it should be found high in the passenger kick panel, to the right of the glove box.

- 1 Carefully unscrew and remove shift knob. Remove ashtray.
- 2 Carefully unsnap and remove ashtray and shifter bezel.
- 3 Remove 2 Phillips head screws from bottom of heater A/C panel.
- 4 Carefully pull off temperature control knobs and remove screw behind each knob. Remove air circulation slider knob.
- 5 Unsnap radio bezel and carefully remove.
- 6 Remove 4 10mm bolts to remove radio. Unplug and remove.

### FRONT SPEAKER REMOVAL

**NOTE:** Factory provision is for a 6.5" speaker with a 1.5" tweeter. When installing an aftermarket speaker an adapter may need to be used.

- 1 Remove 2 plastic screw covers and remove screws.
- 2 Remove 2 screws from bottom of door panel.
- 3 Carefully remove plastic screw cover from inside of door handle opener and remove screw.
- 4 Carefully remove cables from door handle and lock.
- 5 Unsnap panel fasteners around perimeter of door panel, lift away, unplug harnesses and remove.

### REAR SPEAKER REMOVAL

**NOTE:** Factory speaker is a 6.5" speaker. When installing an aftermarket speaker an adapter may need to be used.

- 1 Unsnap fasteners from bottom of trunk tray and remove.
- 2 Fold down rear seat and remove 4 10mm bolts on the sides of the seat. Fold seat up and remove 2 12mm bolts from the center back portion of the seat. Lift away portion of rear seat and remove.
- 3 Unsnap front edge of bottom section of rear seat and remove.
- 4 Remove 2 screws from rear seat panel.
- 5 Unsnap doorsill panel and remove.
- 6 Carefully unsnap bezel, pull forward, lift away, and remove.